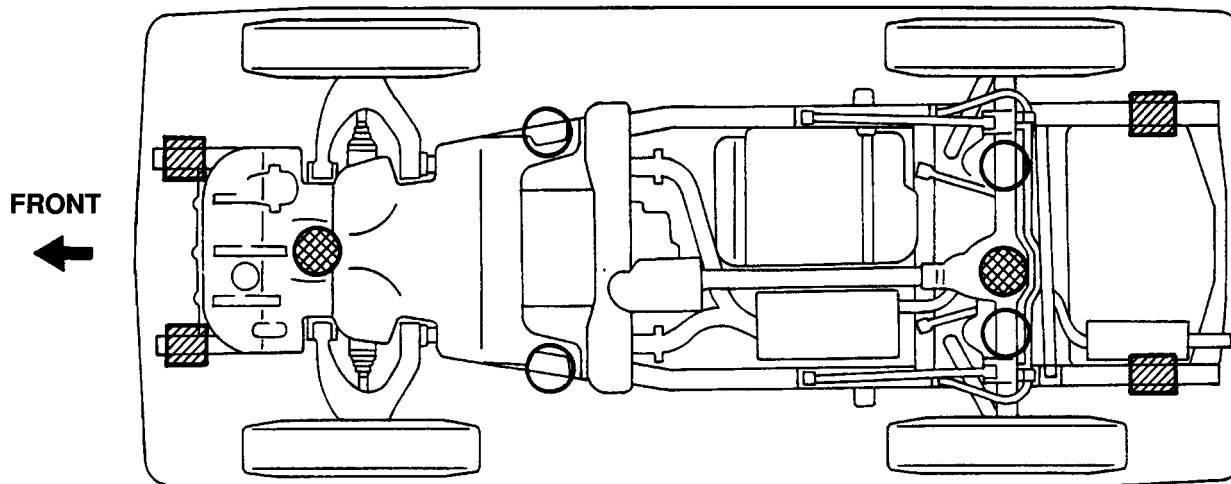


VEHICLE LIFT AND SUPPORT LOCATIONS**JACK POSITION**

Front Engine under cover


Rear Rear differential carrier

CAUTION : When jacking-up the front and rear, make sure the car is not carrying any extra weight.


SCREW TYPE JACK POSITION**SUPPORT POSITION**

Safety stand

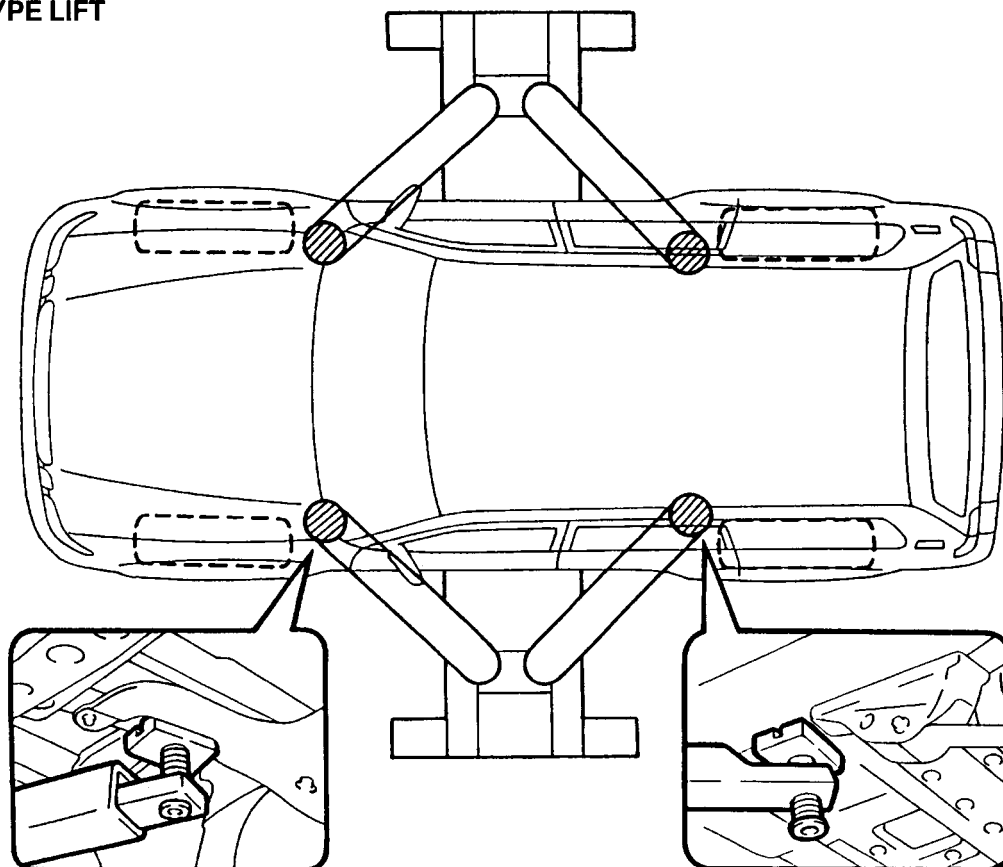

SWING ARM TYPE LIFT**FRONT** ←

NOTICE: When lifting the vehicle, place the supports correctly at the positions shown above.

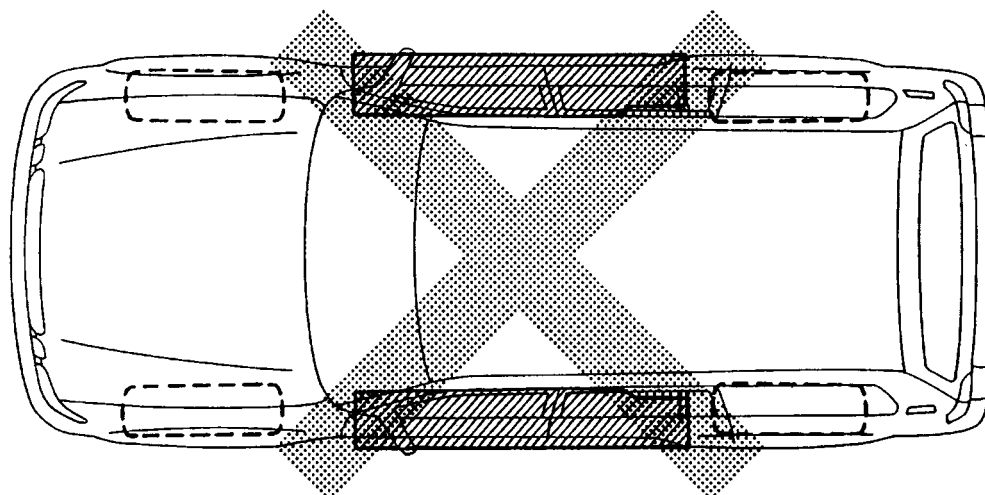PLATE TYPE LIFT (DO NOT USE.)**FRONT** ←

NOTICE: Never use the plate type lift—using it to lift up the vehicle will cause the body shape to warp.