


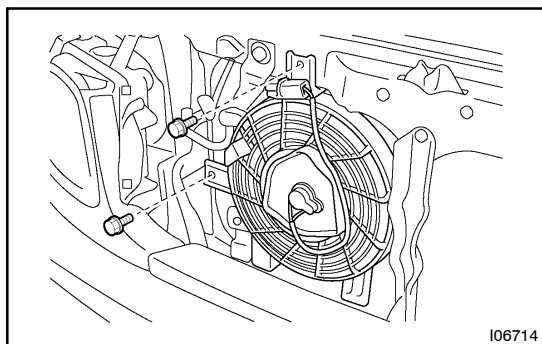

REMOVAL

REMOVE CONDENSER FAN

- (a) Disconnect the connector.
- (b) Remove the 2 bolts and condenser fan.