



REAR HEATER RELAY INSPECTION

AC1LW-03


1. REMOVE FRONT DOOR SCUFF PLATE LH
2. REMOVE COWL SIDE TRIM LH

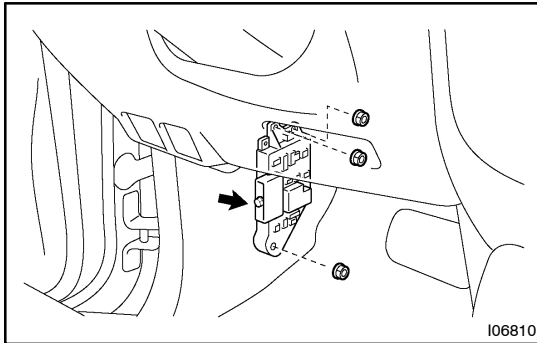

- ### 3. REMOVE REAR HEATER RELAY
- (a) Remove the 3 No.2 junction block set nuts.
 - (b) Loosen the bolt and disconnect the connector.
 - (c) Pull out the junction block.

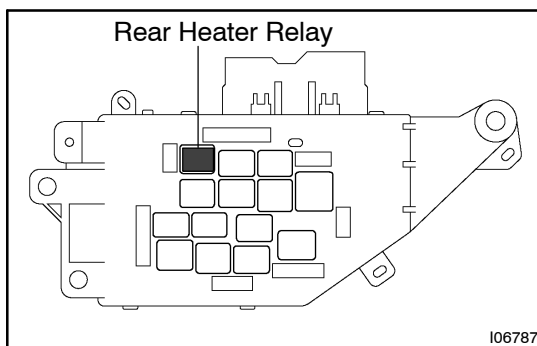

- (d) Remove the rear heater relay

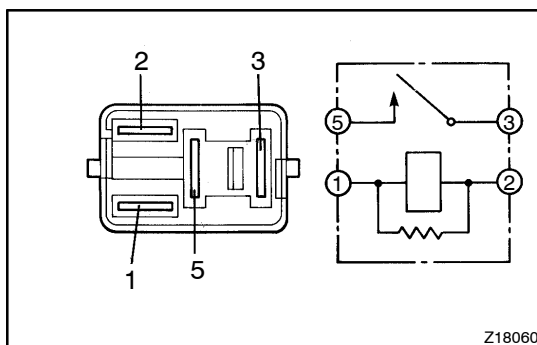

- #### 4. INSPECT REAR HEATER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.

5. **INSTALL RELAY**
6. **INSTALL 3 NO.2 JUNCTION BLOCK SET NUTS**
7. **INSTALL COWL SIDE TRIM LH**
8. **INSTALL FRONT DOOR SCUFF PLATE LH**