


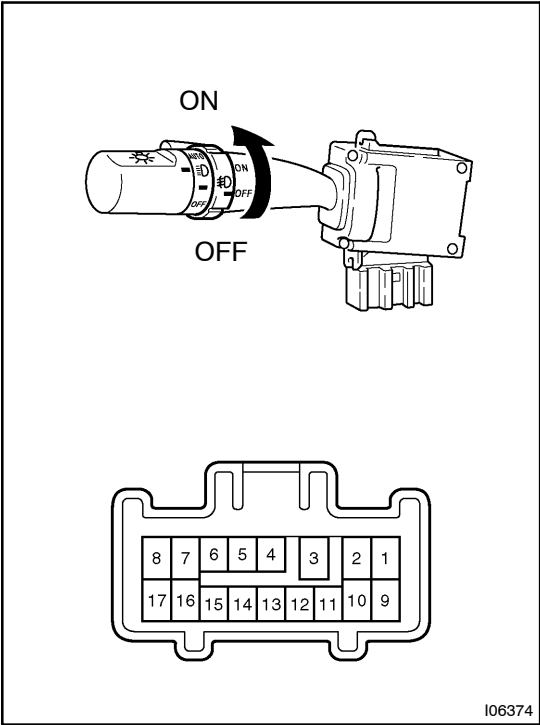


INSPECTION

1. INSPECT FOG LIGHT SWITCH CONTINUITY

| Switch position | Tester connection | Specified condition |
|-----------------|-------------------|---------------------|
| OFF             | -                 | No continuity       |
| ON              | 10 - 11           | Continuity          |

If continuity is not as specified, replace the switch.

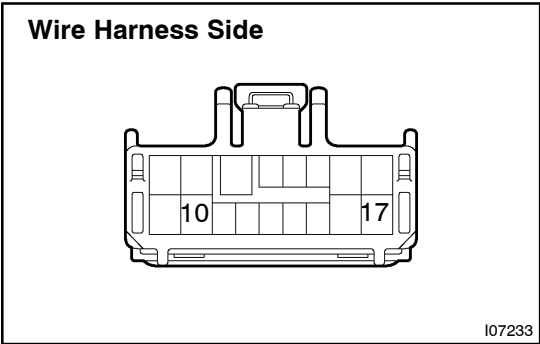


2. INSPECT FOG LIGHT SWITCH CIRCUIT

Connector disconnected:

Disconnect the connector from the switch and inspect the connector on the wire harness side, as shown.

| Tester connection | Condition | Specified condition |
|-------------------|-----------|---------------------|
| 10 - 17           | Constant  | Continuity          |

If circuit is not as specified, inspect the wire harness.

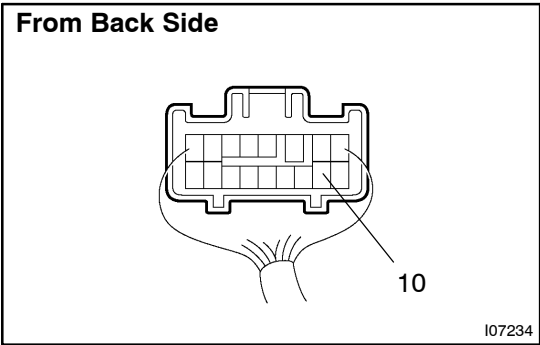

3. INSPECT FOG LIGHT SWITCH CIRCUIT


Connector connected:

Connect the wire harness side connector to the light control and dimmer switch and inspect the connector from the back side, as shown.

## BODY ELECTRICAL – FOG LIGHT SYSTEM

| Tester connection | Condition                                                                                 | Specified condition      |
|-------------------|-------------------------------------------------------------------------------------------|--------------------------|
| 10 – Ground       | Light control switch HEAD and headlight dimmer switch LO and fog light switch ON          | No voltage               |
| 10 – Ground       | Light control switch HEAD and headlight dimmer switch HI or FLASH and fog light switch ON | Battery positive voltage |

If circuit is not as specified, inspect the wire harness.

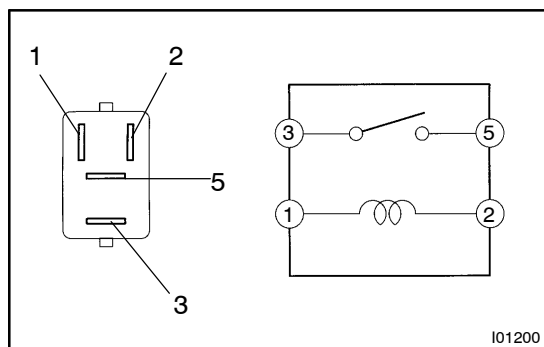**4. INSPECT FOG LIGHT RELAY CONTINUITY**

| Condition                           | Tester connection | Specified condition |
|-------------------------------------|-------------------|---------------------|
| Constant                            | 1 – 2             | Continuity          |
| Apply B+ between terminals 1 and 2. | 3 – 5             | Continuity          |

If continuity is not as specified, replace the relay.

**5. INSPECT FOG LIGHT RELAY CIRCUIT(See page [BE-17](#))**