



# POWER SOURCE LOCATION

BE0SI-03

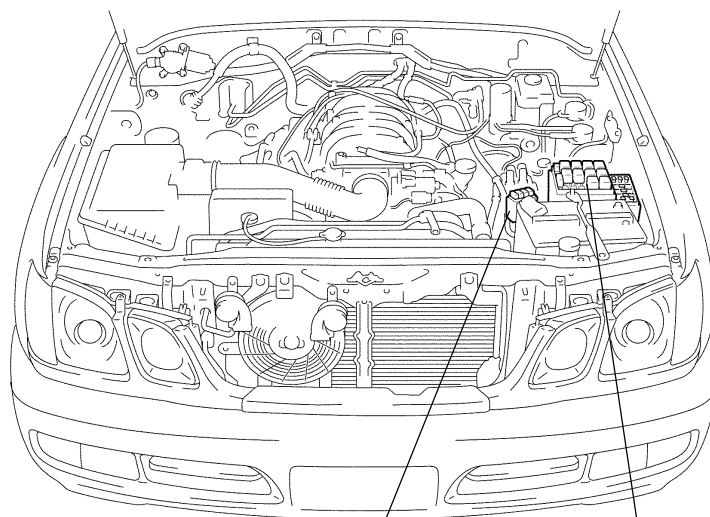

Engine Room Junction Block

Fusible Link Block

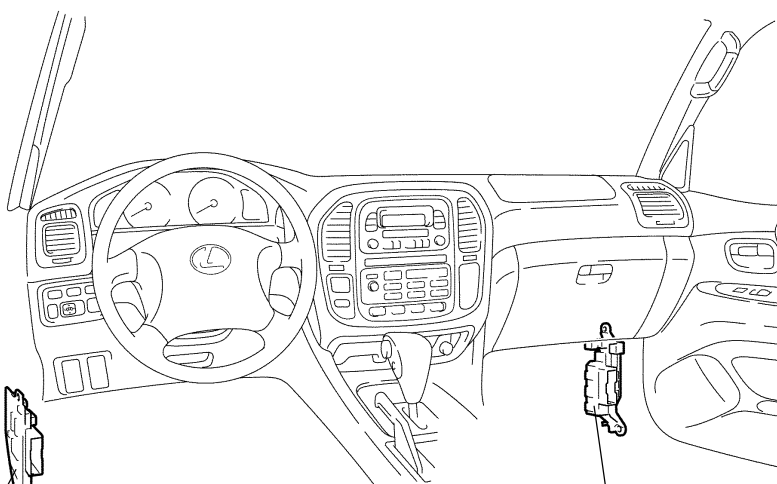


Driver Side Junction Block

Passenger Side Junction Block

107473

## Engine Room Junction Block

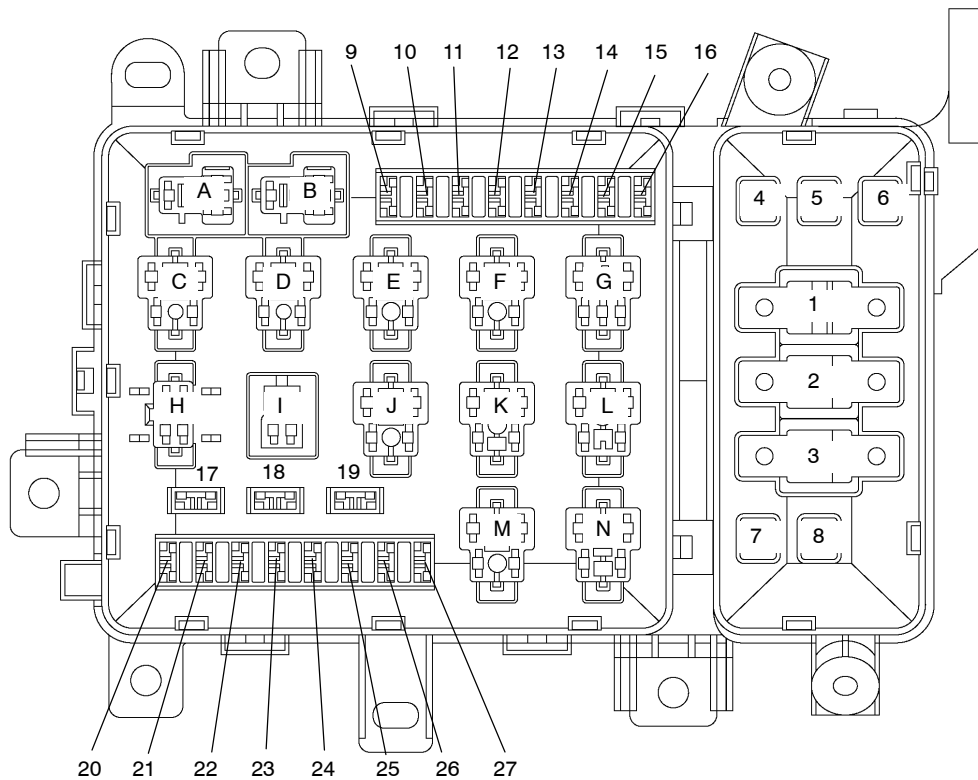


## Fuses

|                       |      |
|-----------------------|------|
| 1. FL AM1 NO. 1       | 80 A |
| 2. FL HTR             | 60 A |
| 3. -                  | 50 A |
| 4. ABS NO.1 M-Fuse    | 40 A |
| 5. AHC M-Fuse         | 50 A |
| 6. ACC M-Fuse         | 50 A |
| 7. ABS NO.2 M-Fuse    | 40 A |
| 8. STARTER M-Fuse     | 30 A |
| 9. AM1 NO.2 Fuse      | 20 A |
| 10. A/C Fuse          | 20 A |
| 11. POWER HTR Fuse    | 10 A |
| 12. SEAT HTR Fuse     | 15 A |
| 13. FUEL HTR Fuse     | 20 A |
| 14. MIR HTR Fuse      | 15 A |
| 15. HEAD CLEANER Fuse | 20 A |
| 16. CDS FAN Fuse      | 20 A |
| 17. EFI Fuse          | 20 A |
| 18. HORN Fuse         | 10 A |
| 19. THROTTLE Fuse     | 15 A |
| 20. RADIO Fuse        | 20 A |
| 21. HAZ-TRN Fuse      | 15 A |
| 22. AM2 Fuse          | 30 A |
| 23. TEL Fuse          | 10 A |
| 24. HEAD LH-UPR Fuse  | 20 A |
| 25. HEAD RH-UPR Fuse  | 20 A |
| 26. HEAD LH-LWR Fuse  | 10 A |
| 27. HEAD RH-LWR Fuse  | 10 A |

## Relays

|                            |
|----------------------------|
| A. Magnetic Clutch Relay   |
| B. Mirror Heater Relay     |
| C. ACC Relay               |
| D. AHC Relay               |
| E. IG1 No.1 Relay          |
| F. IG1 No.2 Relay          |
| G. ABS SOL Relay           |
| H. EFI and ECD Relay       |
| I. Horn Relay              |
| J. Headlight Dimmer Relay  |
| K. Starter Relay           |
| L. ABS MTR2 Relay          |
| M. Headlight Control Relay |
| N. ABS MTR1 Relay          |

## Driver Side Junction Block

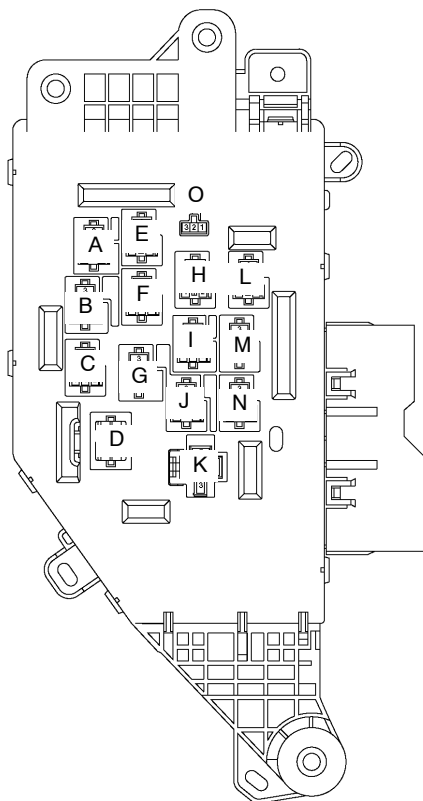


## Relays

- A. Circuit Opening Relay
- B. Fuel/ Pump Relay
- C. Door Lock Relay
- D. Turn Signal Flasher Relay
- E. SPIL/ Level Relay
- F. Starter Cut Relay
- G. Door Lock Relay
- H. Front Fog Relay
- I. Door Lock Relay
- J. Defogger Relay
- K. Power Main Relay
- L. Rear Heater Relay
- M. Dome Relay
- N. Taillight Control Relay


## Others

- O. DIODE

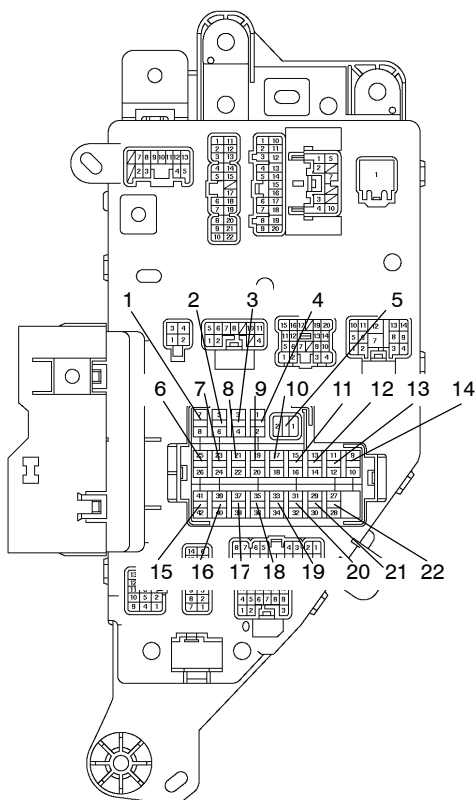


## Fuses

- |                     |       |
|---------------------|-------|
| 1. MIRR Fuse        | 10 A  |
| 2. SRS Fuse         | 15 A  |
| 3. CIGAR Fuse       | 15 A  |
| 4. IGN Fuse         | 10 A  |
| 5. POWER M-Fuse     | 40 A  |
| 6. DOME Fuse        | 10 A  |
| 7. AHC-IG Fuse      | 20 A  |
| 8. DIFF Fuse        | 20 A  |
| 9. GAUGE Fuse       | 15 A  |
| 10. WIPER Fuse      | 20 A  |
| 11. I/UP Fuse       | 7.5 A |
| 12. FR FOG Fuse     | 15 A  |
| 13. STOP Fuse       | 15 A  |
| 14. RR A/C Fuse     | 30 A  |
| 15. DEFOG M-Fuse    | 20 A  |
| 16. ECU-B Fuse      | 15 A  |
| 17. TAIL Fuse       | 15 A  |
| 18. AHC-B Fuse      | 15 A  |
| 19. OBD Fuse        | 10 A  |
| 20. RR HTR Fuse     | 10 A  |
| 21. ECU-IG Fuse     | 15 A  |
| 22. PWR OUTLET Fuse | 15 A  |

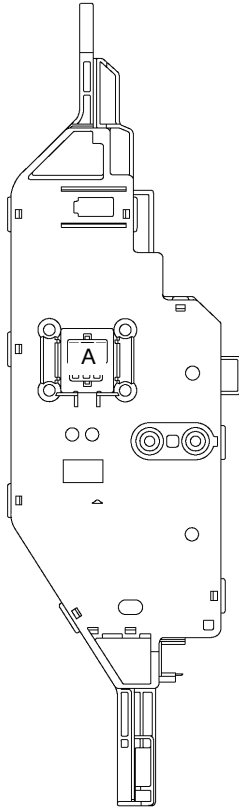**Passenger Side Junction Block**


Relay

A. Heater Relay

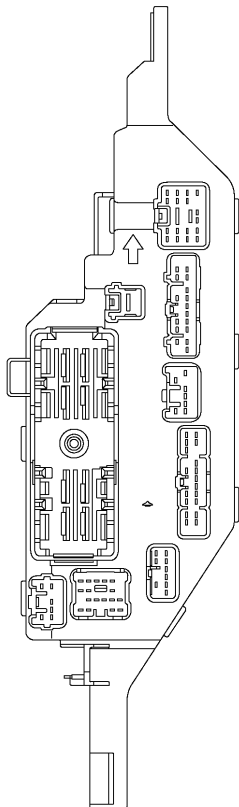

I06119

Fusible Link Block

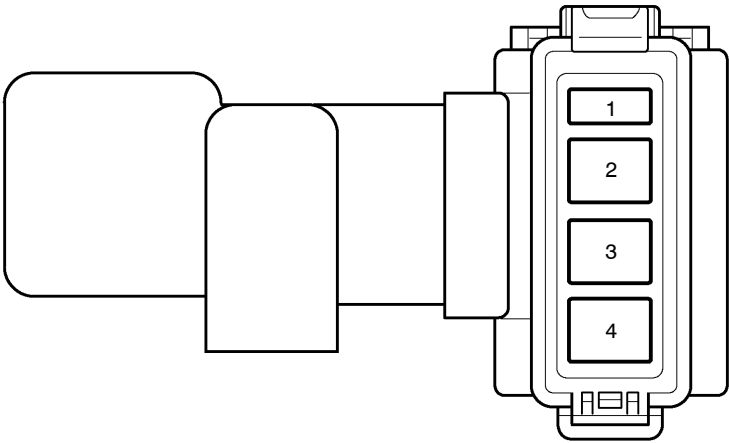

- Fuses
- |                |       |
|----------------|-------|
| 1. ALT-S Fuse  | 7.5 A |
| 2. FL MAIN     | 100 A |
| 3. FL ALT      | 140 A |
| 4. FL J/B NO.2 | 100 A |

I06117