


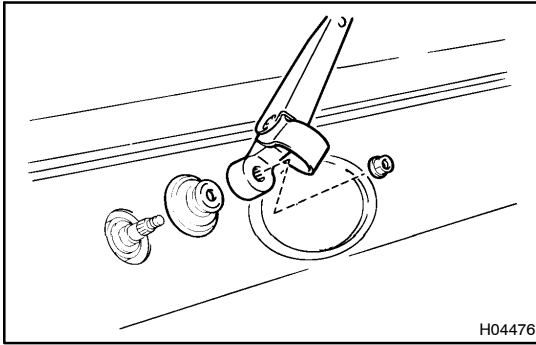


REMOVAL

1. REMOVE REAR WIPER ARM

- Open the cover.
- Remove the nut and rear wiper arm.
- Remove the grommet.

2. REMOVE THESE PARTS:

- Assist grip
- Inside handle bezel

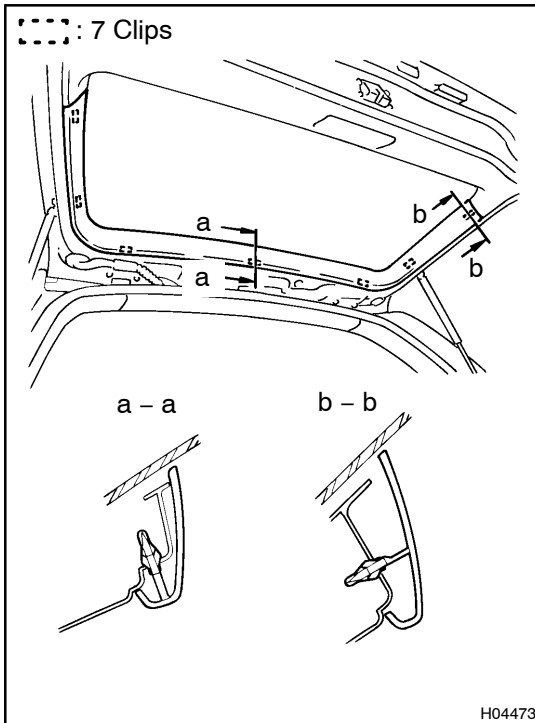


3. REMOVE CENTER BACK DOOR GARNISH

Using a screwdriver, remove the center back door garnish.

HINT:

Tape the screwdriver tip before use.

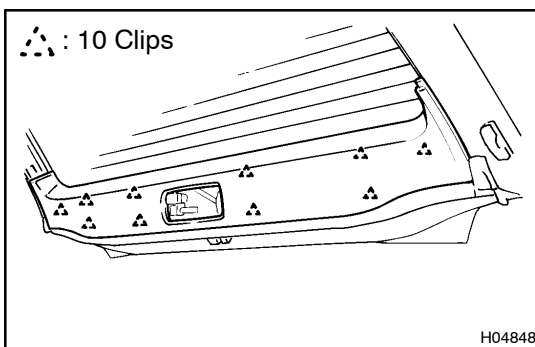


4. REMOVE BACK DOOR GARNISH

Using a screwdriver, remove the back door garnish.

HINT:

Tape the screwdriver tip before use.

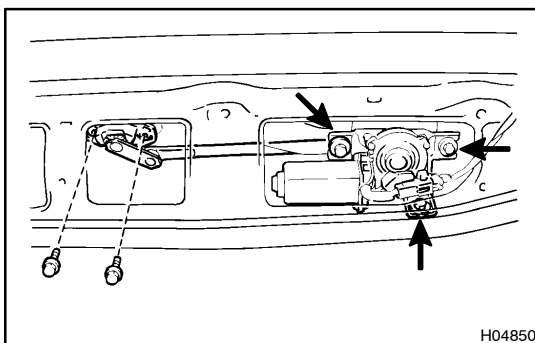

5. REMOVE REAR WIPER MOTOR AND LINK ASSEMBLY

- Disconnect the connector.
- Remove the 2 bolts.
- Unfasten the 3 bolts and remove the rear wiper motor with link assembly.