


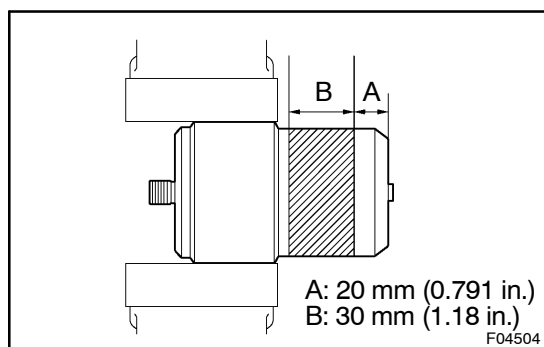

DISPOSAL

DISPOSAL METHOD OF ACCUMULATOR

- Follow the procedures described below and drain the high pressure fluid from the accumulator.
- Place the accumulator in a vise, cover it with a cloth over a saw then cut the accumulator body slowly.

CAUTION:

Never cut at a stretch.

- When the outer body of the accumulator is cut, gas discharges.