


Tc Terminal Circuit

CIRCUIT DESCRIPTION


Connecting terminals Tc and E₁ of the DLC1 causes the ECU to display the DTC by flashing the height control OFF indicator light.

WIRING DIAGRAM

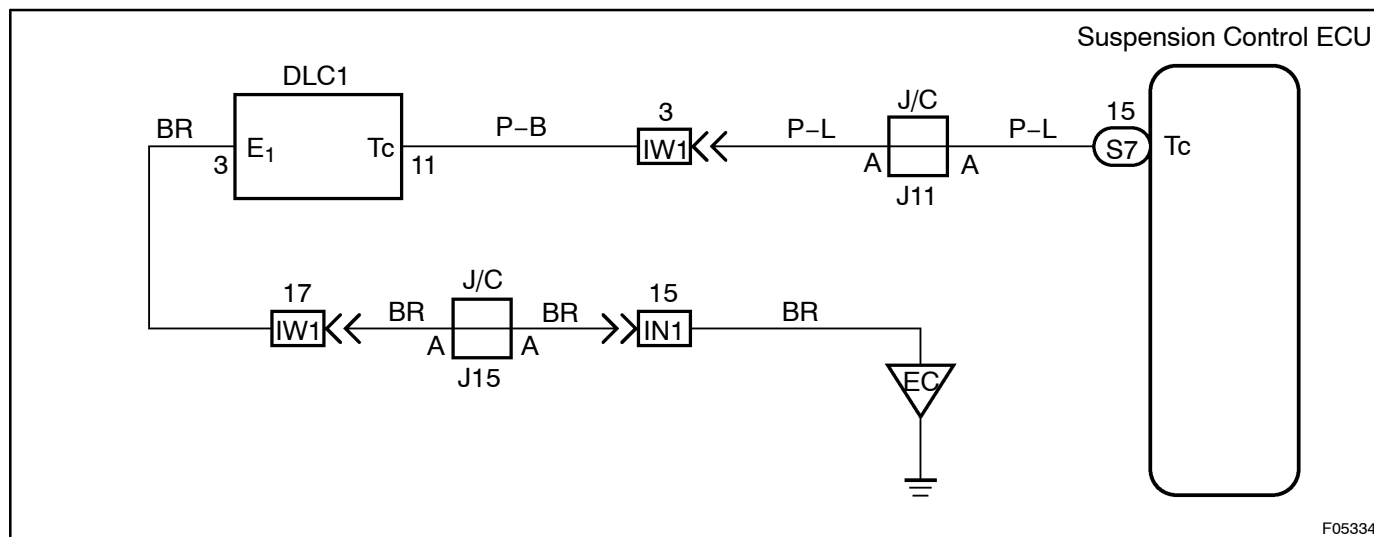

INSPECTION PROCEDURE

1 Check voltage between terminals Tc and E₁ of DLC1.

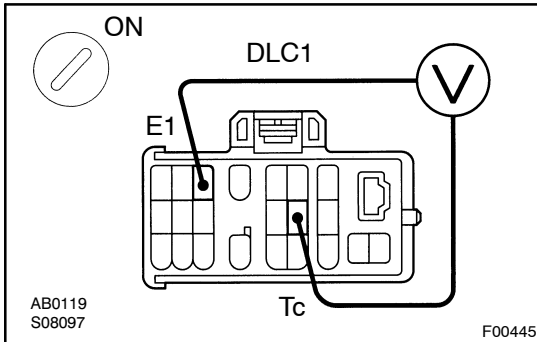

CHECK:

- (a) Turn the ignition switch ON.
- (b) Measure the voltage between terminals Tc and E₁ of DLC1.

OK:

Voltage: 9 – 14 V

OK

No problem.

NG

2 Check for open and short circuit in harness and connector between suspension control ECU and DLC1, DLC1 and body ground (See page [IN-33](#)).

NG

Repair or replace harness or connector.

OK

Check and replace suspension control ECU.