


Ts Terminal Circuit

CIRCUIT DESCRIPTION

By connecting terminals Ts and E₁ of the DLC1, an input signal check can be performed (See page [DI-232](#)).


WIRING DIAGRAM

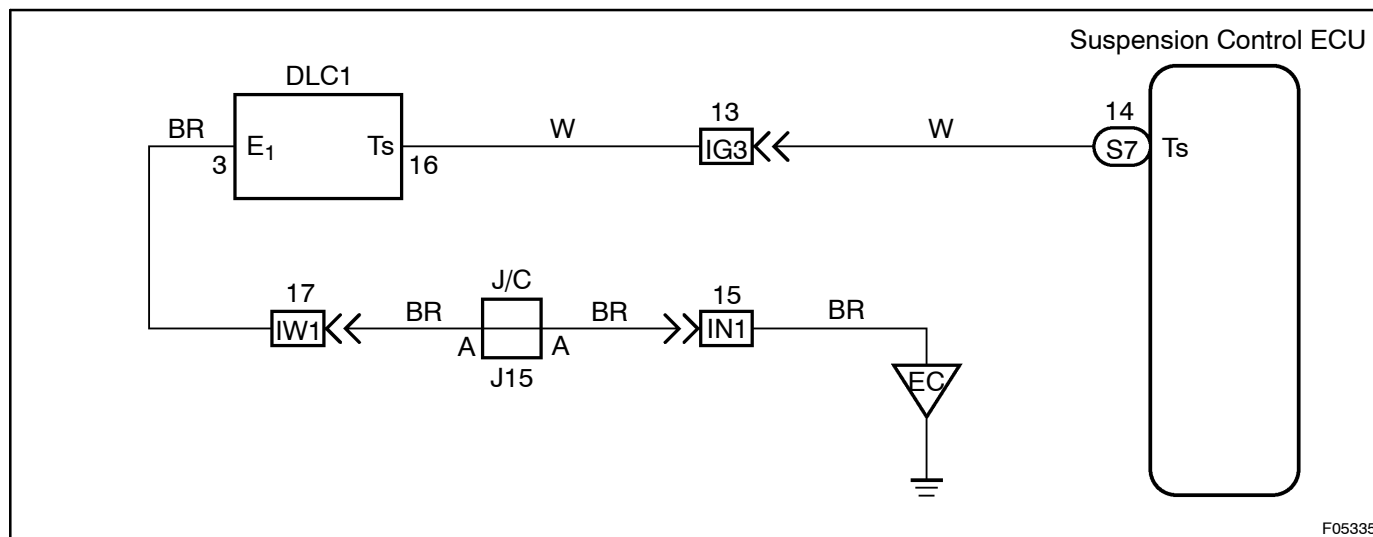

F05335

INSPECTION PROCEDURE

1 Check voltage between terminals Ts and E₁ of DLC1.

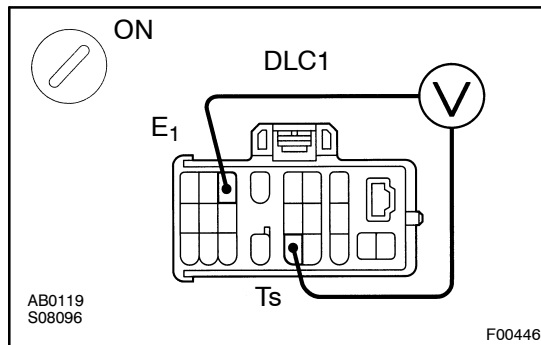

CHECK:

- Turn the ignition switch ON.
- Measure the voltage between terminals Ts and E₁ of DLC1.

OK:

Voltage: 9 – 14 V

OK

No problem.

NG

2 Check for open and short circuit in harness and connector between suspension control ECU and DLC1, DLC1 and body ground (See page [IN-33](#)).

NG

Repair or replace harness or connector.

OK

Check and replace suspension control ECU.