


DTC	C1248 / 48	Rear Differential Lock circuit
------------	-------------------	---------------------------------------

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1248 / 48	Open or short circuit in center differential lock circuit. Center differential is locking.	• Rear differential lock • Rear differential lock circuit

WIRING DIAGRAM

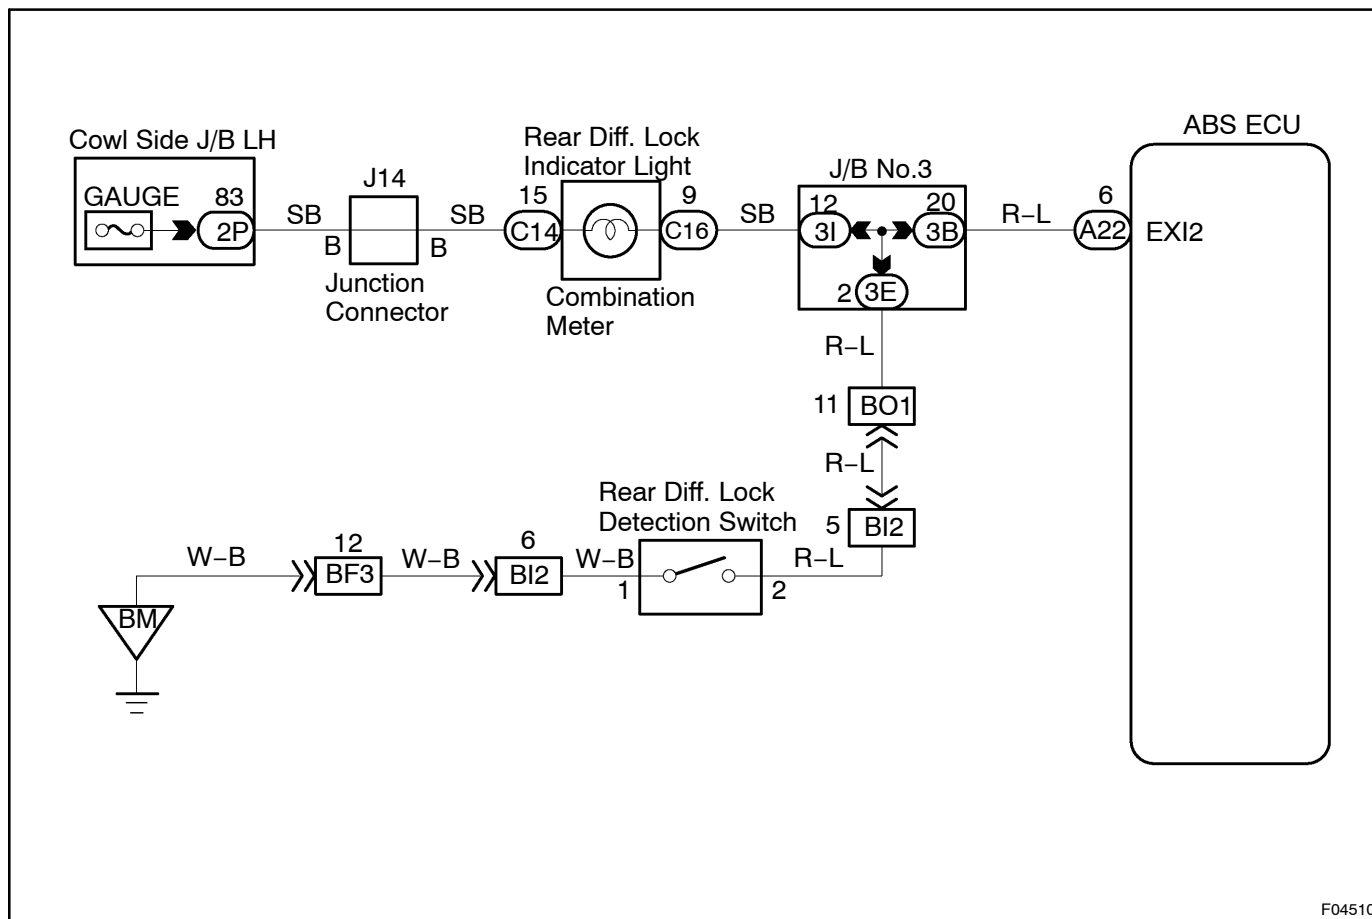

F04510

INSPECTION PROCEDURE

1	Check the rear differential is free and REAR DIFF. LOCK switch is OFF.
---	--

NG

Repair the rear differential lock system.

OK

2	Is DTC output?
----------	-----------------------

Check DTC on page [DI-326](#).

NO	Normal.
-----------	----------------

YES

3	Check that REAR DIFF. LOCK indicator light does not go off.
----------	--

NO	Go to step 6.
-----------	----------------------

YES

4	Check that bulb for REAR DIFF. LOCK indicator light is not burnt out.
----------	--

YES	Replace indicator light.
------------	---------------------------------

NO

5	Check for open circuit in harness and connector between battery and REAR DIFF. LOCK indicator light, REAR DIFF. LOCK indicator light and ABS ECU (See page IN-33).
----------	---

NG	Repair or replace harness or connector.
-----------	--

OK

6	Check for short circuit in harness and connector between REAR DIFF. LOCK indicator light and ABS ECU (See page IN-33).
---	---

NG**Repair or replace harness or connector.****OK****Check and replace ABS ECU.**