


Ts Terminal Circuit

CIRCUIT DESCRIPTION

The sensor check circuit detects abnormalities in the speed sensor signal which cannot be detected by the DTC check.

Connecting terminals Ts and E₁ of the DLC1 in the engine compartment starts the check.


WIRING DIAGRAM

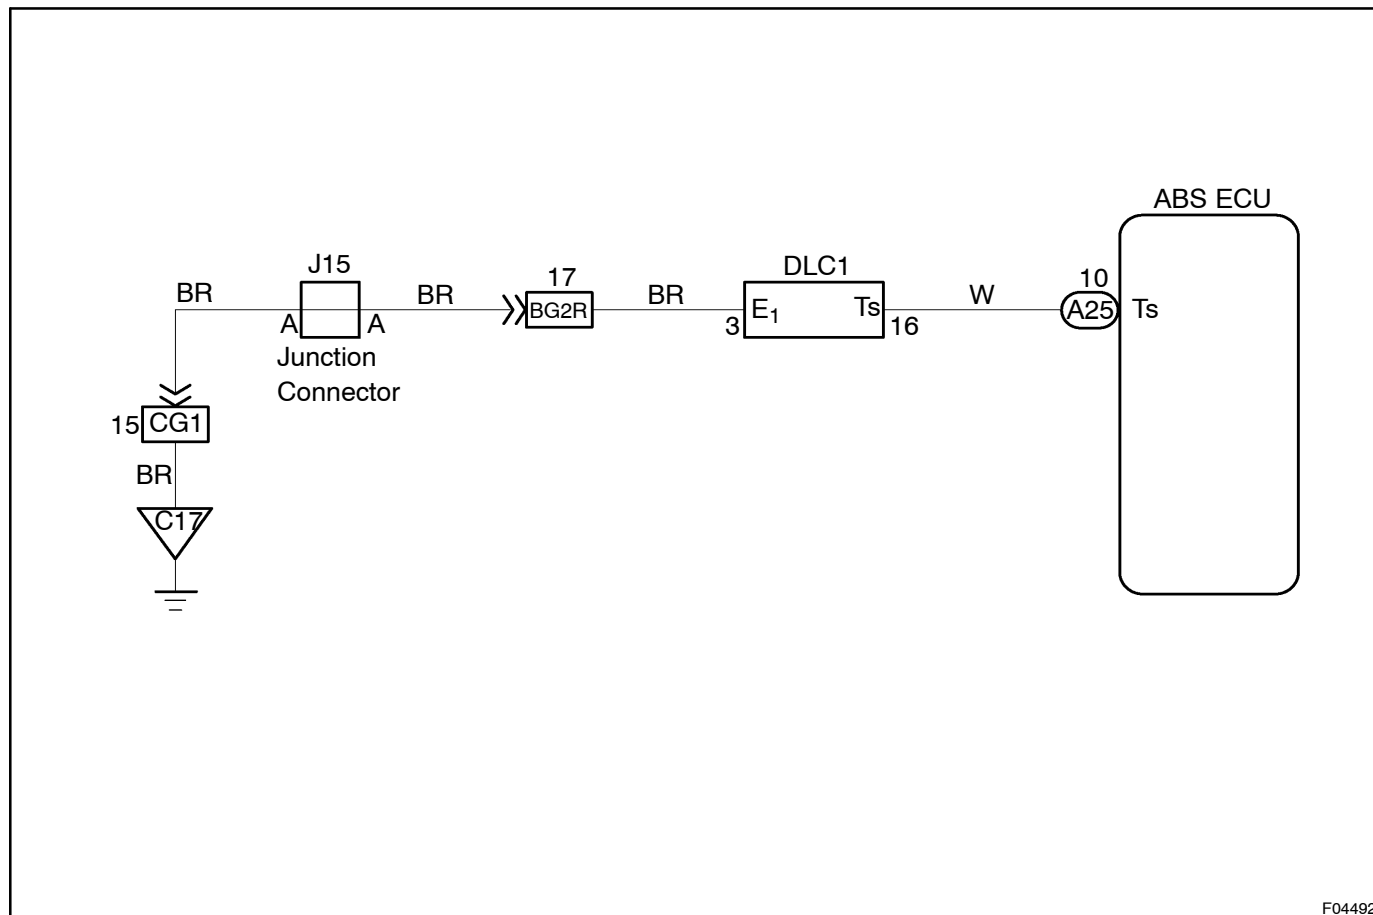

F04492

INSPECTION PROCEDURE

- 1 Check voltage between terminals Ts and E₁ of DLC1.

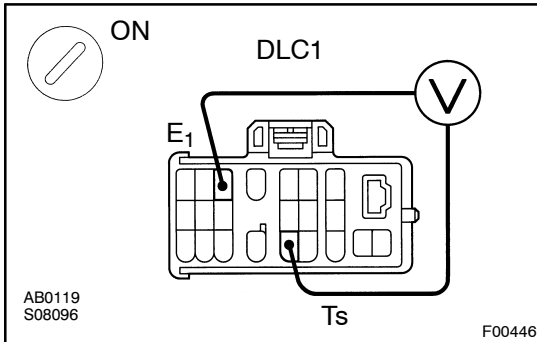

CHECK:

- (a) Turn the ignition switch ON.
- (b) Measure voltage between terminals Ts and E₁ of DLC1.

OK:

Voltage: 10 – 14 V

OK

If ABS warning light does not blink even after Ts and E₁ are connected, the ECU may be defective.

NG

- 2 IG switch OFF, and check for open and short circuit in harness and connector between ABS ECU and DLC1, DLC1 and body ground (See page [IN-33](#)).

NG

Repair or replace harness or connector.

OK

Check and replace ABS ECU.