


Illumination circuit

CIRCUIT DESCRIPTION

Receiving the courtesy signal from the Body ECU will make the interior light, ignition light, and courtesy light come on.

WIRING DIAGRAM

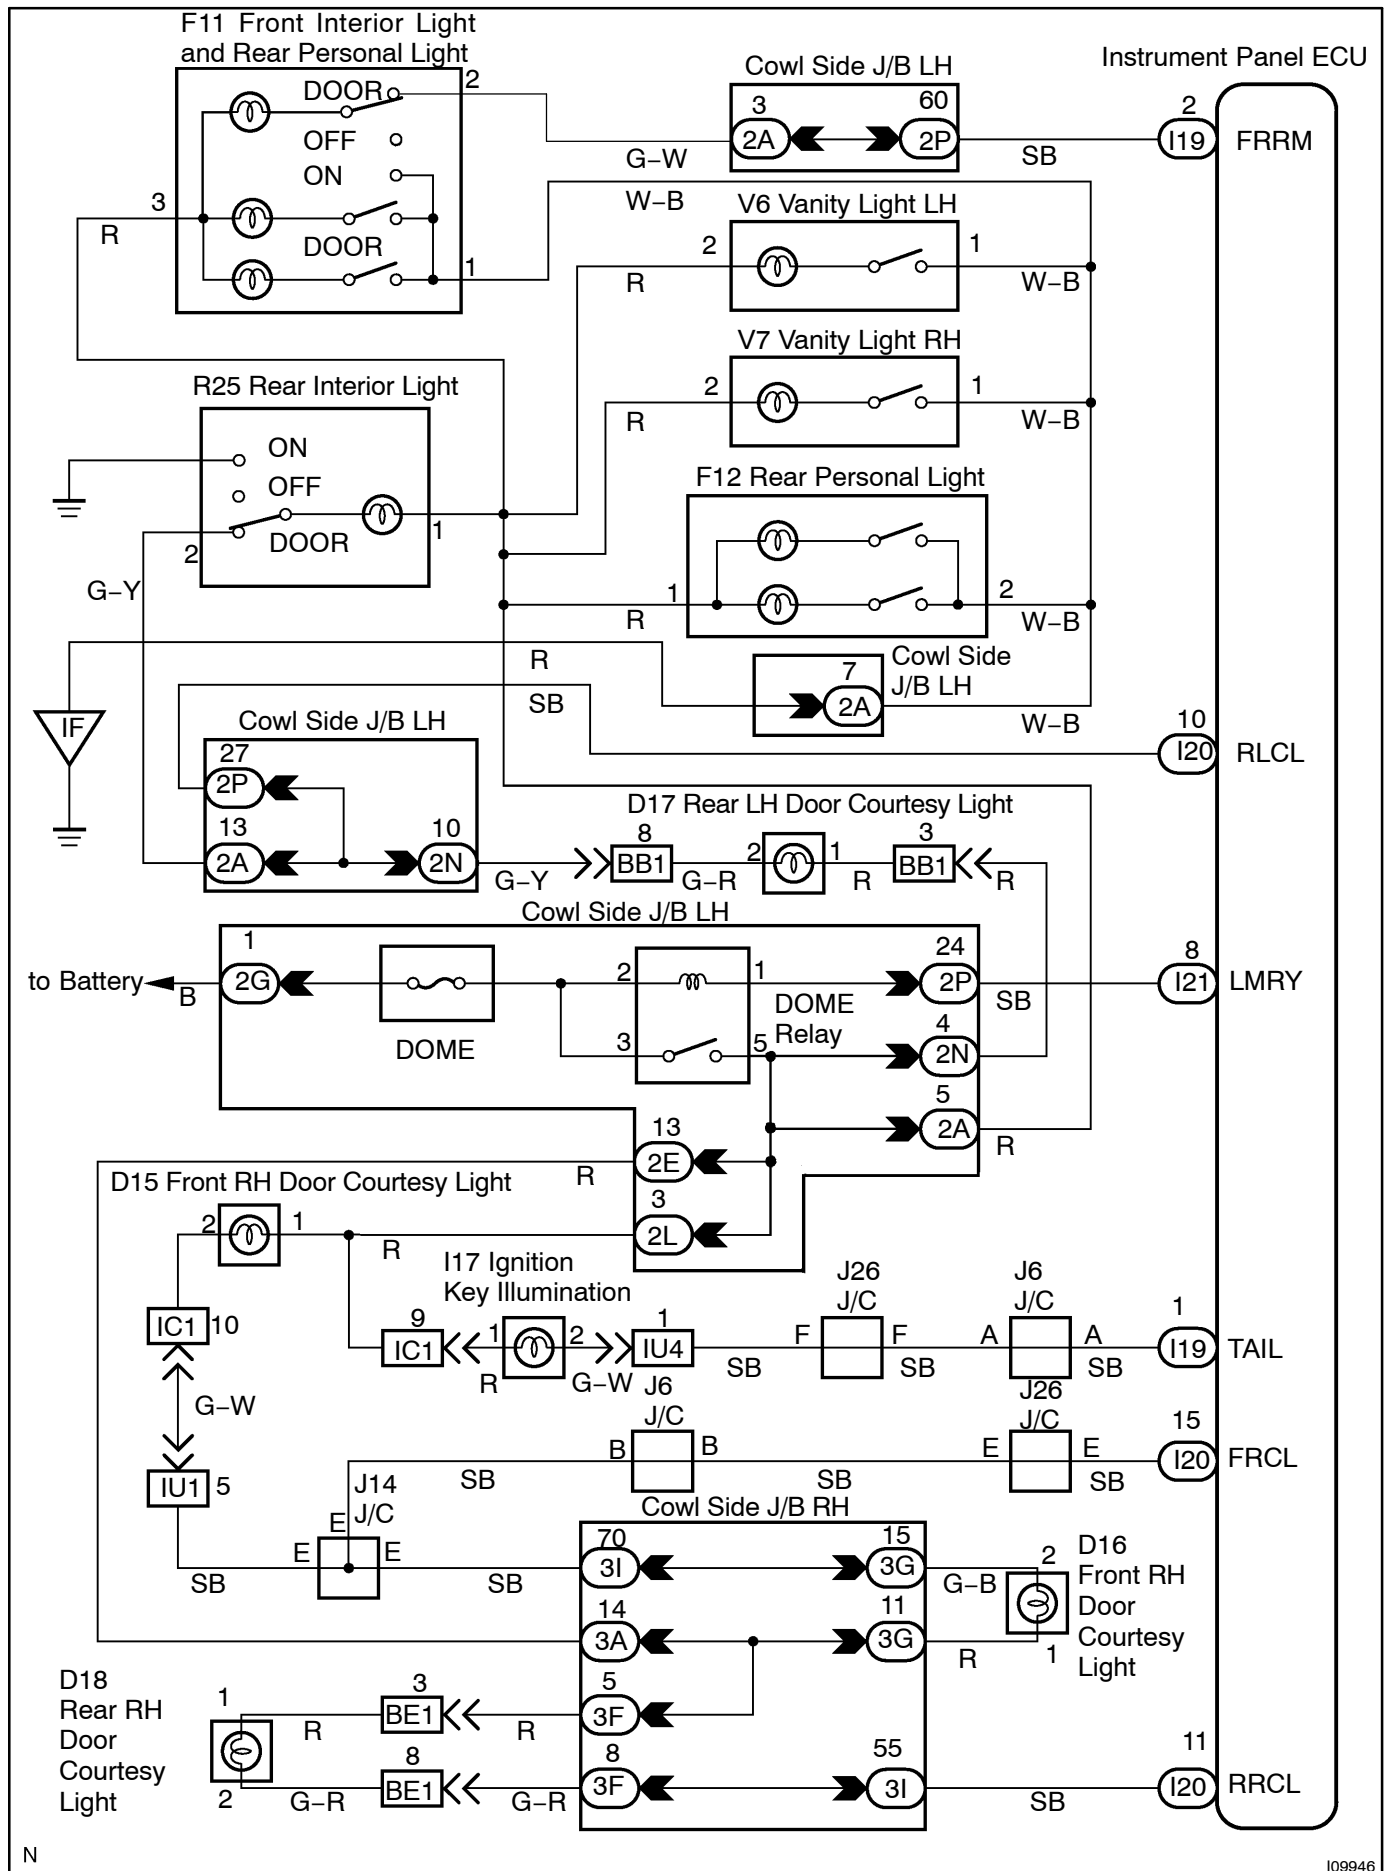

N

109946

INSPECTION PROCEDURE

1	Check DOME fuse.
---	------------------

NG

Replace the fuse.

OK

2	Check illumination light.
---	---------------------------

NG

Replace the failure light.

OK

3	Check wireharness and connector between each illumination light and Body ECU, battery and each illumination light .
---	---

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-702](#)).