


## Memory switch circuit (W/ memory)

### WIRING DIAGRAM

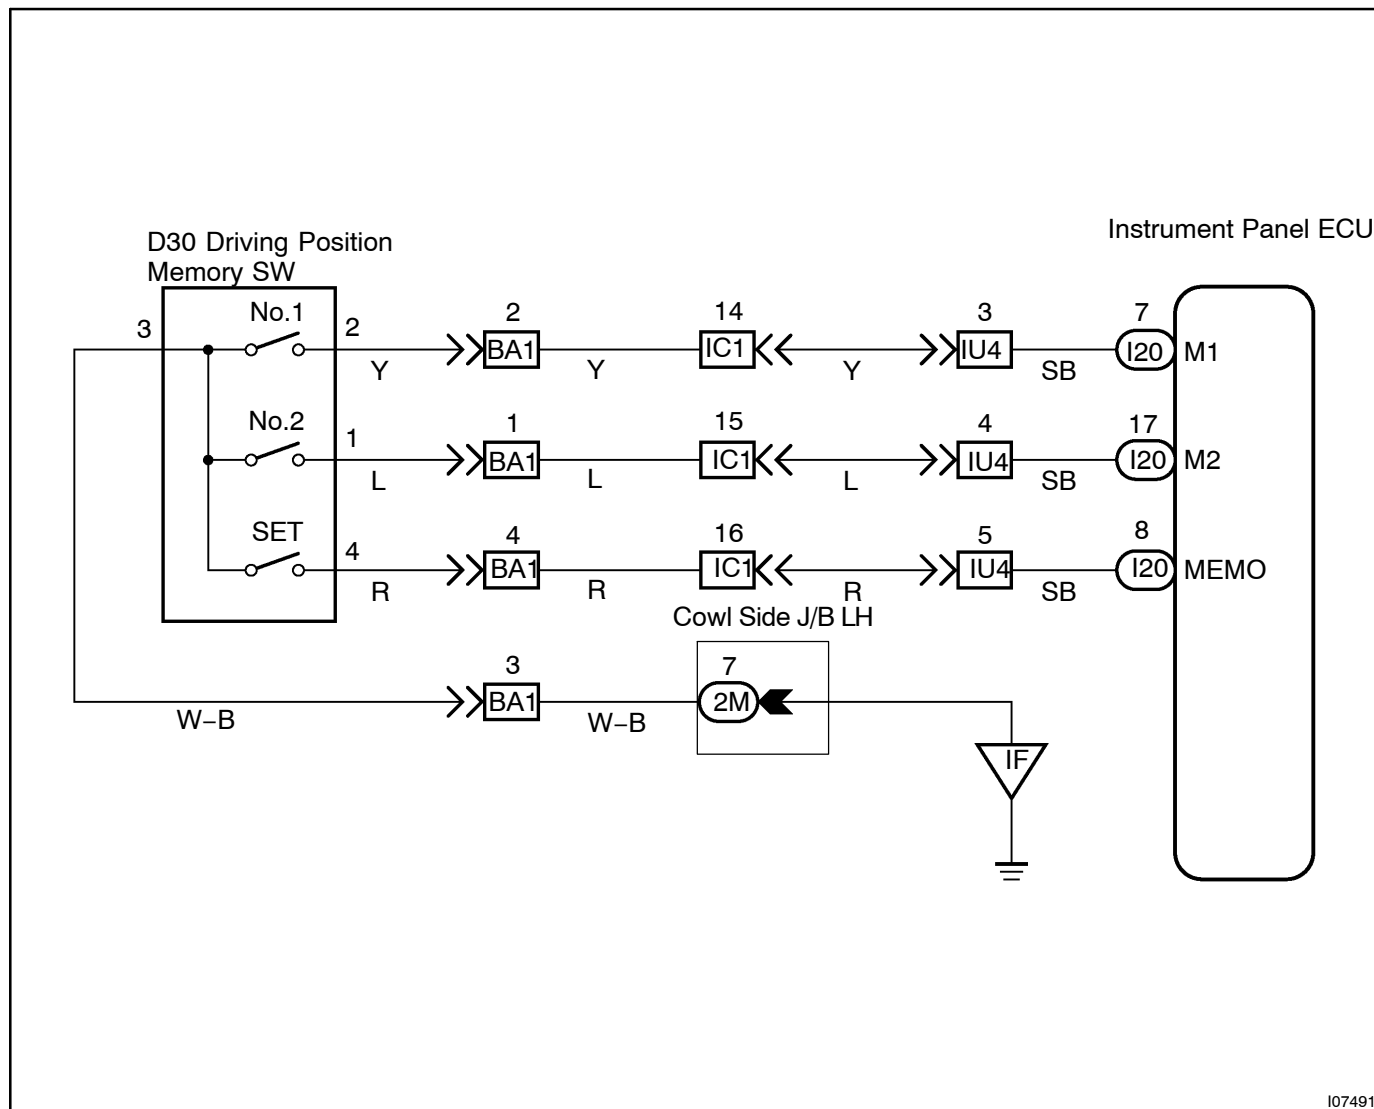

**INSPECTION PROCEDURE**

**1** Check memory switch (See page [BE-133](#)).

**NG**

**Replace the memory switch.**

**OK**

**2** Check wireharness and connector between memory switch and Body ECU.

**NG**

**Repair or replace wireharness or connector.**

**OK**

**Proceed to next circuit inspection shown on  
problem symptoms table  
(See page [DI-702](#)).**