


Park/Neutral Position Switch Circuit

CIRCUIT DESCRIPTION

The park/neutral position switch detects the shift lever position P and sends signals to the Body ECU.

WIRING DIAGRAM

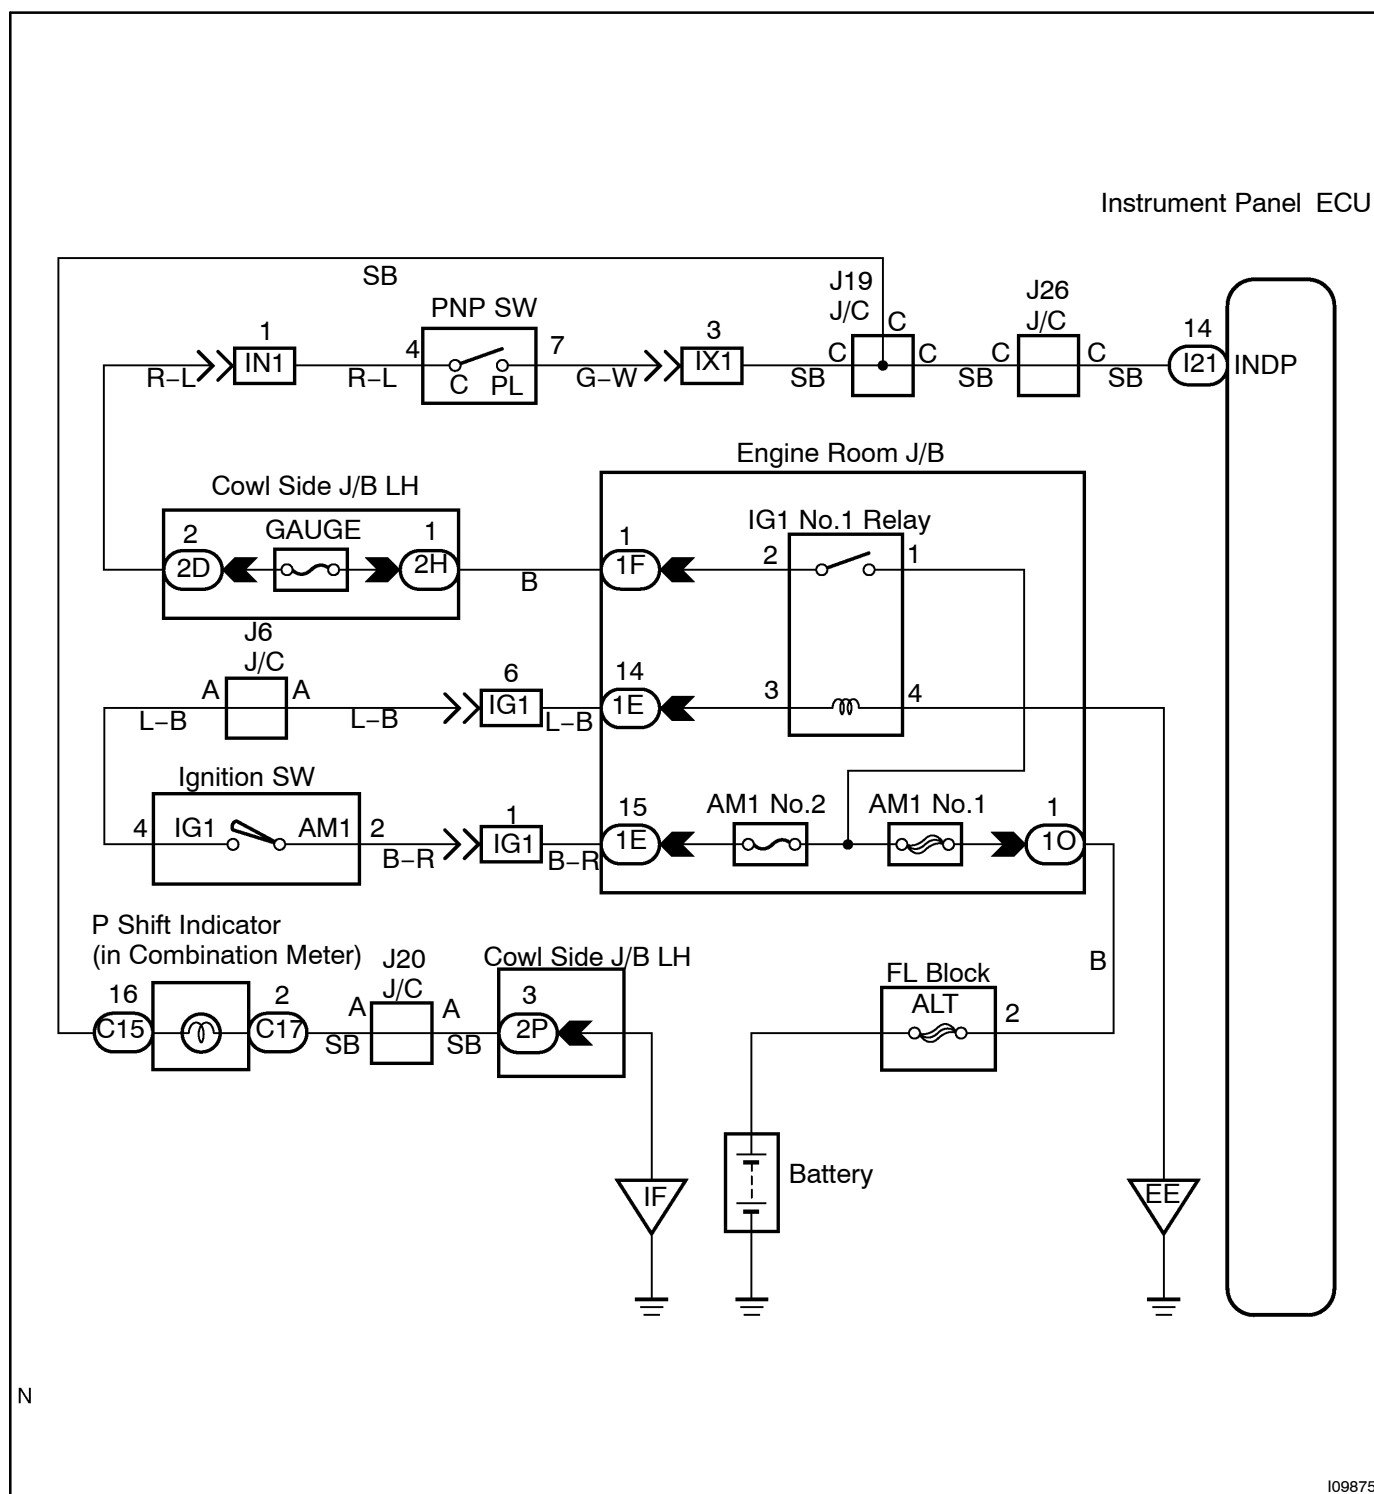

INSPECTION PROCEDURE

1	Check A/T shift operation.
----------	-----------------------------------

CHECK:

Check that the A/T shift operates normally.

NG

**Proceed to AT troubleshooting
(See page [ST-1](#)).**

OK

2	Check harness and connector between Body ECU and park/neutral position switch (See page IN-33).
----------	--

NG

Repair or replace harness or connector.

OK

**Check and replace Body ECU
(See page [IN-33](#)).**