

Main Switch Circuit (Cruise Control Switch)

CIRCUIT DESCRIPTION


When the cruise control main switch is turned off, the cruise control does not operate.

WIRING DIAGRAM

See page [DI-674](#).

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check voltage between terminal CMS of ECM connector and body ground. |
|---|--|

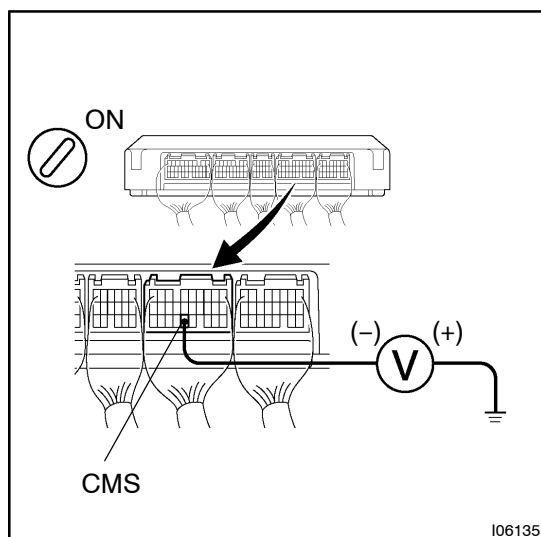

PREPARATION:

- (a) Remove the ECM with connector still connected.
- (b) Turn ignition switch ON.

CHECK:

Measure voltage between terminal CMS of ECM connector when main switch is held on and off.

OK:


Main switch	Voltage
OFF	10 – 14 V
ON	Below 0.5 V

OK

Proceed to next circuit inspection shown on problem symptom table (See page [DI-668](#)).

NG

2 Check main switch continuity.

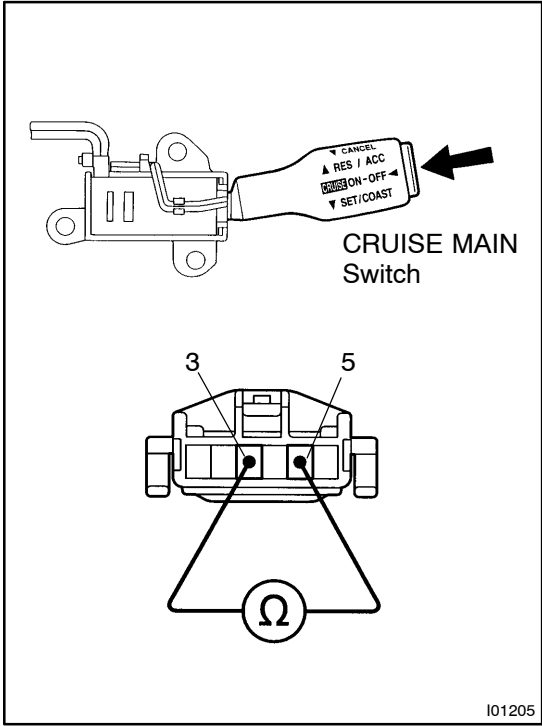

PREPARATION:

- (a) Remove steering wheel center pad. (See page [SR-9](#))
- (b) Disconnect the control switch connector.

CHECK:

Check continuity between terminals 3 and 5 of control switch connector when main switch is held on and off.

OK:

Switch position	Tester connection	Specified condition
OFF	3 - 5	No continuity
Hold ON	3 - 5	Continuity

NG

Replace control switch.

OK

**3 Check harness and connector between ECM and main switch
(See page [IN-23](#)).**

NG

Repair or replace harness or connector.

OK

Check and replace ECM (See page [IN-33](#)).