

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Engine does not crank (Does not start)	1. Starter 2. Starter relay	ST-16 ST-18
No initial combustion (Does not start)	1. Engine immobilizer system 2. ECM power source circuit 3. Fuel pump control circuit 4. Fuel control switch	DI-690 DI-157 DI-134 SF-32
No complete combustion (Does not start)	1. Fuel pump control circuit	DI-134
Under normal condition (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit 3. Compression	DI-154 DI-134 EM-3
Cold engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-154 DI-134
Hot engine (Difficult to start)	1. Starter signal circuit 2. Fuel pump control circuit	DI-154 DI-134
High engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. ECM power source circuit	DI-777 DI-157
Low engine idle speed (Poor idling)	1. A/C signal circuit (Compressor circuit) 2. Fuel pump control circuit	DI-777 DI-134
Rough idling (Poor idling)	1. Compression 2. Fuel pump control circuit	EM-3 DI-134
Hunting (Poor idling)	1. ECM power source circuit 2. Fuel pump control circuit	DI-157 DI-134
Hesitation/Poor acceleration (Poor driveability)	1. Fuel pump control circuit 2. A/T faulty	DI-134 DI-179
Surging (Poor driveability)	1. Fuel pump control circuit	DI-134
Soon after starting (Engine stall)	1. Engine immobilizer system 2. Fuel pump control circuit	DI-690 DI-134
During A/C operation (Engine stall)	1. A/C signal circuit (Compressor circuit) 2. Engine control module (ECM)	DI-777 IN-23