


## REMOVAL

### NOTICE:

Do not open the cover or the case of the ECU and various electrical devices unless absolutely necessary.

(If the IC terminals are touched, the IC may be destroyed by static electricity.)

1. REMOVE FRONT SEAT (See page [BO-118](#))
2. REMOVE UPPER CONSOLE PANEL  
(See page [BO-93](#))
3. REMOVE REAR END CONSOLE PANEL  
(See page [BO-93](#))
4. REMOVE HEATER CONTROL (See page [BO-93](#))
5. REMOVE REAR CONSOLE BOX (See page [BO-93](#))
6. REMOVE FRONT CONSOLE BOX (See page [BO-93](#))
7. REMOVE LOWER CLUSTER FINISH PANEL ASSEMBLY (See page [BO-93](#))

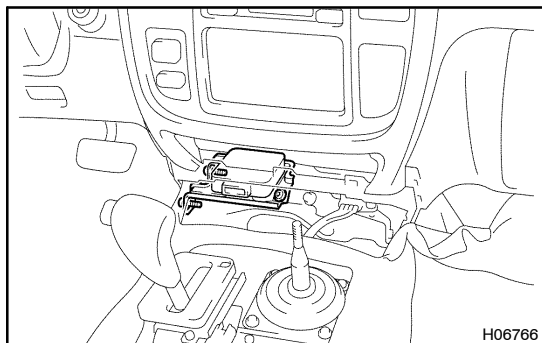

### 8. REMOVE AIRBAG SENSOR ASSEMBLY

- (a) Disconnect the airbag sensor connector.

### NOTICE:

Disconnect the connector with the airbag sensor assembly installed.

- (b) Using a torx wrench, remove the 3 screws and airbag sensor assembly.

**Torx wrench: T40 (Part No.09042-00020 or locally manufactured tool)**