


## REMOVAL

### NOTICE:

- If the wiring connector of the SRS is disconnected with the ignition switch at ON or ACC position, DTCs will be recorded.
- Never use SRS parts from another vehicle. When replacing parts, replace them with new parts.
- Never reuse the sensor involved in a collision when the SRS has deployed.
- Never repair a sensor in order to reuse it.

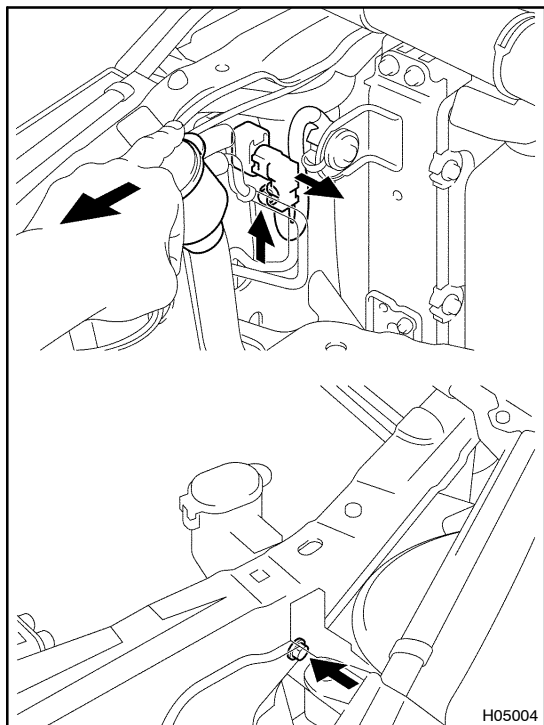

### 1. LH:


#### REMOVE FRONT AIRBAG SENSOR

- (a) Remove the battery carrier and battery.
- (b) Disconnect the front airbag sensor connector.

### NOTICE:

**Disconnect the connector with the sensor assembly installed.**

- (c) Pull the windshield washer tank opening as shown in the illustration.
- (d) Remove the 2 bolts and front airbag sensor.

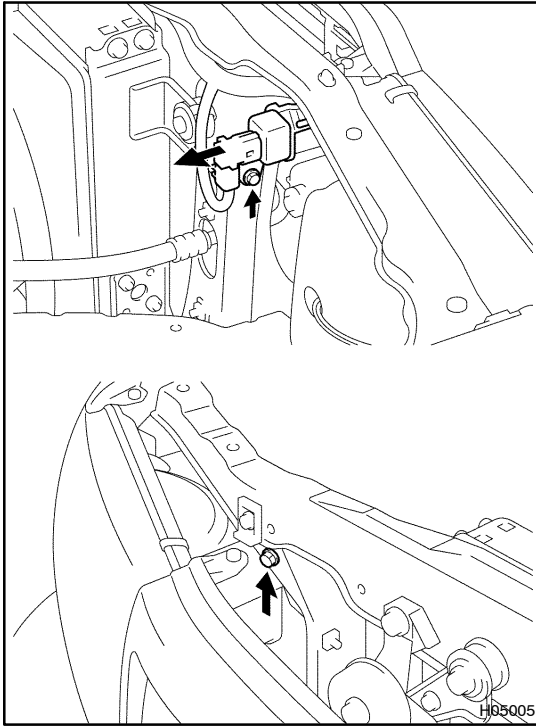**2. RH:****REMOVE FRONT AIRBAG SENSOR**

- (a) Disconnect the front airbag sensor connector.

**NOTICE:**

**Disconnect the connector with the sensor assembly installed.**

- (b) Remove the 2 bolts and front airbag sensor.