

REPLACEMENT

REPLACEMENT REQUIREMENTS

In the following cases, replace the front airbag sensor.

Case	Replacing part
If any part of the SRS wire harness has been found to be faulty in trouble-shooting.	SRS wire harness
If any part of the SRS any connector has been found to be faulty in trouble-shooting.	SRS connector
If any part of the SRS wire harness has been found to be faulty during checking items 2-(b) in "INSPECTION". (See page RS-49)	SRS wire harness
If any part of the SRS any connector has been found to be faulty during checking items 2-(c) in "INSPECTION". (See page RS-49)	SRS connector

CAUTION:

For removal and installation of the front airbag sensor, see page [RS-43](#) and [RS-47](#).

Be sure to follow the correct procedure.