


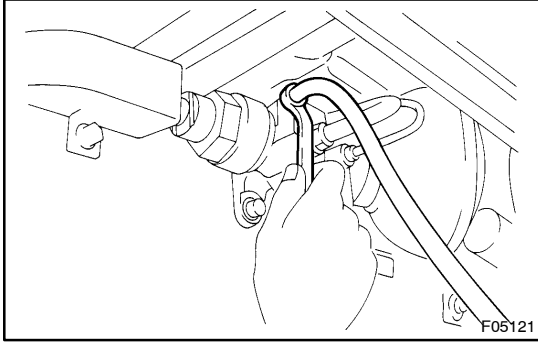

## REMOVAL

### 1. DRAIN SUSPENSION FLUID AHC

- (a) Connect the hose to the bleeder plug for damping force control actuator and loosen the bleeder plug.

#### CAUTION:

**While the fluid is being discharged, vehicle height is lowered suddenly.**

- (b) After the fluid pressure has dropped and oil has drained out, tighten the bleeder plug and remove the hose.

**Torque: 8.3 N·m (84 kgf·cm, 73 in·lbf)**

### 2. REMOVE COVER

Remove the 2 bolts and cover.

**Torque: 28 N·m (290 kgf·cm, 21 ft·lbf)**

### 3. DISCONNECT CONNECTOR

### 4. REMOVE DAMPING FORCE CONTROL ACTUATOR

- (a) Disconnect the 2 fluid lines from the damping force control actuator.

**Torque:**

**Inlet: 15 N·m (155 kgf·cm, 11 ft·lbf)**

**Outlet: 44 N·m (450 kgf·cm, 33 ft·lbf)**

- (b) Remove the nut, 2 bolts and damping force control actuator.

**Torque: 29 N·m (300 kgf·cm, 22 ft·lbf)**