


## REMOVAL


1. **REMOVE REAR WHEELS**  
Torque: 131 N·m (1,340 kgf·cm, 97 ft·lbf)
2. **SUPPORT REAR AXLE HOUSING WITH JACK**

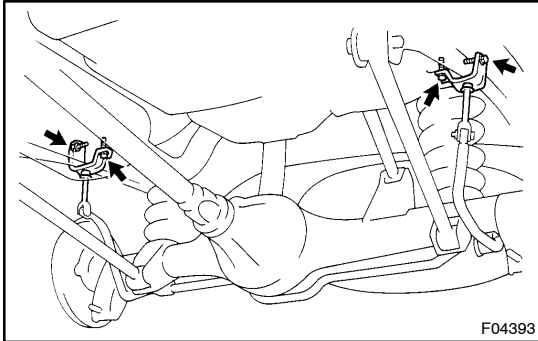

3. **DISCONNECT LH AND RH STABILIZER BAR BRACKET**

Remove the 4 bolts and disconnect the LH and RH stabilizer bar brackets.

**Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)**

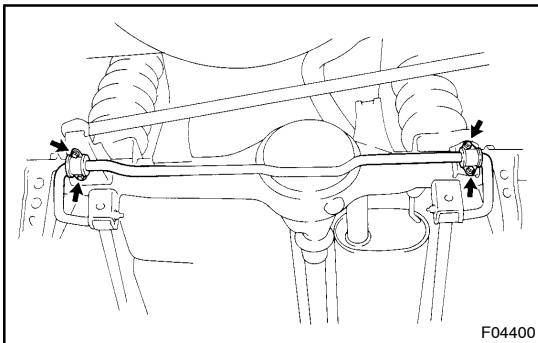

4. **REMOVE STABILIZER BAR**

- (a) Remove the 4 bolts and stabilizer bar with bushings and brackets.

**Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)**

- (b) Remove the 2 brackets and 2 bushings from the stabilizer bar.

5. **REMOVE BOTH STABILIZER BAR LINKS FROM STABILIZER BAR**

- (a) Remove the 2 nuts, 6 retainers, 4 cushions and disconnect the stabilizer bar link from the bracket.

**Torque: 15 N·m (150 kgf·cm, 11 ft·lbf)**

### HINT:

At the time of installation, replace the used 2 nuts with new ones.

- (b) Remove the 2 nuts, bolts and stabilizer bar links.

**Torque: 26 N·m (270 kgf·cm, 19 ft·lbf)**

- (c) Remove the 2 collars and 2 cushions.