




REMOTE CONTROL MIRROR

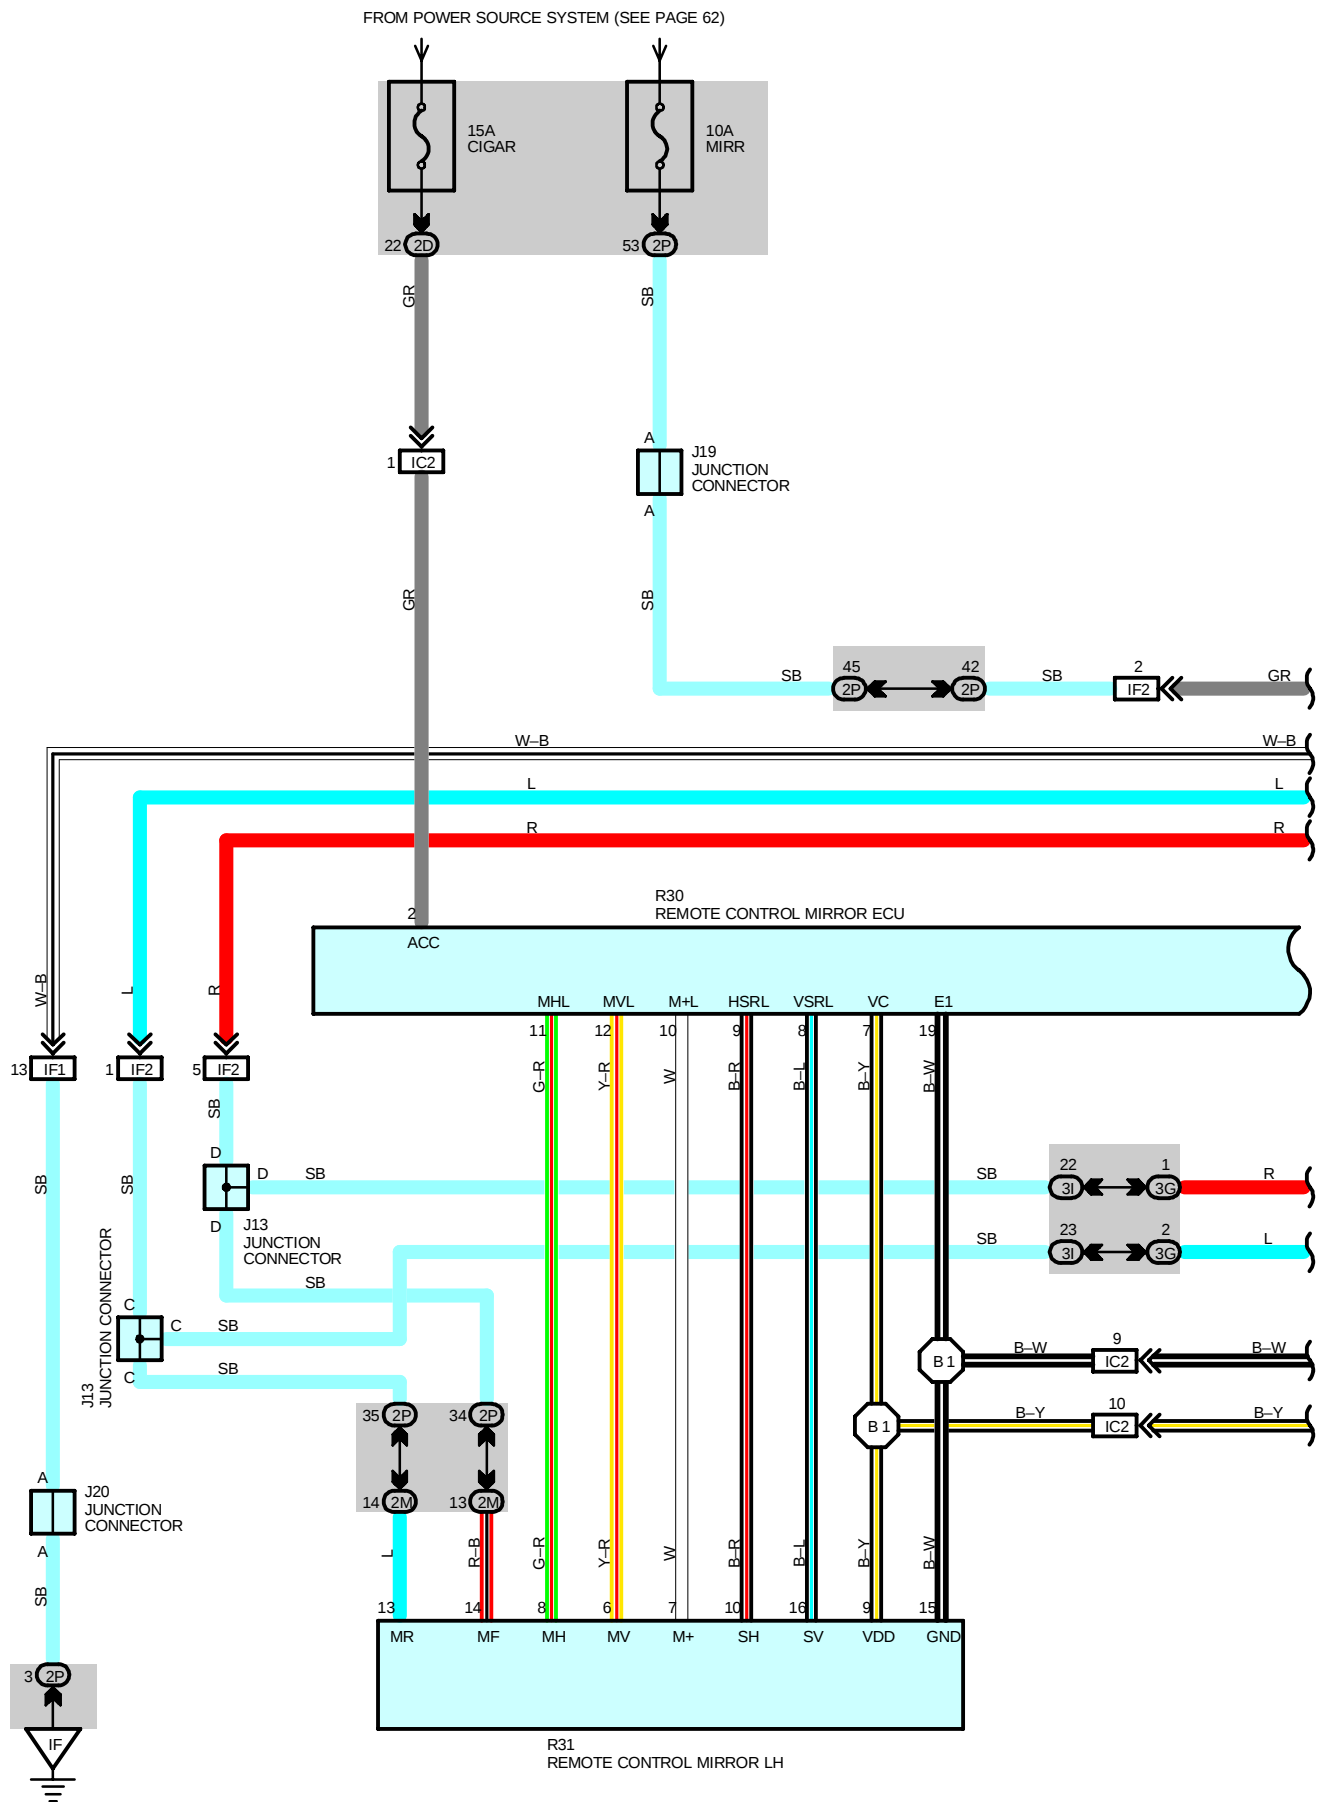

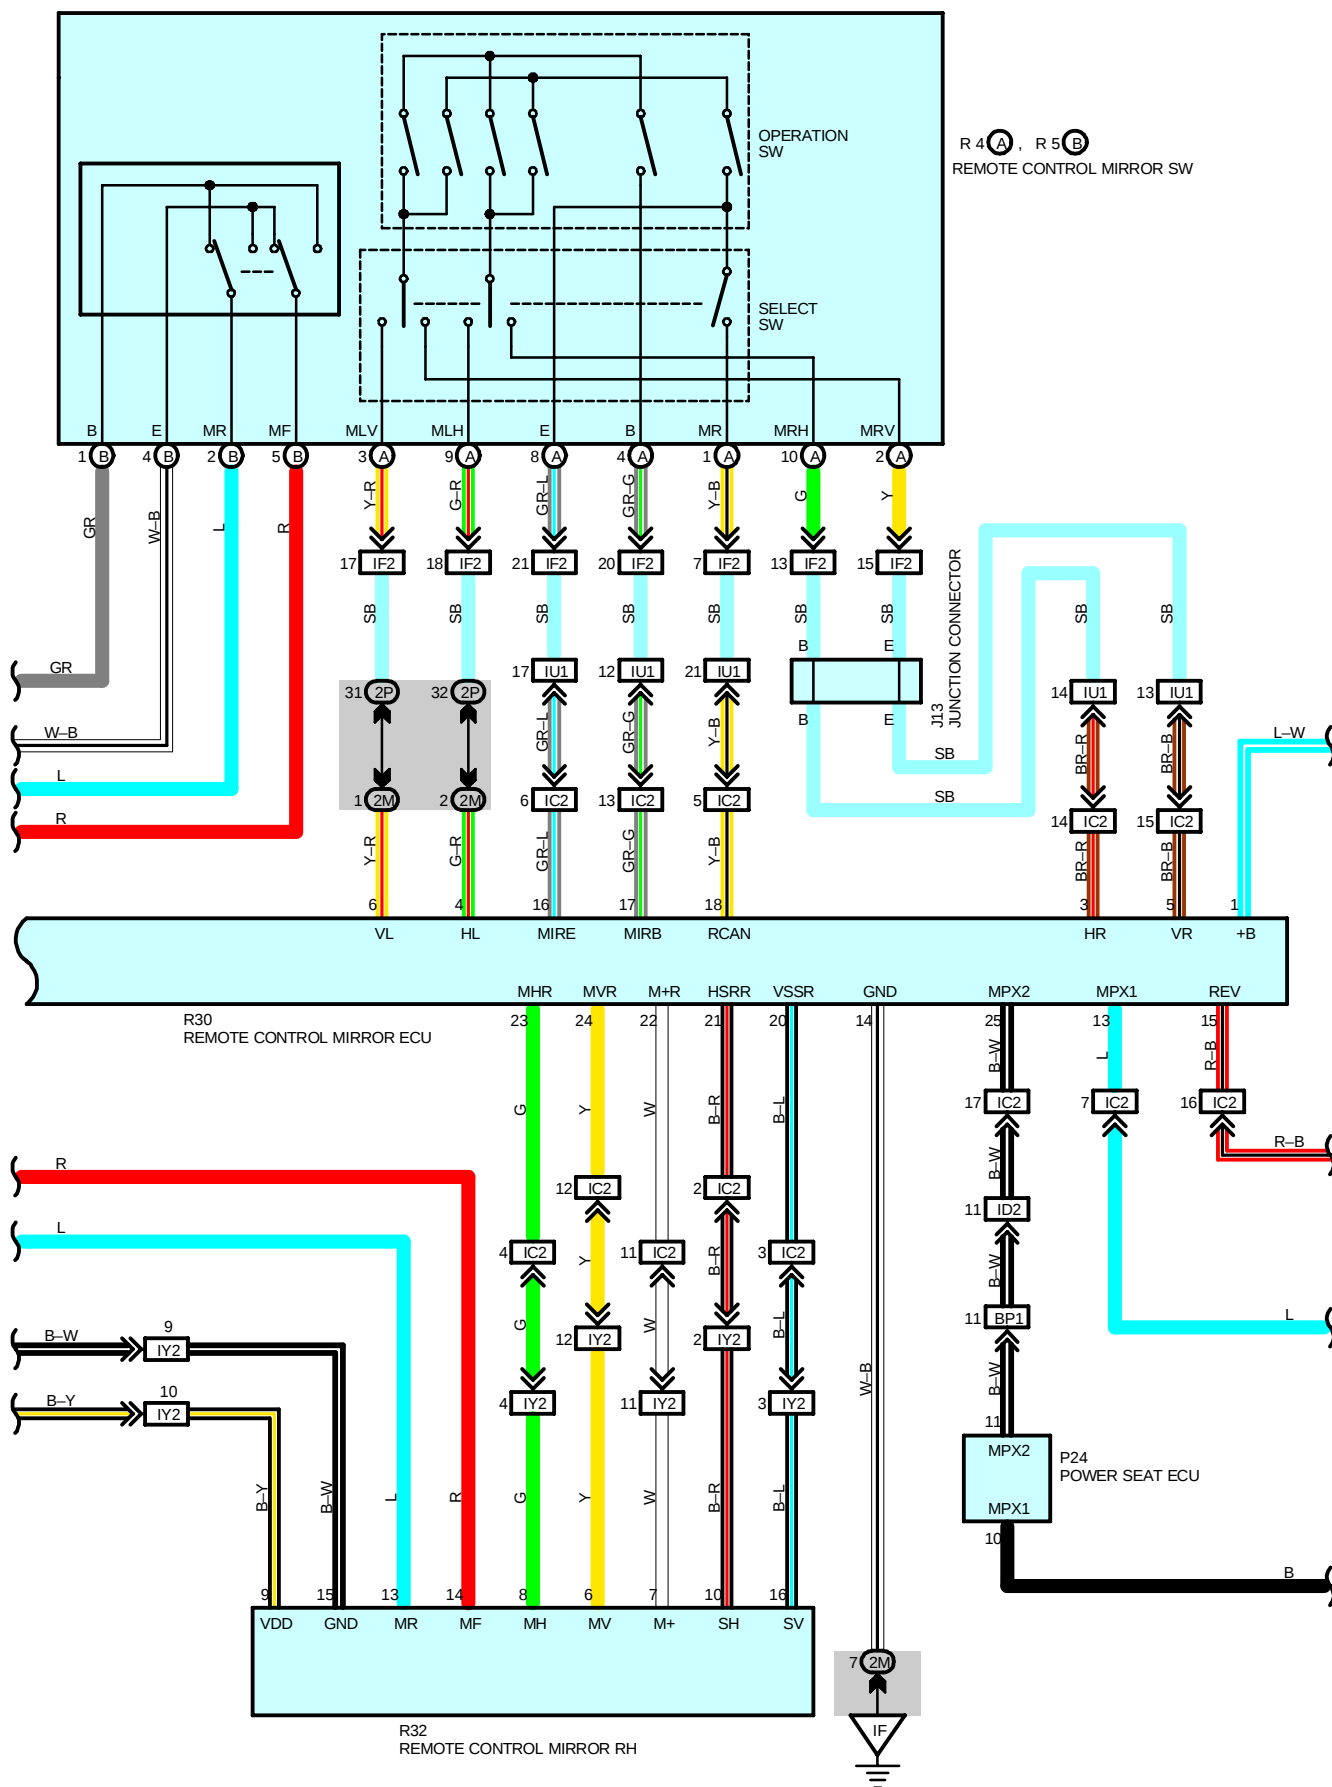

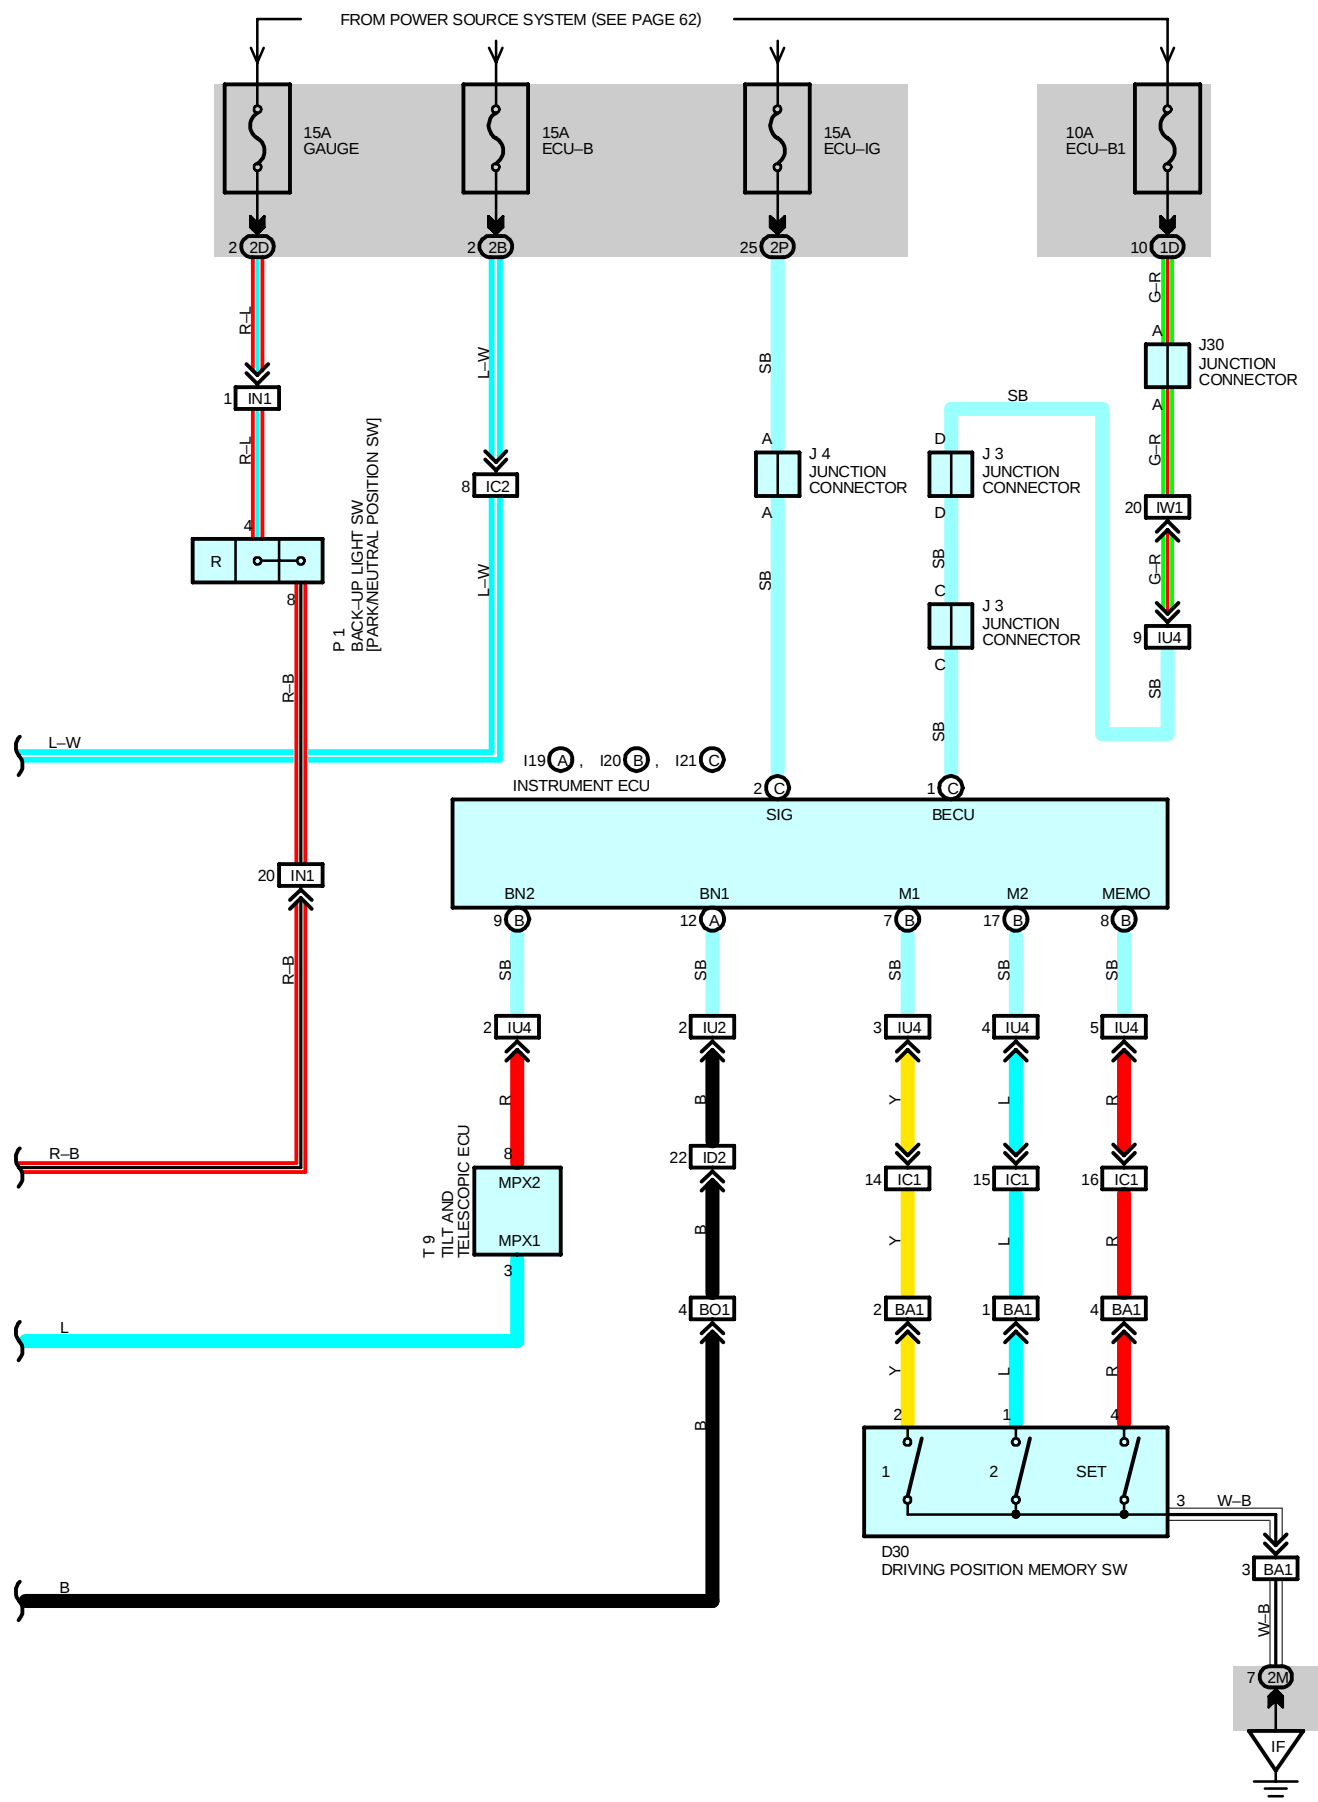

SYSTEM OUTLINE

When the ignition SW is turned on, the outer mirrors can be operated. When the remote control mirror SW is operated, a signal is input to the remote control mirror ECU, and the outer mirror can be adjusted to the desired position. In this system, the position sensor detects the number of rotations of each motor (Movement amount of each mirror) and inputs it to the remote control mirror ECU. This makes it possible to store and recall the outer mirror position using the driving position memory SW. The outer mirror position is stored and recalled through communication control of the instrument ECU. When the remote control mirror SW (Select SW) is moved to the left side from neutral position, while the ignition SW is on and the shift lever is in R position, the outer mirror LH, RH moves downward a little bit. In this case, it is not necessary to operate the remote control mirror SW for approx. 120 seconds.

SERVICE HINTS

R5 REMOTE CONTROL MIRROR SW

1-GROUND : Approx. **12** volts with ignition SW at **ACC** or **ON** position

4-GROUND : Always continuity

R30 REMOTE CONTROL MIRROR ECU

2-GROUND : Approx. **12** Volts with ignition SW at **ON** or **ST** position

14-GROUND : Always continuity

: PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
D30		40	J13		39	R4	A	39
I19	A	38	J19		39	R5	B	39
I20	B	38	J20		39	R30		41
I21	C	38	J30		39	R31		41
J3		39	P1		37	R32		41
J4		39	P24		42	T9		39

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1D	21	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
2B	24	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
2M	24	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2P	26	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3G	30	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)
3I	30	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	46	Front Door LH Wire and Dash Wire (Left Kick Panel)
IC2		
ID2	46	Dash Wire and Floor Wire (Left Kick Panel)
IF1	46	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF2		
IN1	50	Engine Wire and Dash Wire (Behind the Glove Box)
IU1	50	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU2		
IU4		
IW1	52	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
IY2	52	Front Door RH Wire and Dash Wire (Right Kick Panel)
BA1	54	Front Door LH Wire and Front Door LH Sub Wire (Front Door LH)
BO1	56	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BP1	58	Floor Wire and Front Seat LH Wire (Front Side Under the Driver's Seat)

REMOTE CONTROL MIRROR



: GROUND POINTS

Code	See Page	Ground Points Location
IF	46	Set Bolt of Cowl Side J/B LH



: SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B1	56	Front Door LH Wire			

