


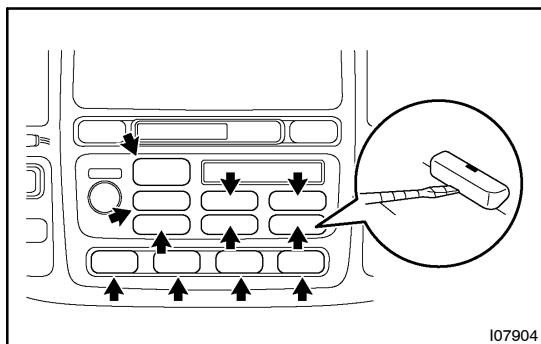


DISASSEMBLY

1. REMOVE KNOB

- (a) Pull out the dial knobs.
- (b) Using a screwdriver, pull out the switch knobs.


HINT:

Tape the screwdriver tip before use.

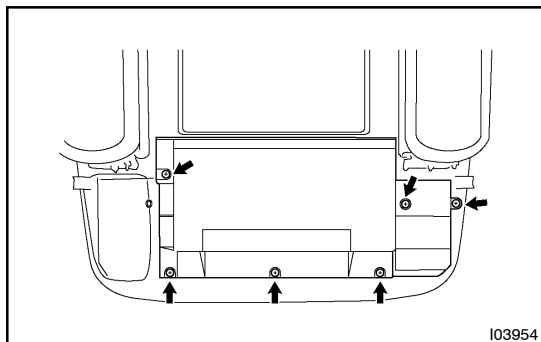


2. REMOVE A/C AMPLIFIER


- (a) Remove the 6 screws and cover.

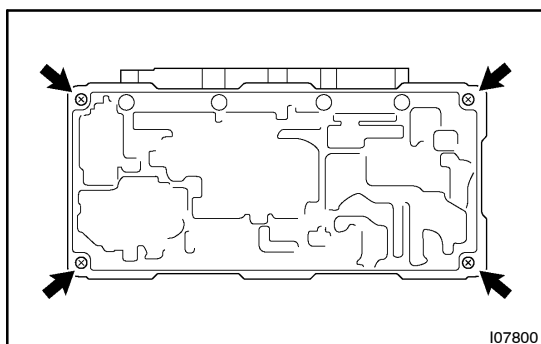

- (b) Remove the 4 set screws.

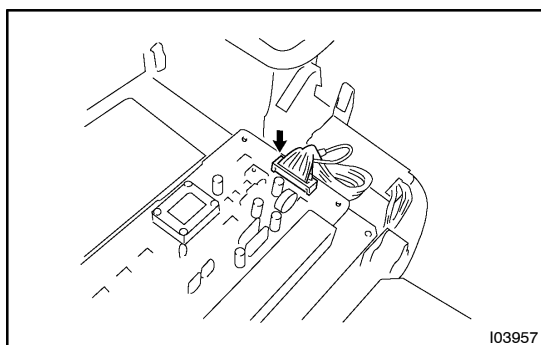


- (c) Disconnect the connector and remove the A/C amplifier.

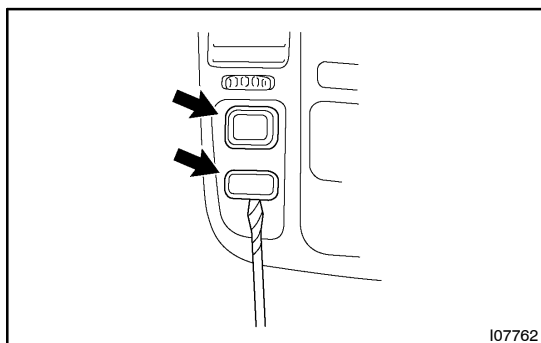


3. REMOVE DIFF LOCK AND HAZARD SWITCH

- (a) Using a screwdriver, pull out the knob.

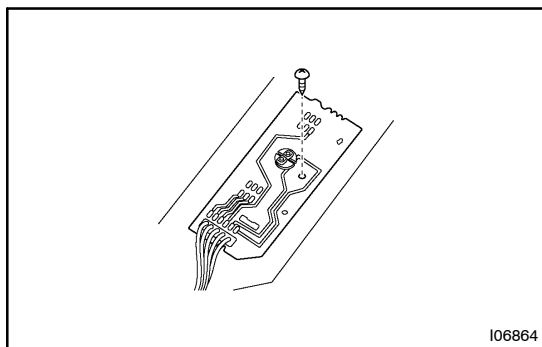


- (b) Remove the screw and diff lock and hazard switch.

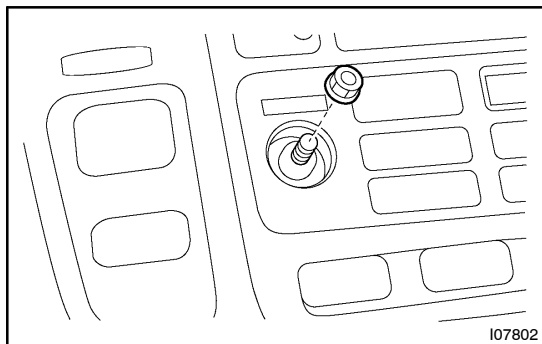


4. REMOVE HEATER CONTROL

- (a) Remove the nut from the control switch.

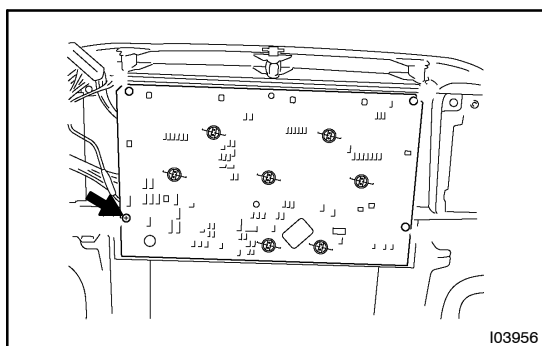


- (b) Remove the screw and heater control ,then disconnect the connectors.

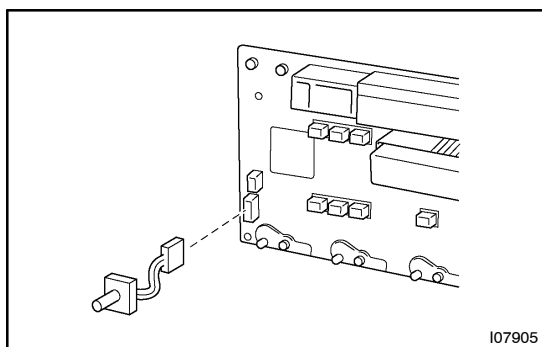


5. REMOVE CONTROL SWITCH

Disconnect the connectors and remove the control switches.

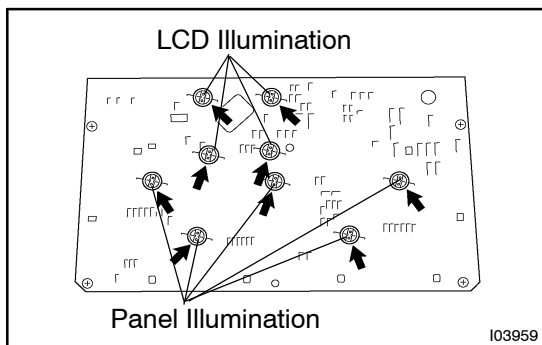

6. REMOVE BULBS

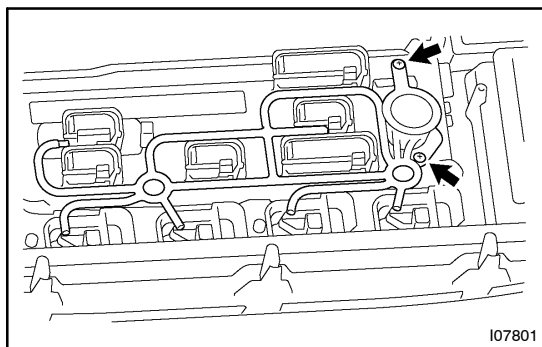**7. REMOVE HEATER CONTROL LENS**

Remove the 2 screws and heater control lens.