


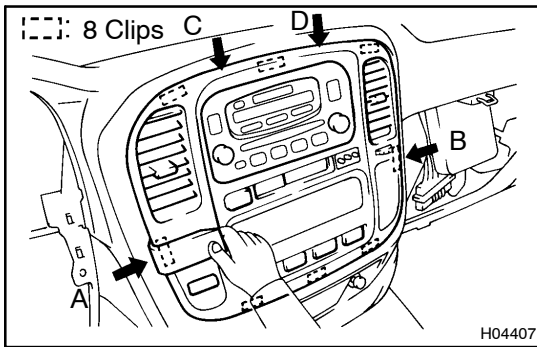

REMOVAL

REMOVE A/C CONTROL ASSEMBLY

- Using a moulding remover, remove the center cluster in order "A", "B", "C", "D".
- Disconnect the connector.