


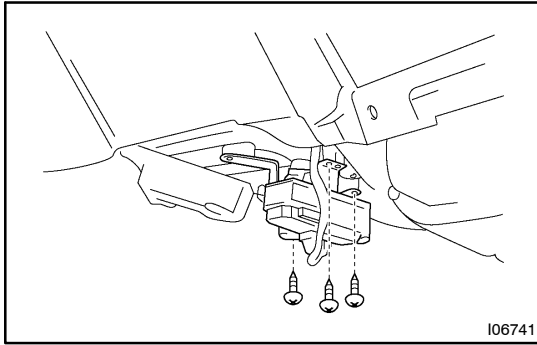

## AIR MIX SERVOMOTOR (for Front A/C)

AC1LK-04

### INSPECTION

- 1. REMOVE AIR MIX SERVOMOTOR**
  - (a) Disconnect the connector.
  - (b) Remove the 2 screws and air mix servomotor.
- 2. INSPECT AIR MIX SERVOMOTOR OPERATION**  
(See page [DI-862](#))
- 3. INSPECT AIR MIX DAMPER POSITION SENSOR**  
(See page [DI-853](#))
- 4. INSTALL SERVOMOTOR**
  - (a) Install the servomotor with the 3 screws.
  - (b) Connect the connector.