


REMOVAL

1. RUN ENGINE AT IDLE SPEED WITH A/C ON FOR APPROX. 10 MINUTES
2. STOP ENGINE
3. DISCONNECT NEGATIVE (-) TERMINAL CABLE FROM BATTERY
4. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM
5. REMOVE ENGINE UNDER COVER
6. REMOVE DRIVE BELT (See page [AC-16](#))

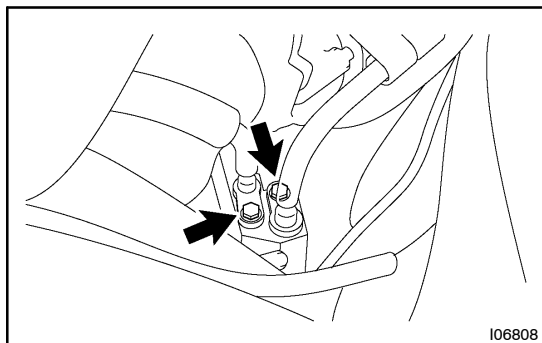


7. DISCONNECT DISCHARGE AND SUCTION HOSES
- Remove the 2 bolts and disconnect the both suction hoses.

NOTICE:

Cap the open fitting immediately to keep moisture or dirt out of the system.

8. REMOVE FRONT DRIVE SHAFT LH
(See page [SA-24](#))

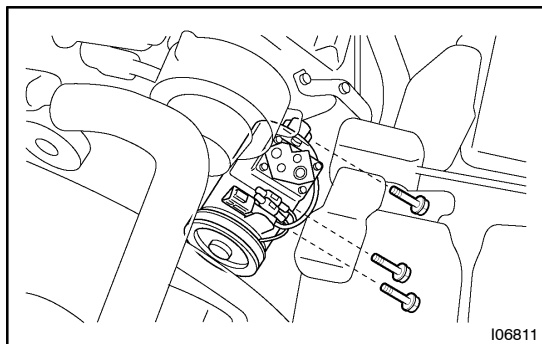

9. REMOVE COMPRESSOR
 - (a) Disconnect the connector.
 - (b) Remove the 3 bolts and compressor.