



REAR HEATER RELAY INSPECTION

AC1LW-03


- 1. REMOVE FRONT DOOR SCUFF PLATE LH
- 2. REMOVE COWL SIDE TRIM LH

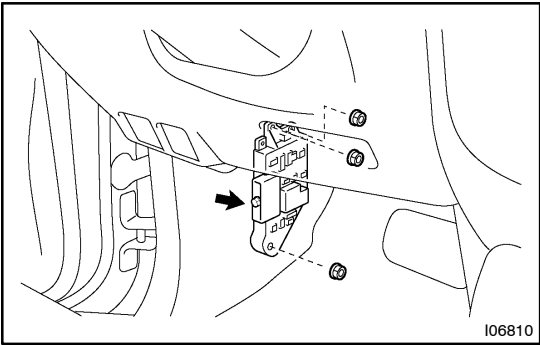

- 3. REMOVE REAR HEATER RELAY
 - (a) Remove the 3 No.2 junction block set nuts.
 - (b) Loosen the bolt and disconnect the connector.
 - (c) Pull out the junction block.

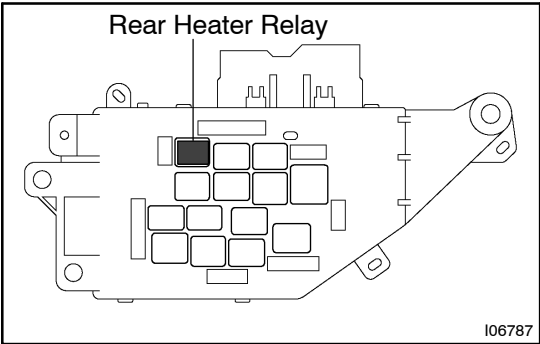

- (d) Remove the rear heater relay

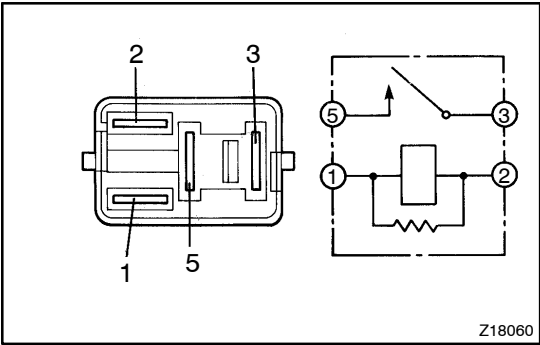

4. INSPECT REAR HEATER RELAY CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 - 2	Continuity
Apply B+ between terminals 1 and 2.	3 - 5	Continuity

If continuity is not as specified, replace the relay.

- 5. INSTALL RELAY
- 6. INSTALL 3 NO.2 JUNCTION BLOCK SET NUTS
- 7. INSTALL COWL SIDE TRIM LH
- 8. INSTALL FRONT DOOR SCUFF PLATE LH