


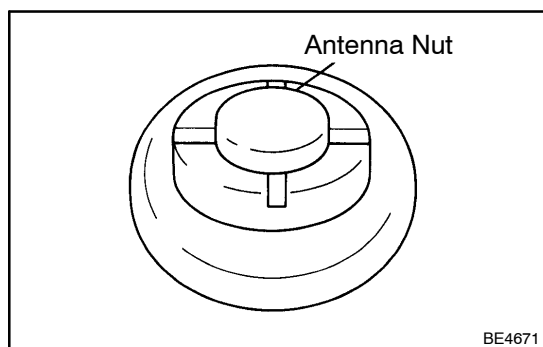

REPLACEMENT

1. Auto Antenna Models: REMOVE ANTENNA ROD

HINT:

Do this operation with the battery negative (-) cable connected to the battery terminal.



- Remove the antenna nut.
- Radio switch to "ON" position.
- Antenna switch to "UP". (1/2 or more for antenna rod)
- Antenna rod catch to hand and radio switch "OFF".
- Try again radio switch "ON" and antenna switch "UP".
- Remove antenna rod.

HINT:

The rod will extend fully and be released from the motor antenna.

NOTICE:

To prevent body damage when the antenna rod is released, hold the rod while it comes out.

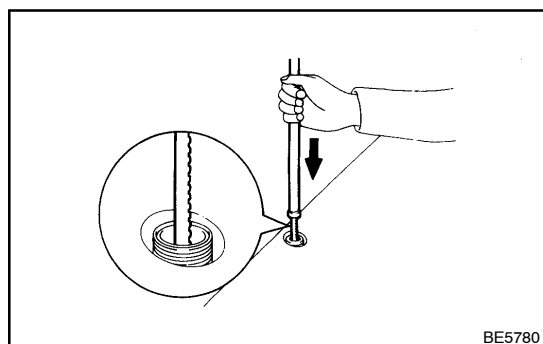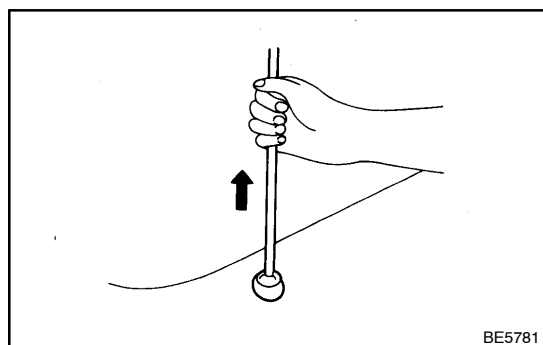

2. Auto Antenna Models: INSTALL ANTENNA ROD

- Insert the cable of the rod until it reaches the bottom.

HINT:

- When inserting the cable, the teeth on the cable must face toward the rear of the vehicle.
- Insert the antenna approx. 350 mm.

- Radio switch to "OFF".

HINT:

- In case the cable is not wound, twist it, as shown in the illustration.
- Even if the rod has not retracted fully, install the antenna nut and inspect the antenna rod operation. It will finally retract fully.

- Inspect the antenna rod operation by pushing the radio wave band select buttons.

