

BODY ELECTRICAL - AUDIO SYSTEM

Tester connection	Condition	Specified condition
A1 – Ground A4 – Ground D1 – Ground	Constant	Continuity
A6 – Ground	Ignition switch LOCK and radio switch ON	No voltage
A6 – Ground	Ignition switch ACC or ON and radio switch ON	Battery positive voltage
A2 – Ground	Constant	Battery positive voltage
A5 – Ground	Constant	Battery positive voltage

If the circuit is not as specified, inspect the circuits connected to other parts.