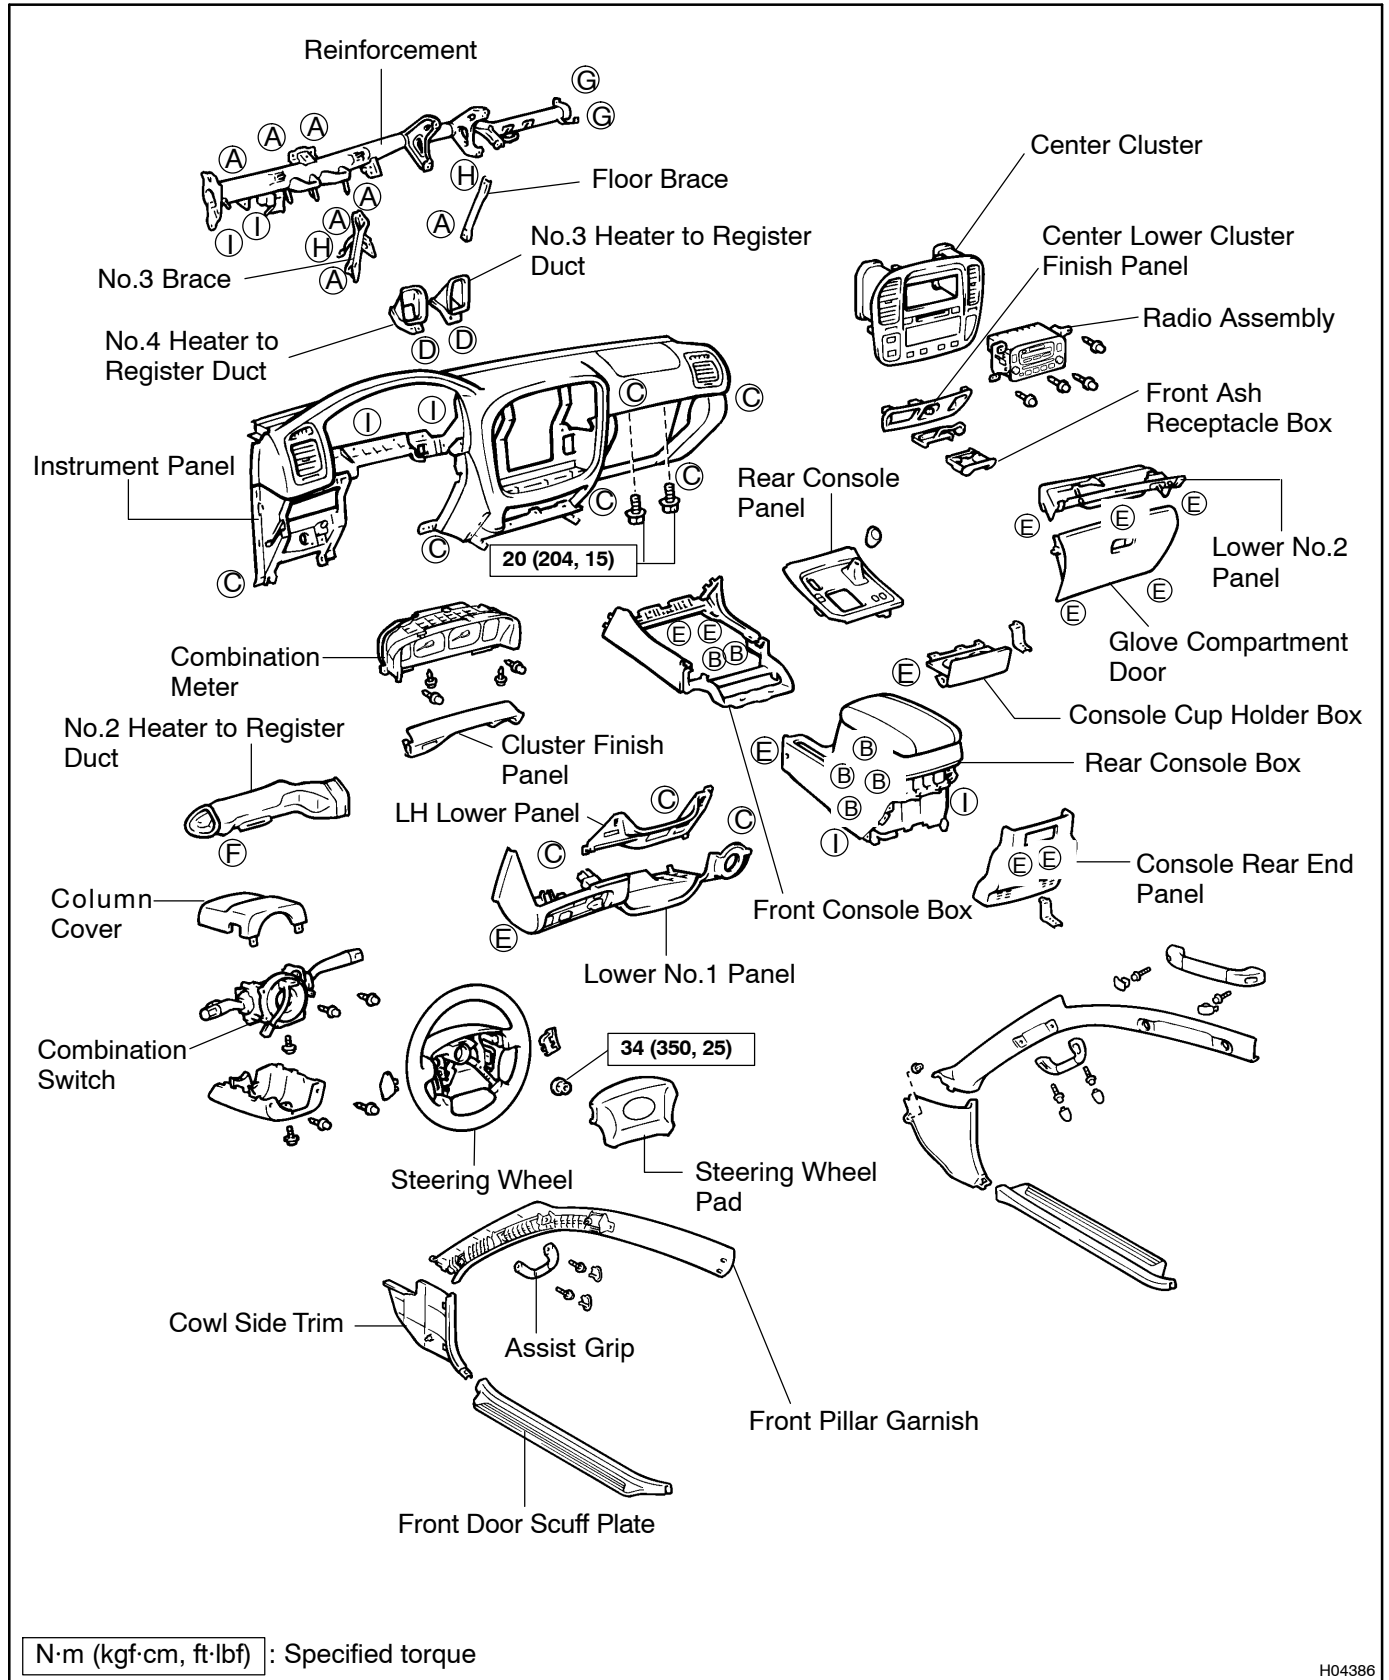
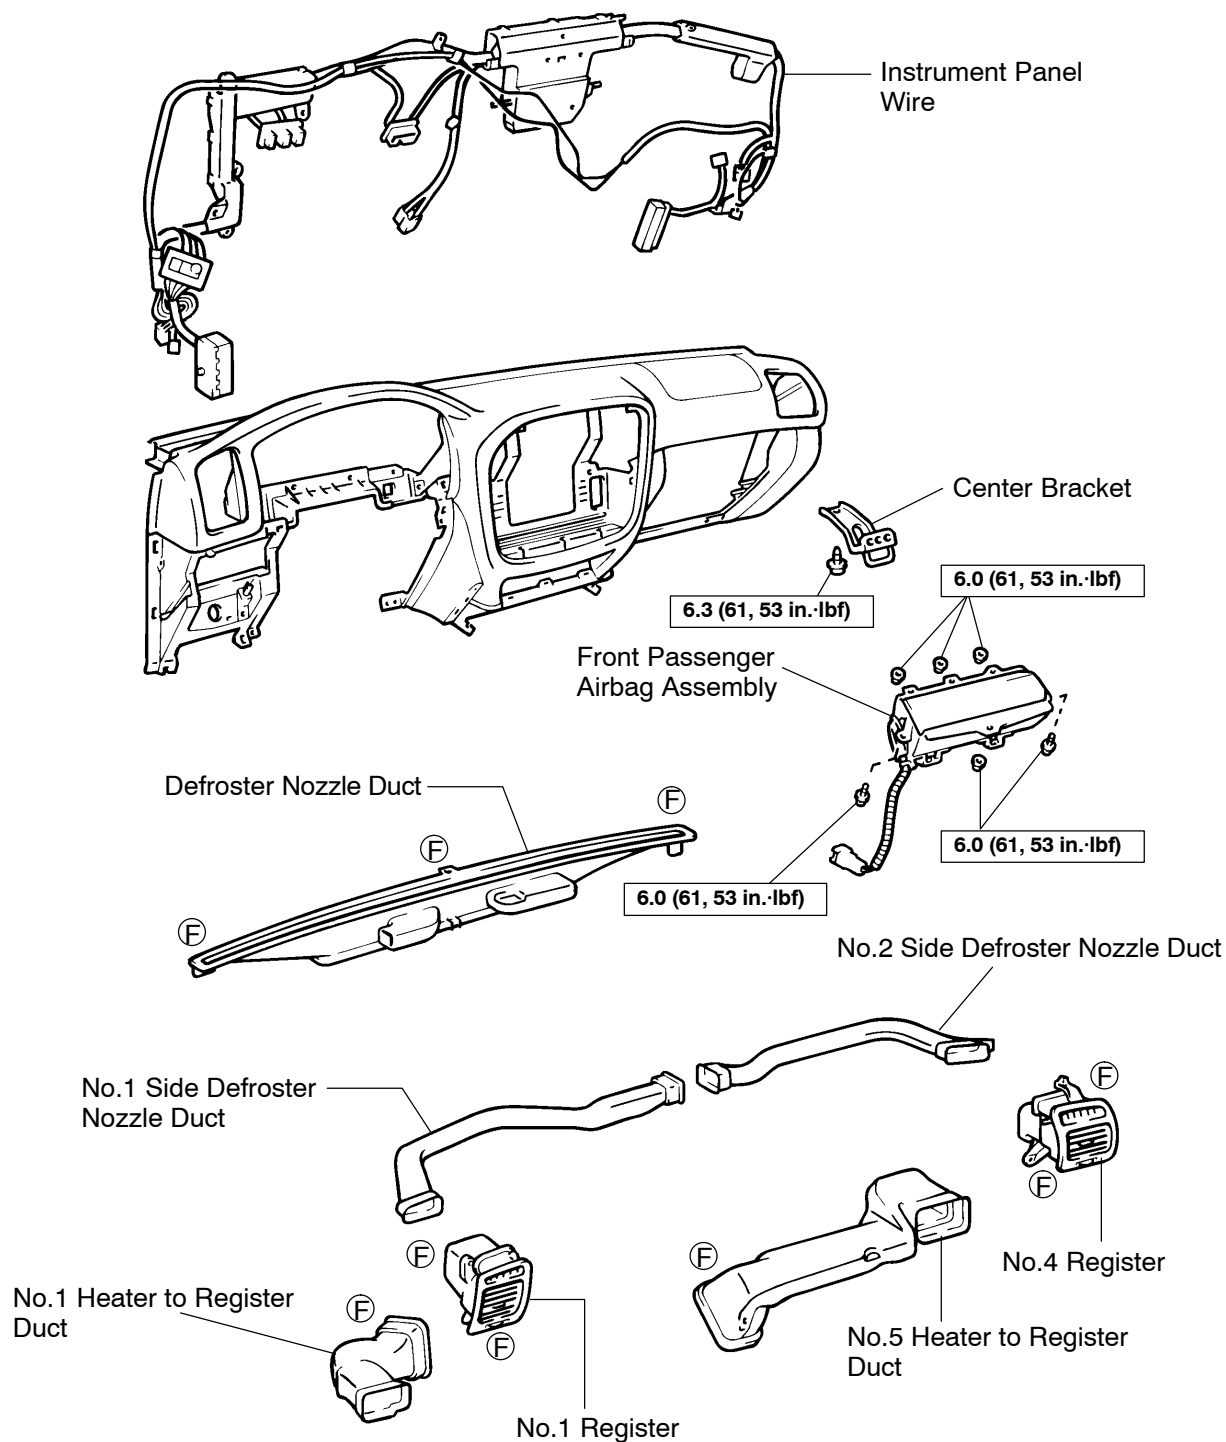


INSTRUMENT PANEL COMPONENTS

BO1ML-01



H04386

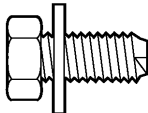
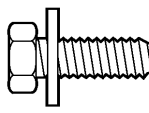
 
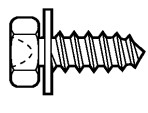
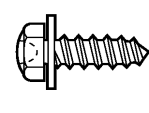
 
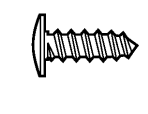
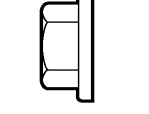
 


N·m (kgf·cm, ft·lbf) : Specified torque

H04819

HINT:

Screw shapes and size are indicated in the table below. The codes ("A" – "I") correspond to those indicated on the previous page.

mm (in.)								
	Shape	Size		Shape	Size		Shape	Size
(A)		ø = 8 (0.31) L = 16 (0.63)	(B)		ø = 6 (0.24) L = 18 (0.71)	(C)		ø = 6 (0.24) L = 16 (0.63)
(D)		ø = 6 (0.24) L = 16 (0.63)	(E)		ø = 5 (0.20) L = 16 (0.63)	(F)		ø = 5 (0.25) L = 14 (0.55)
(G)		ø = 5 (0.20) L = 14 (0.55)	(H)		ø = 8 (0.31)	(I)		ø = 6 (0.24)

H04082