



## ADJUSTMENT

### 1. ADJUST DOOR IN FORWARD/REARWARD AND VERTICAL DIRECTIONS

- Remove the front door scuff plate.
- Remove the rear door scuff plate.
- Remove the front door opening trim.
- Remove the rear door opening trim.
- Remove the center pillar lower garnish.

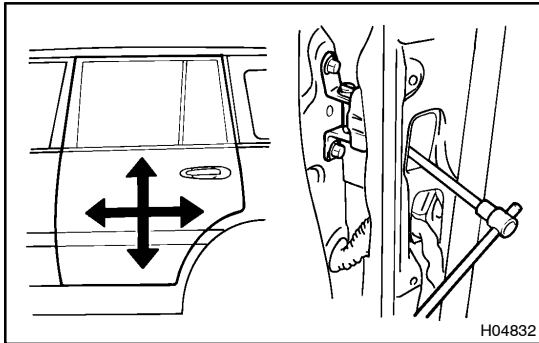


- Loosen the body side hinge nuts to adjust.  
**Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)**
- Install the removed parts.

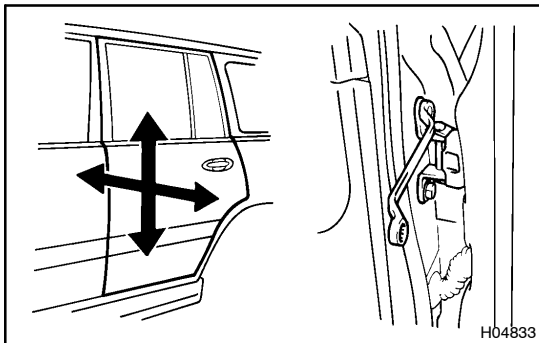

### 2. ADJUST DOOR IN LEFT/RIGHT AND VERTICAL DIRECTIONS

Loosen the door side hinge bolts to adjust.

**Torque: 26 N·m (265 kgf·cm, 19 ft·lbf)**

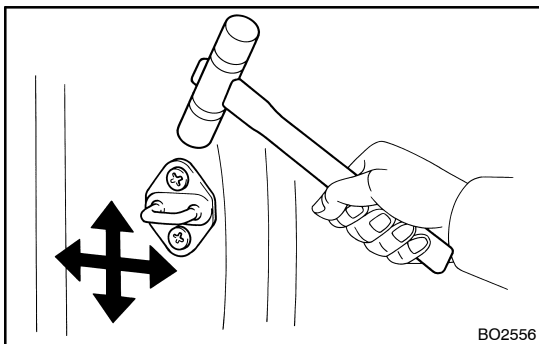

### 3. ADJUST DOOR LOCK STRIKER

- Check that the door fit and door lock linkages are adjusted correctly.
- Loosen the striker mounting screws to adjust.  
**Torque: 11 N·m (115 kgf·cm, 8 ft·lbf)**
- Using a plastic hammer, tap the door lock striker to adjust it.