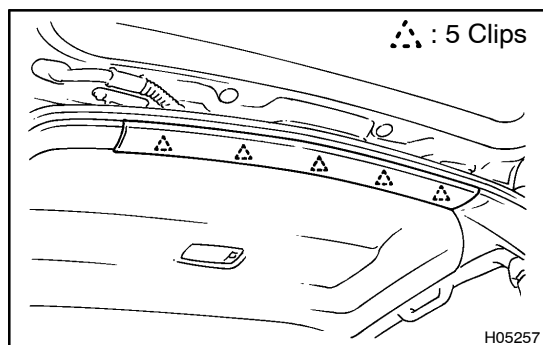


REMOVAL

1. REMOVE REAR NO.2 SEAT

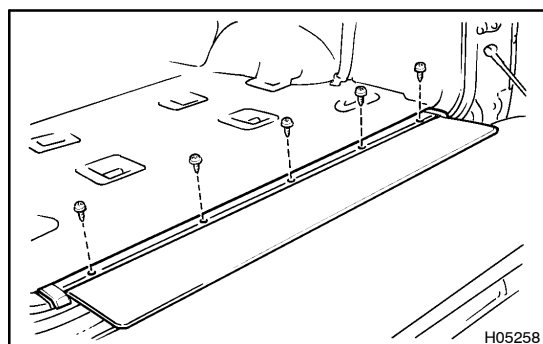


2. REMOVE ROOF HEADLINING REAR TRIM

Using a screwdriver, remove the roof headlining rear trim.

HINT:

Tape the screwdriver tip before use.



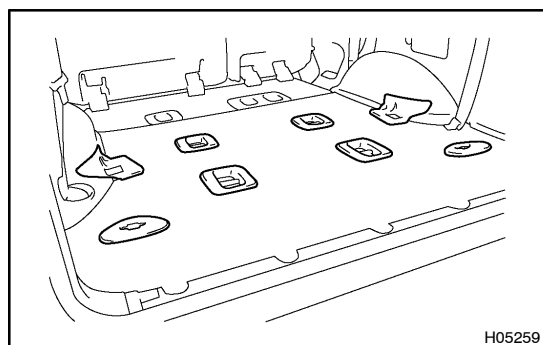
3. REMOVE REAR MAT SET PLATE

(a) Remove the 5 screws.

(b) Using a screwdriver, remove the rear mat set plate.

HINT:

Tape the screwdriver tip before use.



4. REMOVE NO.3 REAR SEAT PROTECTOR

(a) Remove the screw.

(b) Remove the No.3 rear seat protector.

5. REMOVE THESE PARTS:

(a) Rear floor carpet

(b) Rear No.2 seat outer belt floor anchors

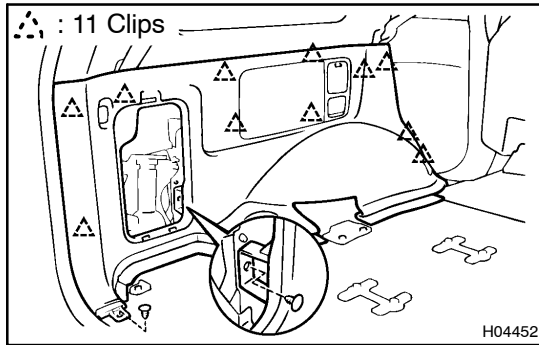
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

(c) Rear No.1 seat outer belt floor anchors

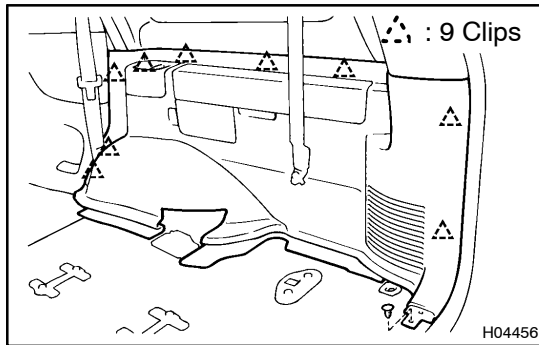
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

(d) Rear door scuff plates

(e) Rear door opening trims

**6. REMOVE LH QUARTER TRIM PANEL**

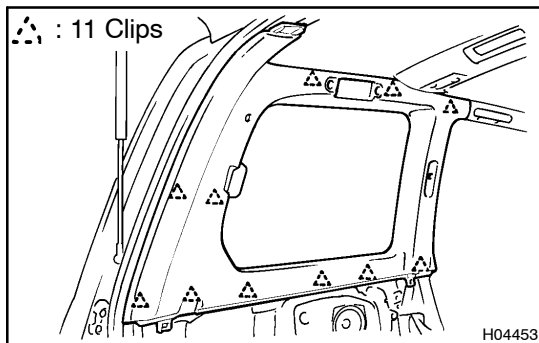
- (a) Remove the quarter trim jack cover.
- (b) Using a clip remover, remove the 2 clips.
- (c) Remove the LH quarter trim panel, then disconnect the connector.

**7. REMOVE RH QUARTER TRIM PANEL**

- (a) Using a clip remover, remove the clip.
- (b) Remove the RH quarter trim panel.

8. REMOVE THESE PARTS:

- (a) Rear No.2 seat outer belt shoulder anchors
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)
- (b) Rear No.1 seat outer belt shoulder anchors
Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

**9. REMOVE UPPER ROOF SIDE INNER GARNISH**

- (a) Using a screwdriver, remove the assist grip plugs, then remove the 4 screws and assist grips.

HINT:

Tape the screwdriver tip before use.

- (b) Using a screwdriver, remove the upper roof side inner garnishes.

HINT:

Tape the screwdriver tip before use.

10. REMOVE THESE PARTS:

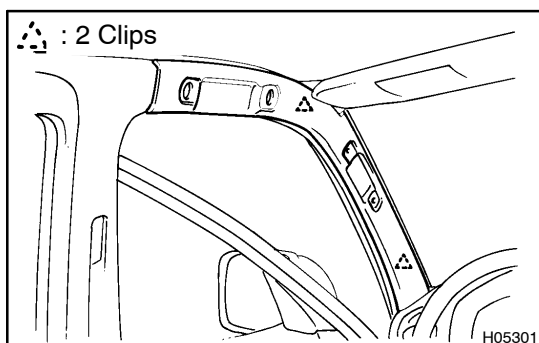
- (a) Front door scuff plates
- (b) Cowl side trims
- (c) Front door opening trims

11. REMOVE FRONT PILLAR GARNISH

- (a) Using a screwdriver, remove the assist grip plugs, then remove the 6 screws and 3 assist grips.

HINT:

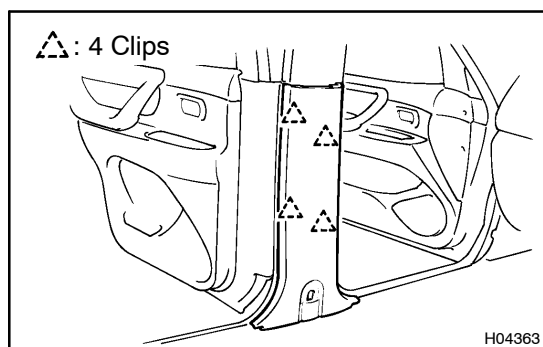
Tape the screwdriver tip before use.



- (b) Using a screwdriver, remove the front pillar garnishes.

HINT:

Tape the screwdriver tip before use.

**12. REMOVE CENTER PILLAR LOWER GARNISH**

- (a) Using a screwdriver, remove the seat belt floor anchor cover caps.

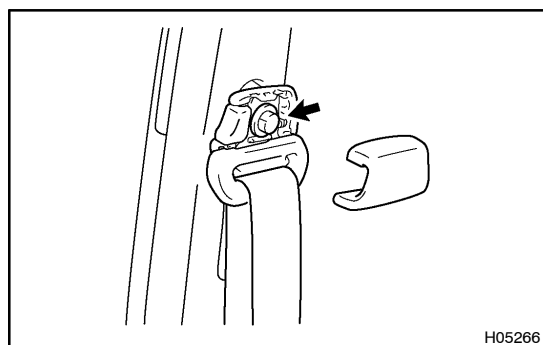
HINT:

Tape the screwdriver tip before use.

- (b) Remove the bolts and front seat outer belt floor anchors.
 (c) Using a screwdriver, remove the center pillar lower garnishes as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

**13. REMOVE CENTER PILLAR UPPER GARNISH**

- (a) Using a screwdriver, remove the seat belt anchor cover caps.

HINT:

Tape the screwdriver tip before use.

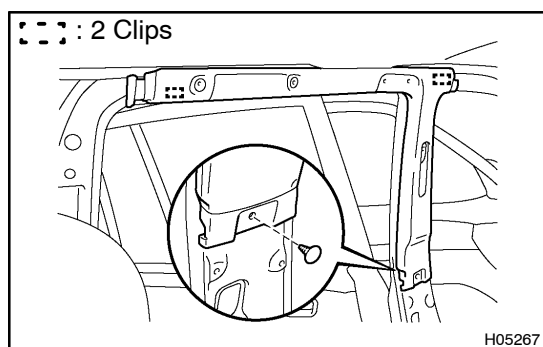
- (b) Remove the bolts and front seat outer belt shoulder anchors.

Torque: 43 N·m (440 kgf·cm, 32 ft·lbf)

- (c) Using a screwdriver, remove the 8 assist grip plugs, then remove the 8 screws and 4 assist grips.

HINT:

Tape the screwdriver tip before use.



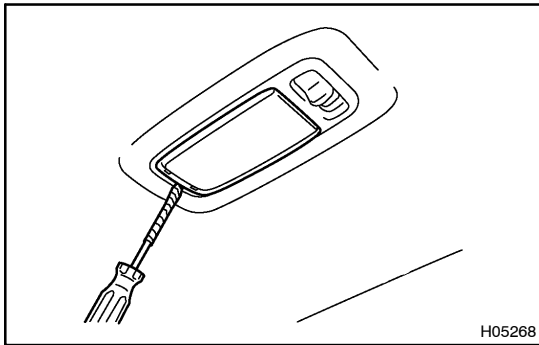
- (d) Using a clip remover, remove the clips.
 (e) Using a screwdriver, remove the center pillar upper garnishes.

HINT:

Tape the screwdriver tip before use.

14. REMOVE THESE PARTS:

- (a) Sun visors
 (b) Double visors
 (c) Holders
 (d) Rear cooler control assembly
 (e) Rear temperature gauge

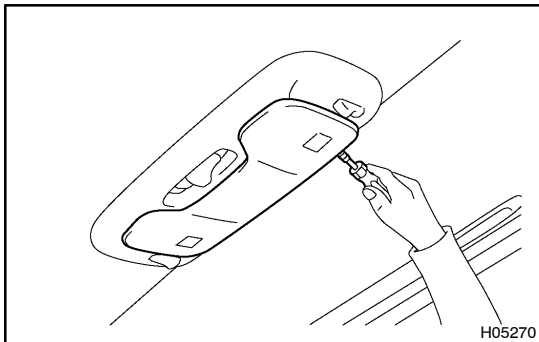
**15. REMOVE DOME LIGHT**

- (a) Using a screwdriver, remove the lens as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

- (b) Remove the 4 screws and dome light, then disconnect the connector.

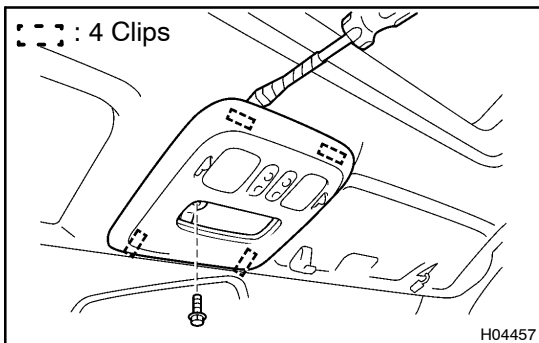
**16. w/ Sliding Roof:
REMOVE MAP LIGHT**

- (a) Using a screwdriver, remove the lens as shown in the illustration.

HINT:

Tape the screwdriver tip before use.

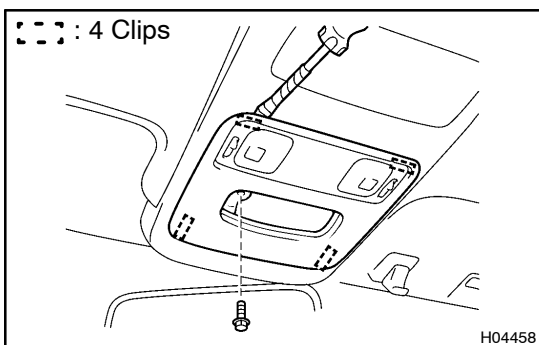
- (b) Remove the 4 screws and map light, then disconnect the connector.

**17. w/ Sliding Roof:
REMOVE OVERHEAD CONSOLE BOX**

- (a) Remove the bolt.
- (b) Using a screwdriver, remove the overhead console box, then disconnect the connector.

HINT:

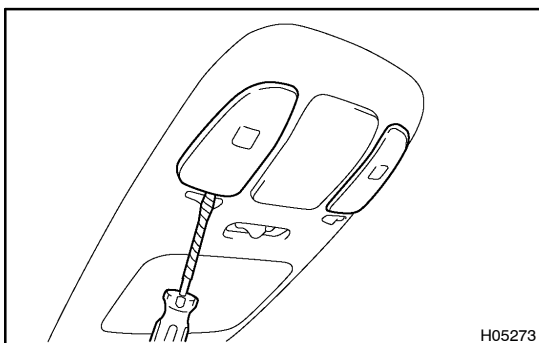
Tape the screwdriver tip before use.

**18. w/o Sliding Roof:
REMOVE OVERHEAD CONSOLE BOX**

- (a) Remove the bolt.
- (b) Using a screwdriver, remove the map light assembly, then disconnect the connector.

HINT:

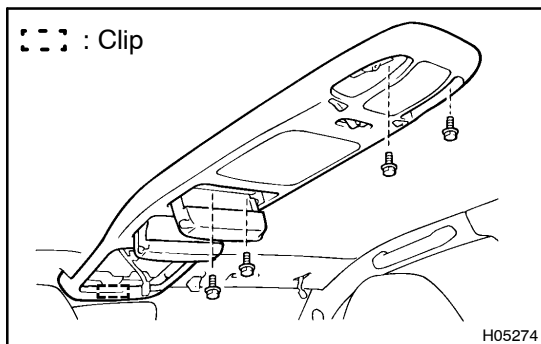
Tape the screwdriver tip before use.



- (c) Using a screwdriver, remove the 2 lenses.

HINT:

Tape the screwdriver tip before use.



(d) Remove the 4 bolts.

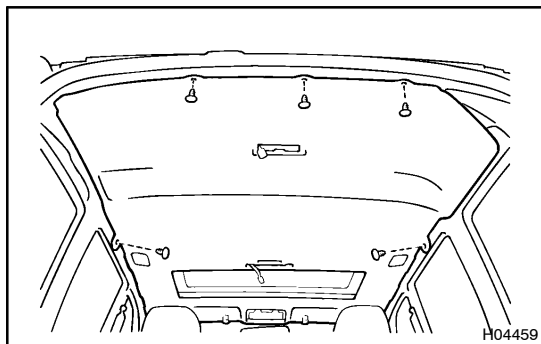
(e) Using a screwdriver, remove the overhead console box, then disconnect the connector.

HINT:

Tape the screwdriver tip before use.

19. w/ Sliding Roof:

REMOVE SLIDING ROOF OPENING TRIM



20. REMOVE ROOF HEADLINING

Using a clip remover, remove the 5 clips and roof headlining.