


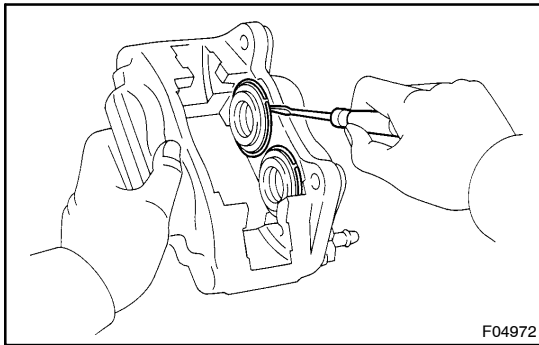


F04972

DISASSEMBLY

1. REMOVE CYLINDER BOOT SET RINGS AND CYLINDER BOOTS


Using a screwdriver, remove the 4 cylinder boot set rings and 4 cylinder boots from the caliper.

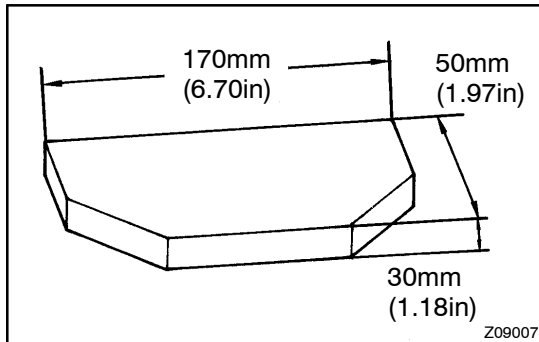

Z09007

2. REMOVE PISTONS FROM CYLINDER

(a) Prepare the wooden plate to hold the pistons.

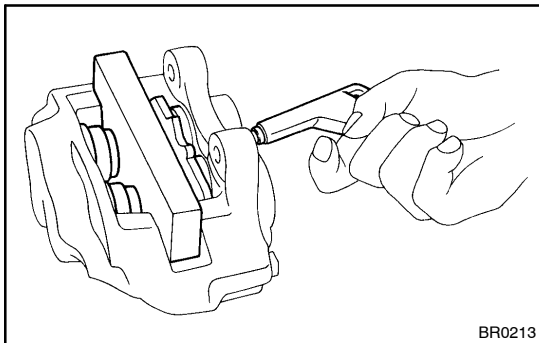


BR0213

(b) Place the plate between the pistons and insert a pad at one side.

(c) Use compressed air to remove the pistons alternately from the cylinder.

CAUTION:

Do not place your fingers in front of the piston when using compressed air.

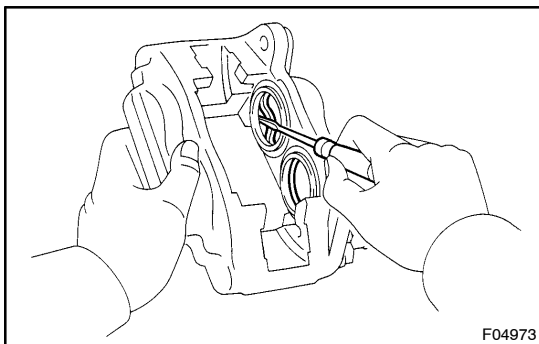

F04973

3. REMOVE PISTON SEALS FROM BRAKE CYLINDER

Using a screwdriver, remove the 4 piston seals from the cylinder.