


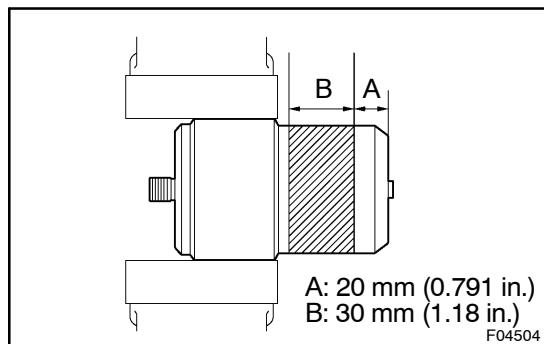

DISPOSAL

DISPOSAL METHOD OF ACCUMULATOR

- Place the accumulator in a vise, cover it with a cloth over.
- Using a saw, then cut the accumulator body slowly.

CAUTION:

Do not cut at a place except a stretch.

- When the outer body of the accumulator is cut, gas discharges.