

REMOVAL

NOTICE:

Before starting the work, make sure that the ignition switch is OFF and depress the brake pedal more than 40 times.

HINT:

When a pressure in power supply system is released, reaction force becomes light and stroke becomes longer.

NOTICE:

- As high pressure is applied to the brake actuator tube No. 1, never deform it.
- Until the work is over, do not turn the ignition switch ON.

1. DRAW OUT FLUID WITH SYRINGE

NOTICE:

Do not let brake fluid remain on a painted surface. Wash it off immediately.


2. REMOVE SCUFF PLATE, COWL SIDE TRIM, LOWER NO. 1 PANEL, LH LOWER PANEL AND NO. 2 HEATER TO REGISTER DUCT (See page [BO-93](#))

3. REMOVE ABS & TRAC & VSC ECU


Remove the 2 nuts and ABS & TRAC & VSC ECU.

Torque: 5.0 N·m (51 kgf·cm, 44 in·lbf)

4. REMOVE CHARCOAL CANISTER

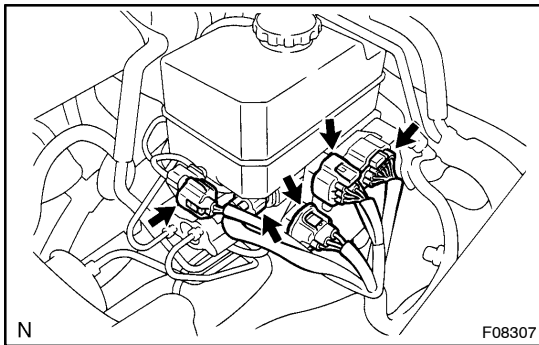

5. DISCONNECT 5 CONNECTORS

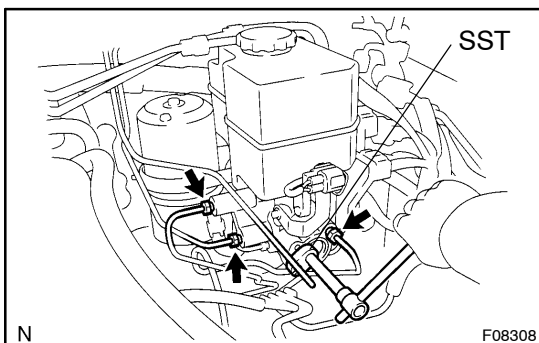


6. DISCONNECT BRAKE LINES

Using SST, disconnect the 4 brake lines.

SST 09023-00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

7. REMOVE CLIP AND CLEVIS PIN

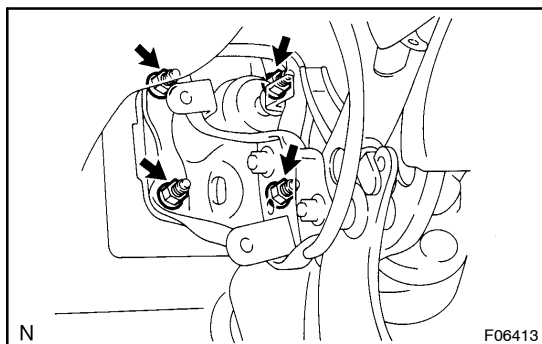**8. REMOVE HYDRAULIC BRAKE BOOSTER ASSEMBLY**

- (a) Remove the 4 booster installation nuts.
Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)
- (b) Remove the booster assembly and gasket.