

INSTALLATION

Installation is in the reverse order of removal (See page [BR-63](#)).

AFTER INSTALLATION, CHECK SPEED SENSOR SIGNAL (See page [DI-308](#)).