


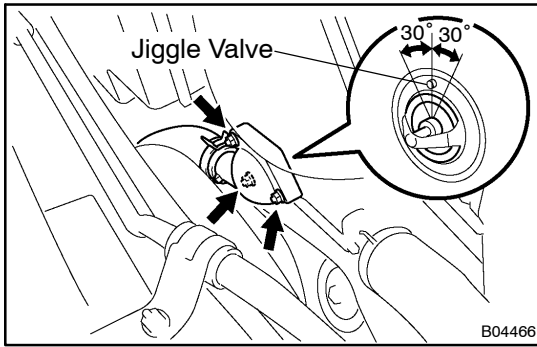

INSTALLATION

1. PLACE THERMOSTAT IN WATER INLET HOUSING

- Install a new gasket to the thermostat.
- Insert the thermostat into the water inlet housing with the jiggle valve facing straight upward.

HINT:

The jiggle valve may be set within 30° of either side of the prescribed position.

2. INSTALL WATER INLET

Install the water inlet with the 3 nuts.

Torque: 19 N·m (195 kgf·cm, 14 ft·lbf)

- FILL WITH ENGINE COOLANT**
- START ENGINE AND CHECK FOR COOLANT LEAKS**
- RECHECK ENGINE COOLANT LEVEL**