


DTC	C1340 / 47	Center Differential Lock Circuit
------------	-------------------	---

CIRCUIT DESCRIPTION

DTC No.	DTC Detecting Condition	Trouble Area
C1240 / 47	Open or short circuit in center differential lock circuit.	- Center differential lock system - Center differential lock circuit

WIRING DIAGRAM

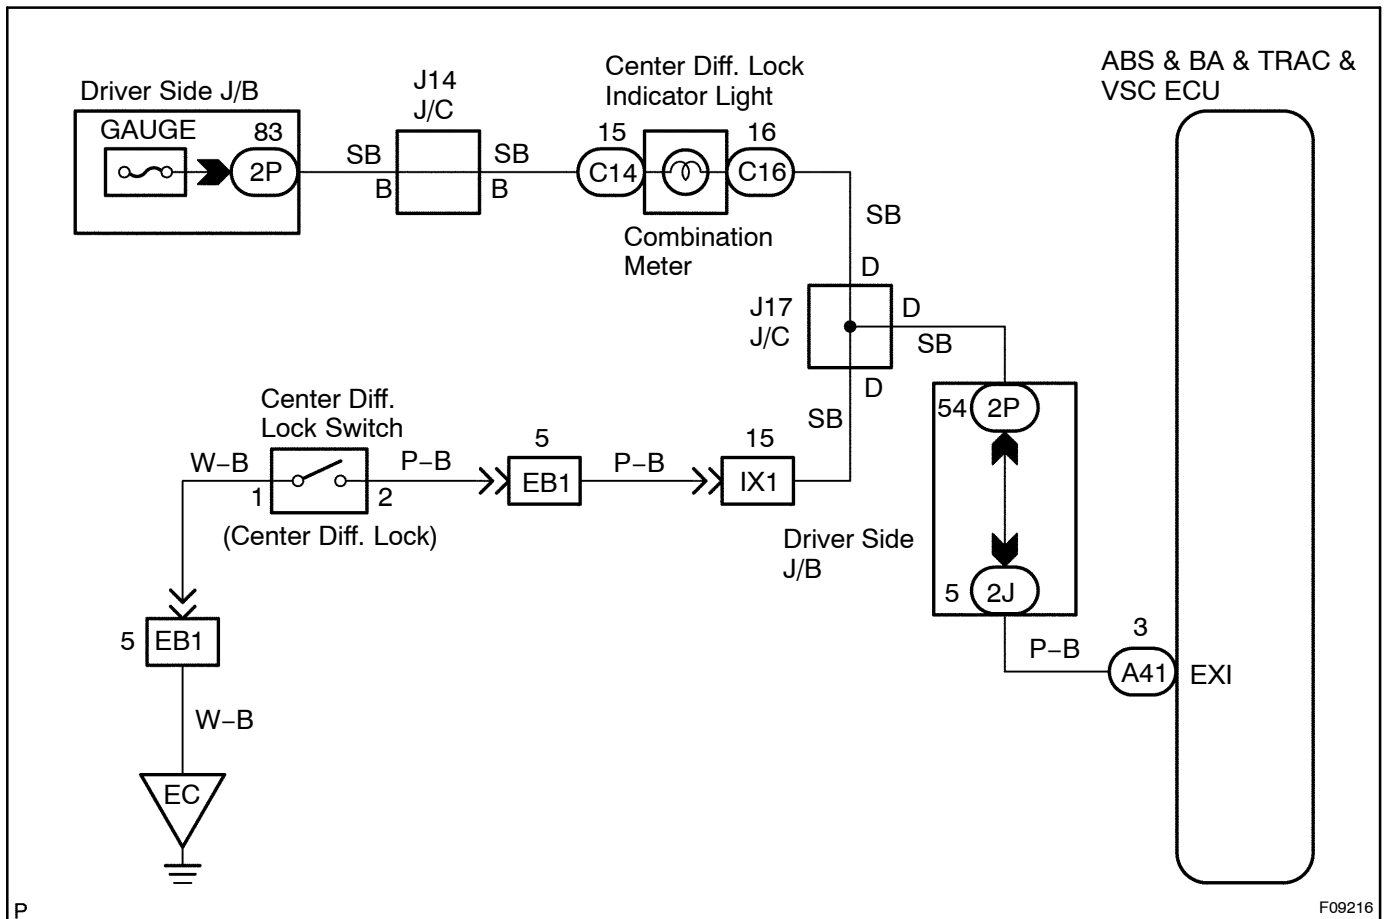

INSPECTION PROCEDURE

1	Check the center differential is free and center diff. lock switch is OFF.
----------	---

NG

Repair the center differential lock system.

OK

2 Is DTC output?Check DTC on page [DI-308](#).**NO****Normal.****YES****3 Check that bulb for center diff. lock indicator light is not burnt out.****YES****Replace indicator light.****NO****4 Check for open circuit in harness and connector between battery and center diff. lock indicator light, center diff. lock indicator light and ABS & BA & TRAC & VSC ECU (See page [IN-34](#)).****NG****Repair or replace harness or connector.****OK****Check and replace ABS & BA & TRAC & VSC ECU.**