


DTC	C1789 / 89	L4 Position Switch Circuit
------------	-------------------	-----------------------------------

CIRCUIT DESCRIPTION

This circuit is sending the signal to the ECU by detecting that the transfer shift lever is in "L4" position.

DTC No.	DTC Detecting Condition	Trouble Area
C1789 / 89	L4 position switch signal does not change	• L4 position switch • L4 position switch circuit • ECU

WIRING DIAGRAM

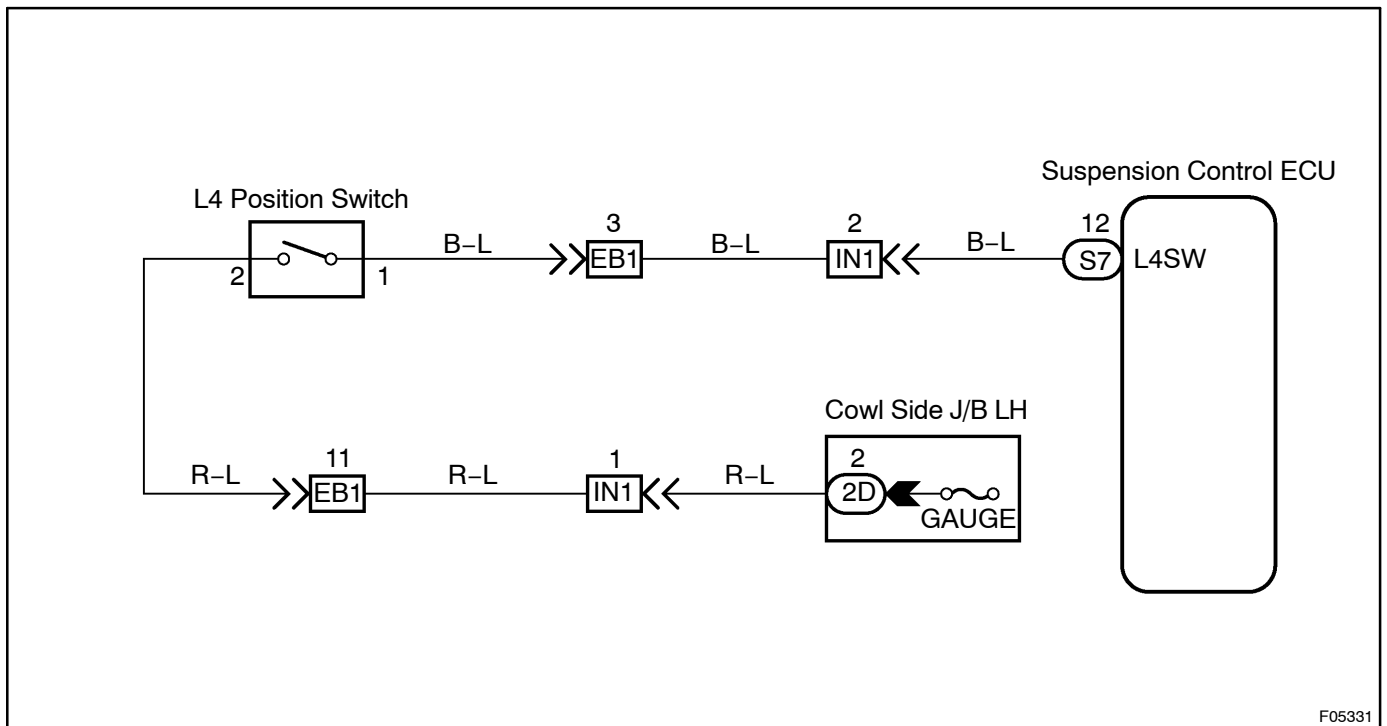

F05331

INSPECTION PROCEDURE

1	Check output signal of L4 position switch.
----------	---

IN CASE OF USING LEXUS HAND-HELD TESTER:**PREPARATION:**

- (a) Connect the LEXUS hand-held tester to the DLC3.
- (b) Turn the ignition switch ON and push the LEXUS hand-held tester main switch ON.
- (c) Select the DATALIST mode on the LEXUS hand-held tester.

CHECK:

Check the L4 position switch condition displayed on the LEXUS hand-held tester when shifting the transfer shift lever in "L4" and "H4" positions.


OK:

When the transfer shift lever is shifted in "L4" position:

"ON" is displayed for L4 position switch condition.

When the transfer shift lever is shifted in "H4" position:

"OFF" is displayed for L4 position switch condition.

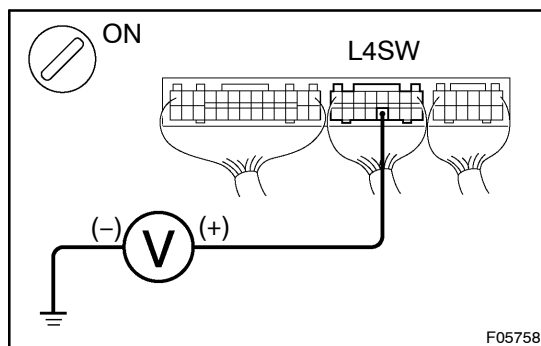**IN CASE OF NOT USING LEXUS HAND-HELD TESTER:****PREPARATION:**

Remove the suspension control ECU with connectors still connected.

CHECK:


- (a) Turn the ignition switch ON.
- (b) Measure voltage between terminal L4SW of suspension control ECU connector and body ground when transfer shift lever is shifted in "L4" and "H4" position.

OK:

Transfer shift lever position	Voltage
L4	Below 1.5 V
H4	9 – 14 V

OK**No problem.****NG**

2 Check L4 position switch.

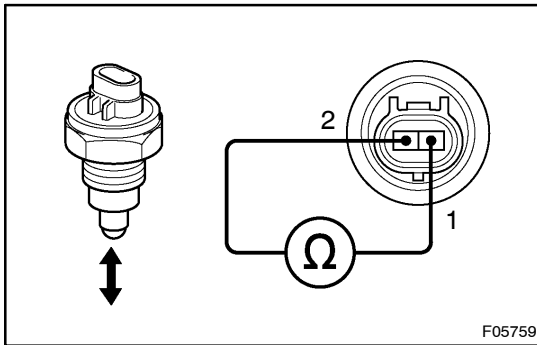

PREPARATION:

- (a) Disconnect the L4 position switch connector.
- (b) Remove the L4 position switch (See page [TR-7](#)).

CHECK:

Measure resistance between terminals 1 and 2 of L4 position switch connector when the L4 position switch pushed and released.

OK:

Switch condition	Resistance
Pushed	0 Ω (continuity)
Released	∞ Ω (Open)

NG

Replace L4 position switch.

OK

3 Check for open and short circuit in harness and connector between L4 position switch and suspension control ECU (See page [IN-34](#)).

NG

Repair or replace harness or connector.

OK

Check and replace suspension control ECU.