


Tc Terminal Circuit

CIRCUIT DESCRIPTION

Connecting terminals Tc and E₁ of the DLC1 causes the ECU to display the DTC by flashing the height control OFF indicator light.


WIRING DIAGRAM

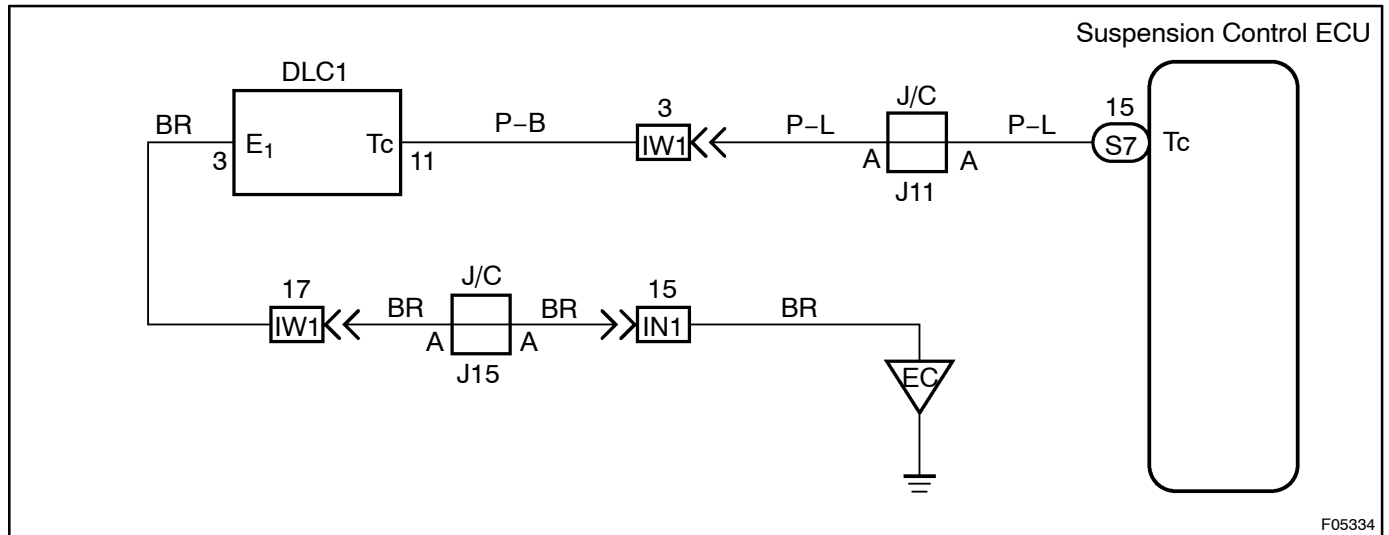

F05334

INSPECTION PROCEDURE

- | | |
|---|--|
| 1 | Check voltage between terminals Tc and E₁ of DLC1. |
|---|--|

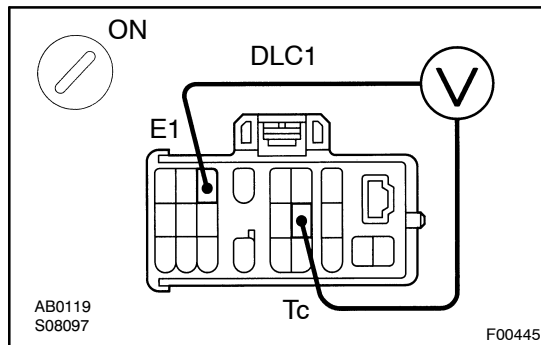**CHECK:**

- (a) Turn the ignition switch ON.
- (b) Measure the voltage between terminals Tc and E₁ of DLC1.

OK:

Voltage: 9 – 14 V

OK

No problem.

NG

- | | |
|---|--|
| 2 | Check for open and short circuit in harness and connector between suspension control ECU and DLC1, DLC1 and body ground (See page IN-34). |
|---|--|

NG

Repair or replace harness or connector.

OK

Check and replace suspension control ECU.