

INSPECTION PROCEDURE

1	Check key unlock warning switch (See page BE-26).
----------	--

NG**Replace the key unlock warning switch.****OK**

2	Check wireharness and connector between key unlock warning switch and Body ECU.
----------	--

NG**Repair or replace wireharness or connector.****OK**

**Proceed to next circuit inspection shown on
problem symptoms table
(See page [DI-743](#)).**