


Memory switch circuit (W/ memory)

WIRING DIAGRAM

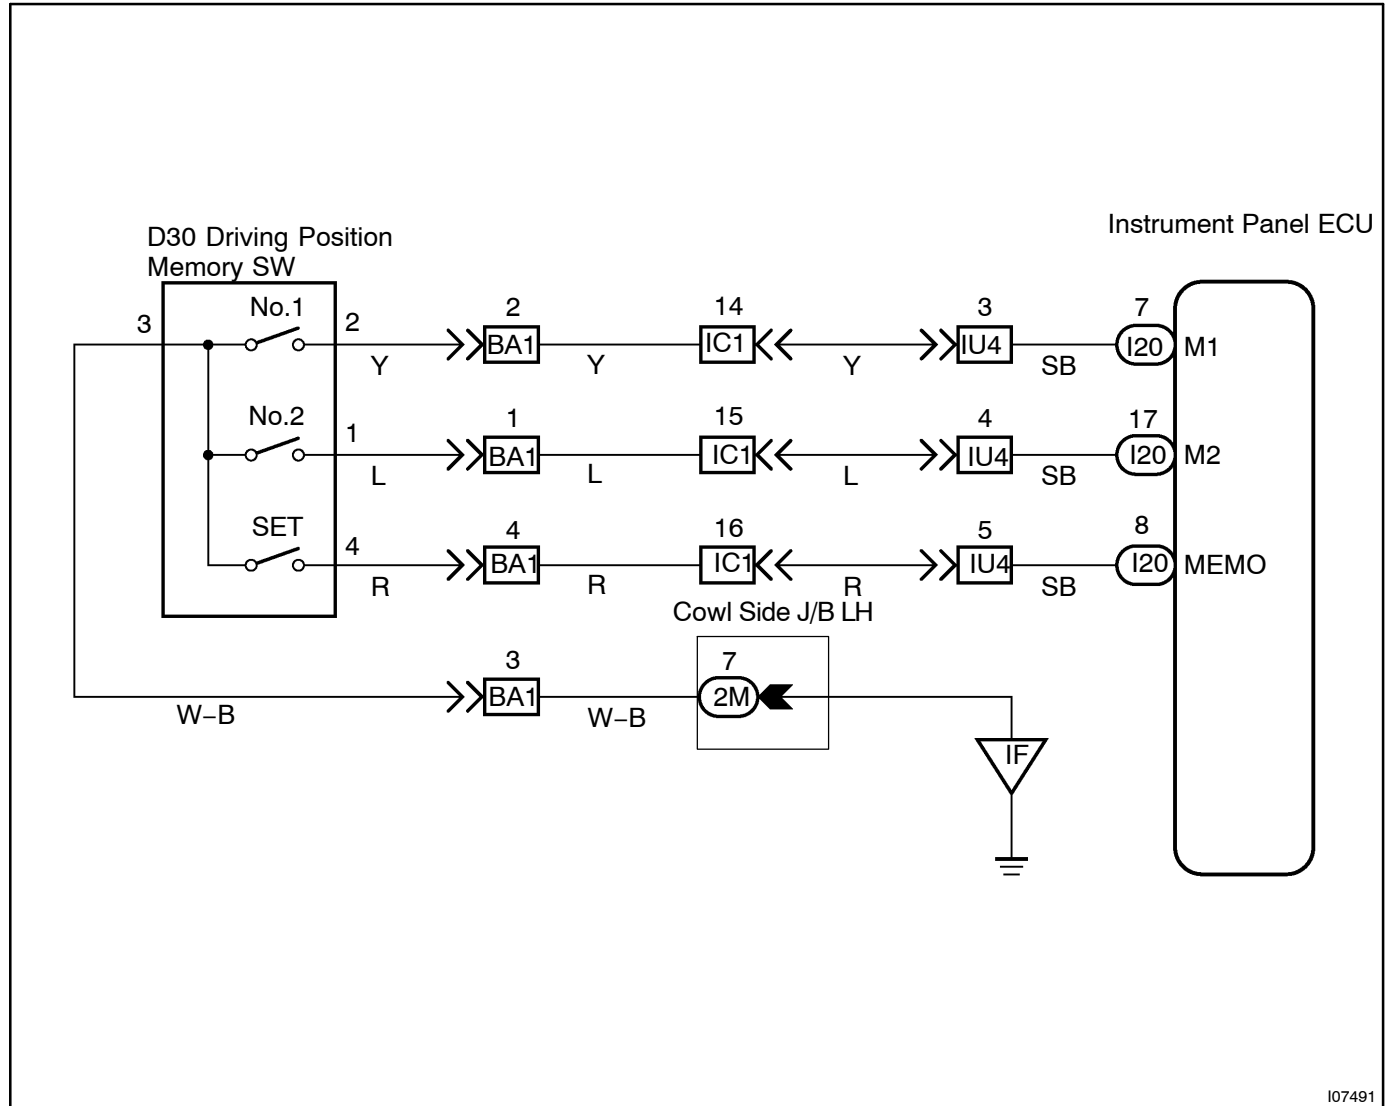

I07491

INSPECTION PROCEDURE

1	Check memory switch (See page BE-133).
----------	---

NG**Replace the memory switch.****OK**

2	Check wireharness and connector between memory switch and Body ECU.
----------	--

NG**Repair or replace wireharness or connector.****OK**

**Proceed to next circuit inspection shown on
problem symptoms table
(See page [DI-743](#)).**