


## Power main relay circuit

### CIRCUIT DESCRIPTION

Power main relay will be "ON" by operating the power window switch.

### WIRING DIAGRAM

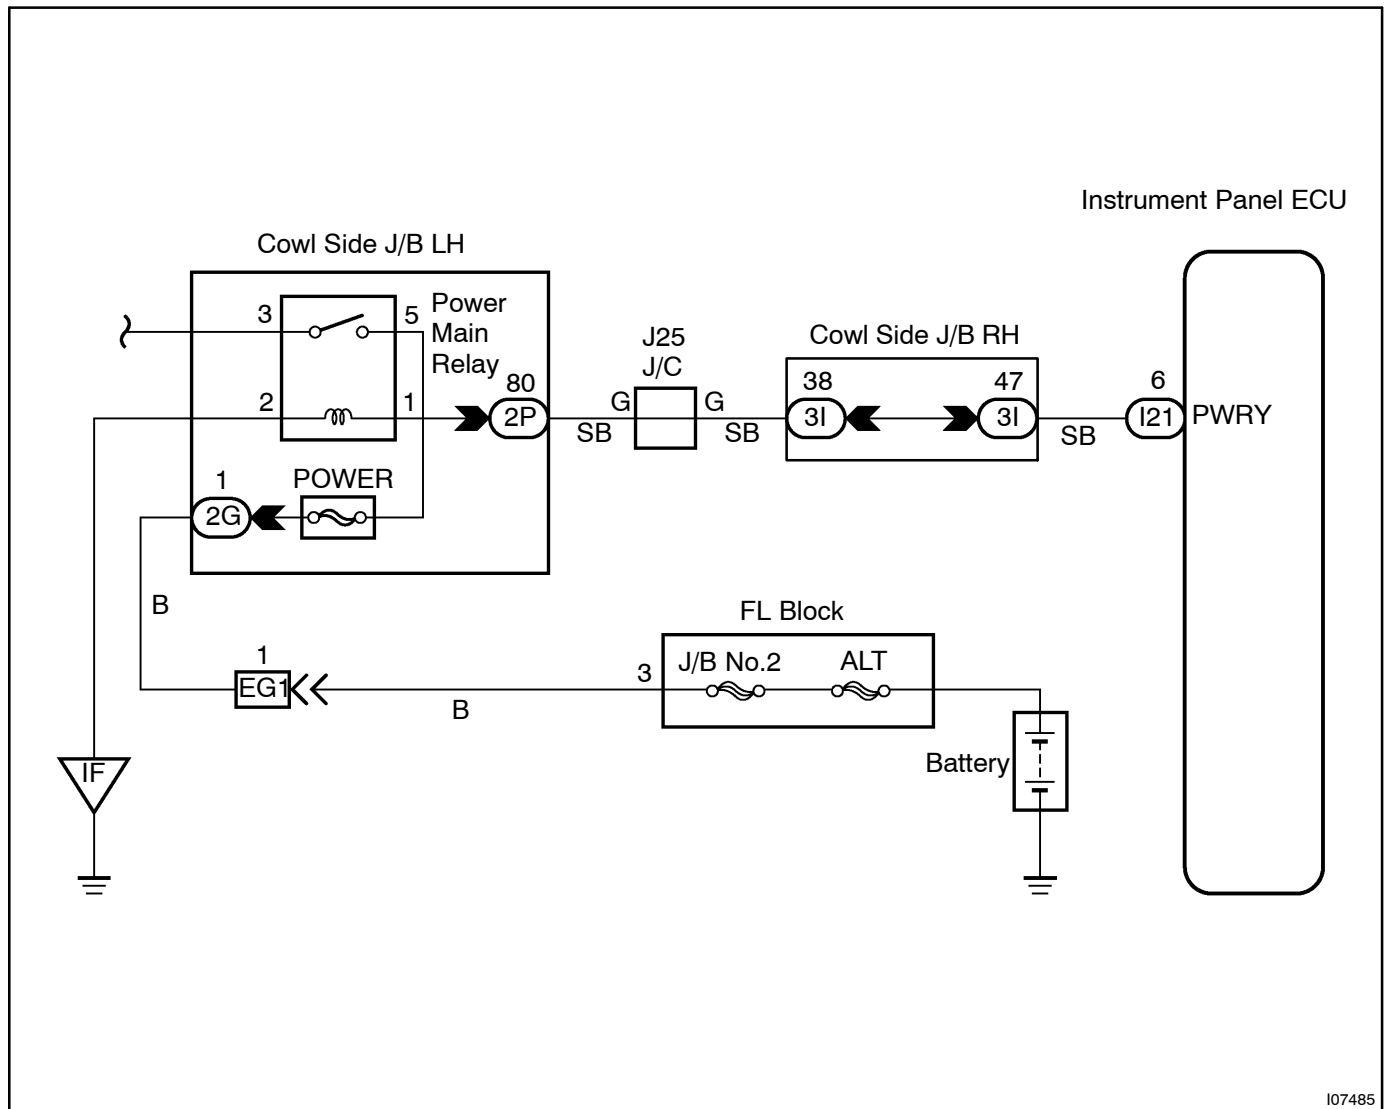

I07485

**INSPECTION PROCEDURE**

|          |                                                                 |
|----------|-----------------------------------------------------------------|
| <b>1</b> | <b>Check power main relay (See page <a href="#">BE-32</a>).</b> |
|----------|-----------------------------------------------------------------|

**NG****Replace the power main relay.****OK**

|          |                                                                                                             |
|----------|-------------------------------------------------------------------------------------------------------------|
| <b>2</b> | <b>Check wireharness and connector between power main relay and Body ECU, battery and power main relay.</b> |
|----------|-------------------------------------------------------------------------------------------------------------|

**NG****Repair or replace wireharness or connector.****OK**

**Proceed to next circuit inspection shown on  
problem symptoms table  
(See page [DI-743](#)).**