


Diagnosis Circuit

CIRCUIT DESCRIPTION

This circuit sends a signal to the ECU that DTC output is required.


WIRING DIAGRAM

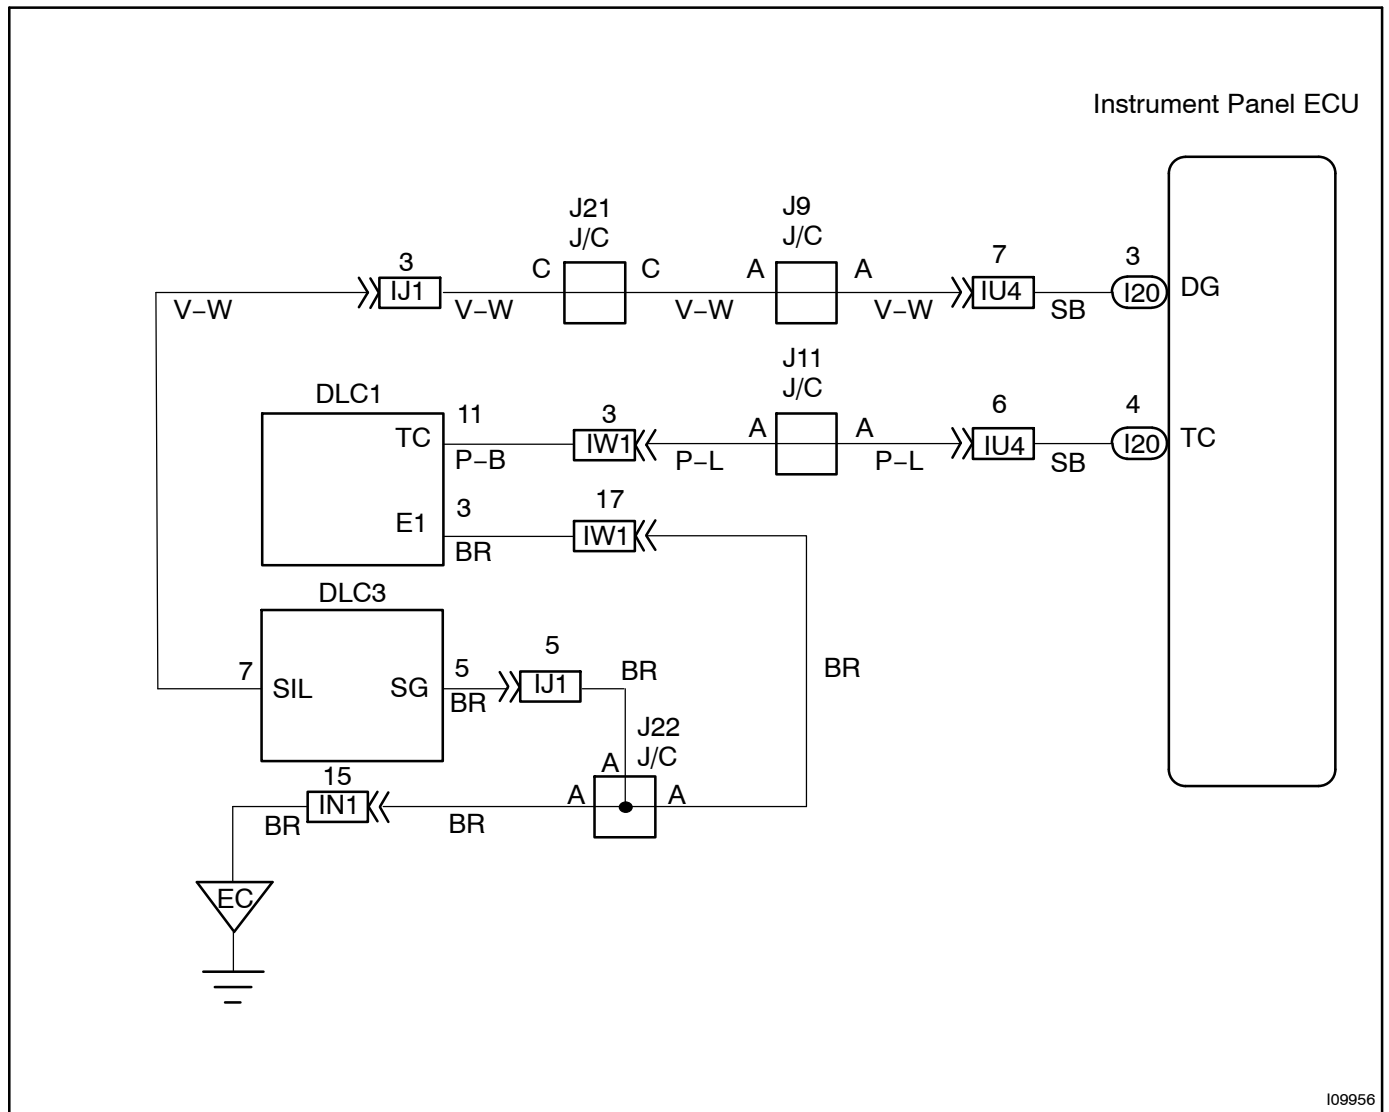

109956

INSPECTION PROCEDURE

- 1** Check voltage between terminals Tc and E₁ of DLC3.

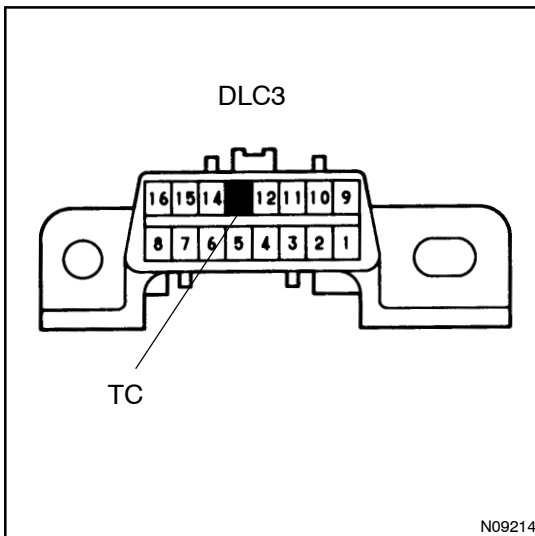**PREPARATION:**

Turn ignition switch ON.

CHECK:

Measure voltage between terminals Tc and E₁ of DLC3.

OK:

Voltage: 10 – 14 V

OK

Proceed to next circuit inspection shown in problem symptom table (See page [DI-743](#)).

NG

- 2** Check harness and connector between instrument panel ECU (body ECU) and DLC3, DLC3 and body ground (See page [IN-34](#)).

NG

Repair or replace harness or connector.

OK

Check and replace instrument panel ECU
(See page [IN-34](#)).