


Actuator Power Source Circuit

CIRCUIT DESCRIPTION

This is the power source for the motors.


WIRING DIAGRAM

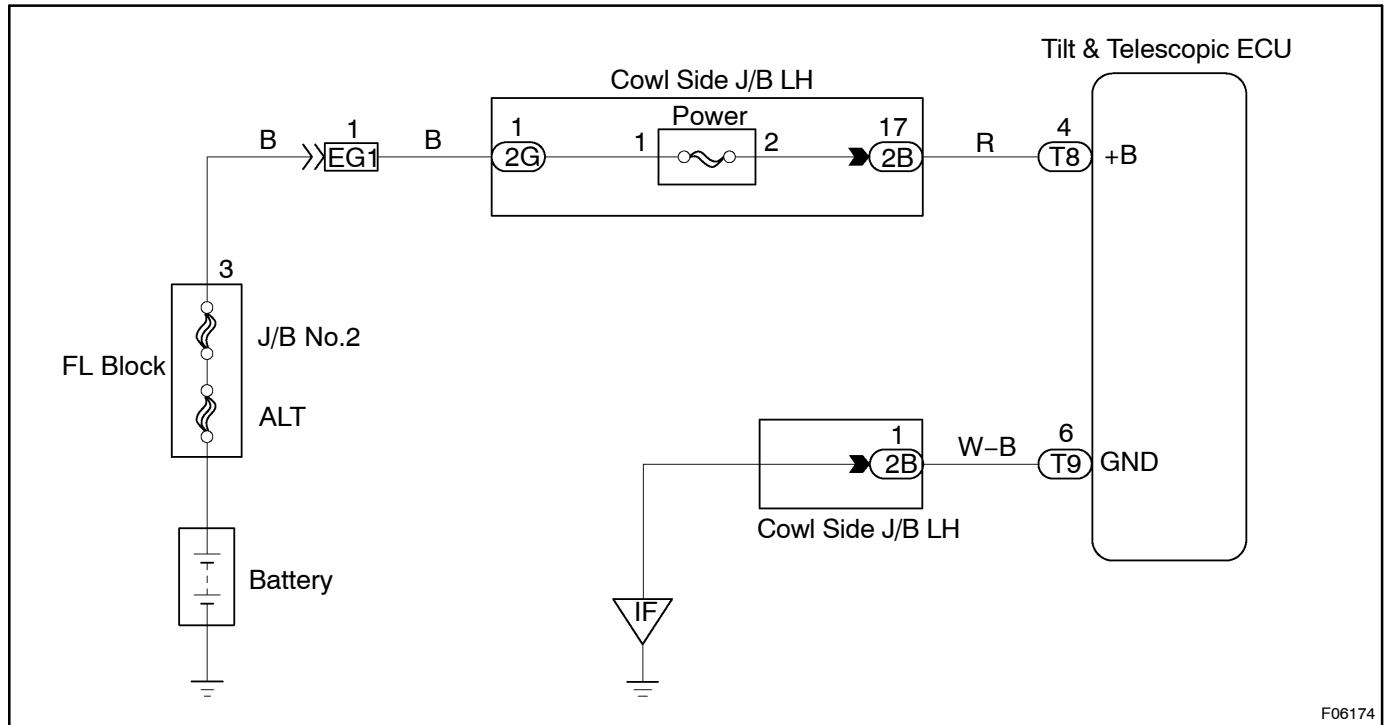

F06174

INSPECTION PROCEDURE

- 1 Check voltage between terminals +B and GND of ECU connector

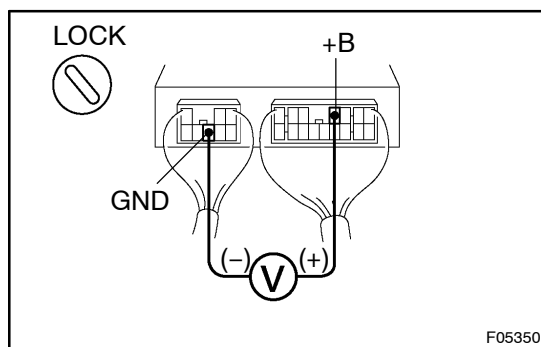

PREPARATION:

Remove ECU with connectors still connected.

CHECK:

Measure voltage between terminals +B and GND of ECU connector.


OK:

Voltage: 8 – 16 V

OK

Proceed to next circuit inspection shown on the Problem Symptom Table (See page [DI-461](#)).

NG

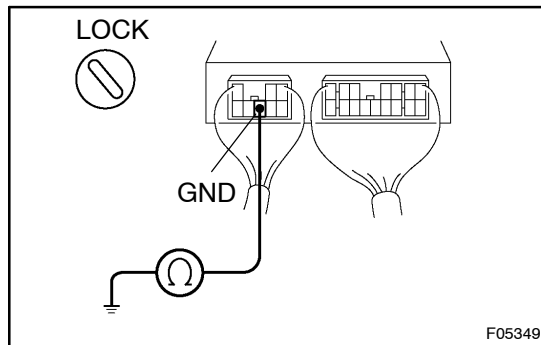2 Check continuity between terminal GND of ECU connector and body ground.**CHECK:**

Measure resistance between terminal GND of ECU connector and body ground.

OK:

Resistance: 1 k Ω or less

NG**Repair or replace harness or connector.****OK****3 Check POWER fuse.****PREPARATION:**

Remove POWER fuse from passenger side J/B.

CHECK:

Check continuity of POWER fuse.

OK:

Continuity

NG**Check for short in harness and all components connected to POWER fuse.****OK**

Check for open in harness and connector between ECU and battery (See page [IN-34](#)).