


G ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

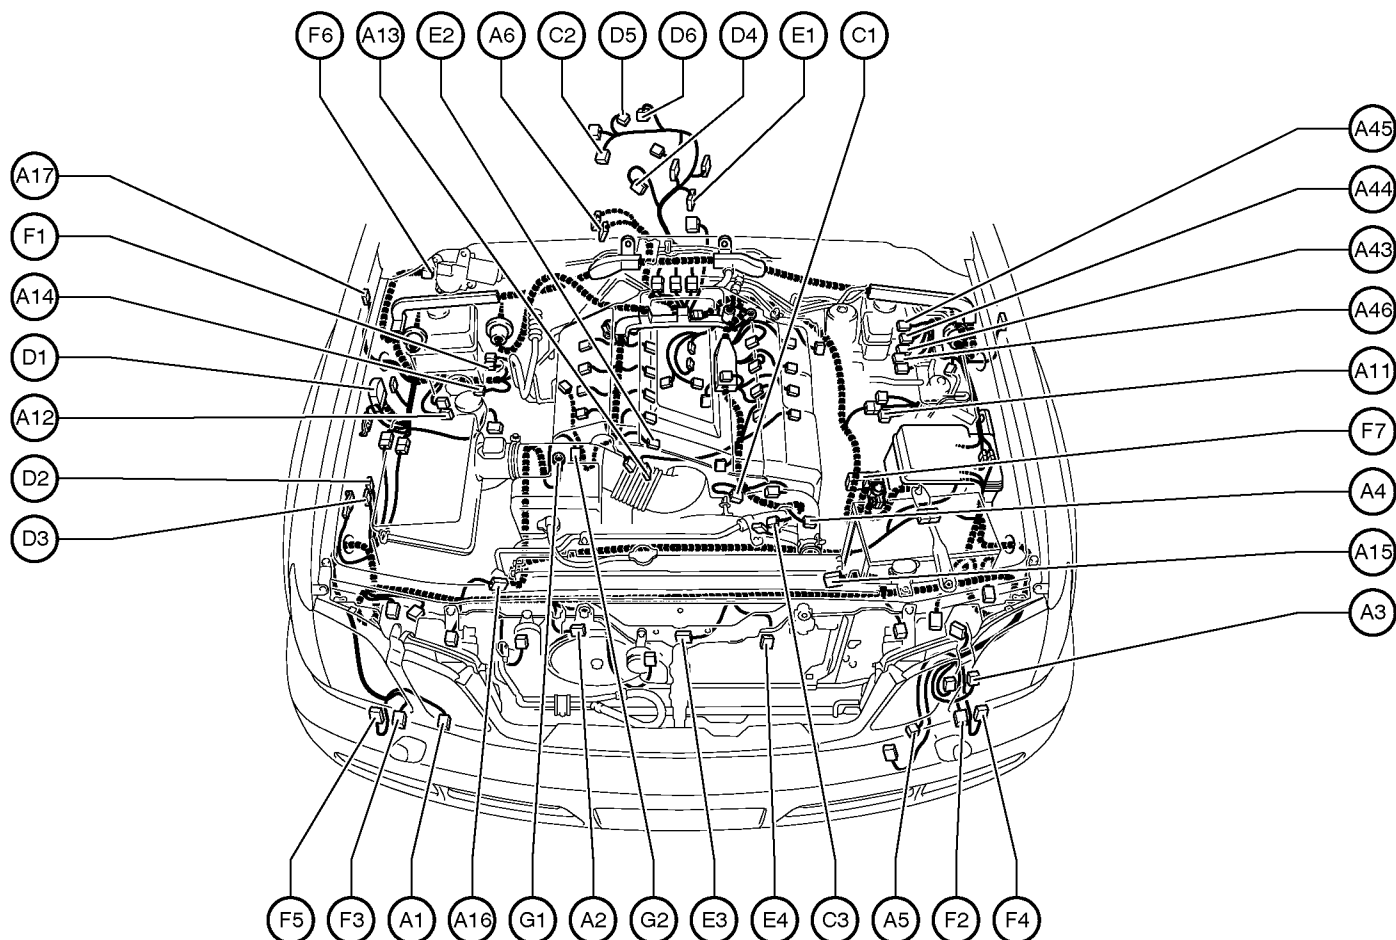

- A 1 A/C Ambient Temp. Sensor
- A 2 A/C Condenser Fan Motor
- A 3 A/C Condenser Fan Relay
- A 4 A/C Magnetic Clutch and Lock Sensor
- A 5 A/C Triple Pressure SW
(A/C Dual and Single Pressure SW)
- A 6 A/T Oil Temp. Sensor
- A11 ABS Speed Sensor Front LH
- A12 ABS Speed Sensor Front RH
- A13 Accel Position Sensor
- A14 AHC Pump Motor
- A15 Airbag Sensor Front LH
- A16 Airbag Sensor Front RH
- A17 Auto Antenna Motor
- A43 ABS & BA & TRAC & VSC Actuator
- A44 ABS & BA & TRAC & VSC Actuator
- A45 ABS & BA & TRAC & VSC Actuator
- A46 ABS & BA & TRAC & VSC Actuator

- C 1 Camshaft Position Sensor
- C 2 Center Diff. Lock Control Motor
- C 3 Crankshaft Position Sensor


- D 1 Data Link Connector 1
- D 2 Daytime Running Light Relay No.3
- D 3 Daytime Running Light Relay No.3
- D 4 Detection SW (Center Diff. Lock)
- D 5 Detection SW (Transfer L Position)
- D 6 Detection SW (Transfer Neutral Position)

- E 1 Electronically Controlled Transmission Solenoid
- E 2 Engine Coolant Temp. Sensor
- E 3 Engine Hood Courtesy SW
- E 4 Exhaust Gas Sensor

- F 1 Fluid Pressure Sensor
- F 2 Front Fog Light LH
- F 3 Front Fog Light RH
- F 4 Front Turn Signal Light LH
- F 5 Front Turn Signal Light RH
- F 6 Front Wiper Motor
- F 7 Fusible Link Block

- G 1 Generator
- G 2 Generator

Position of Parts in Engine Compartment

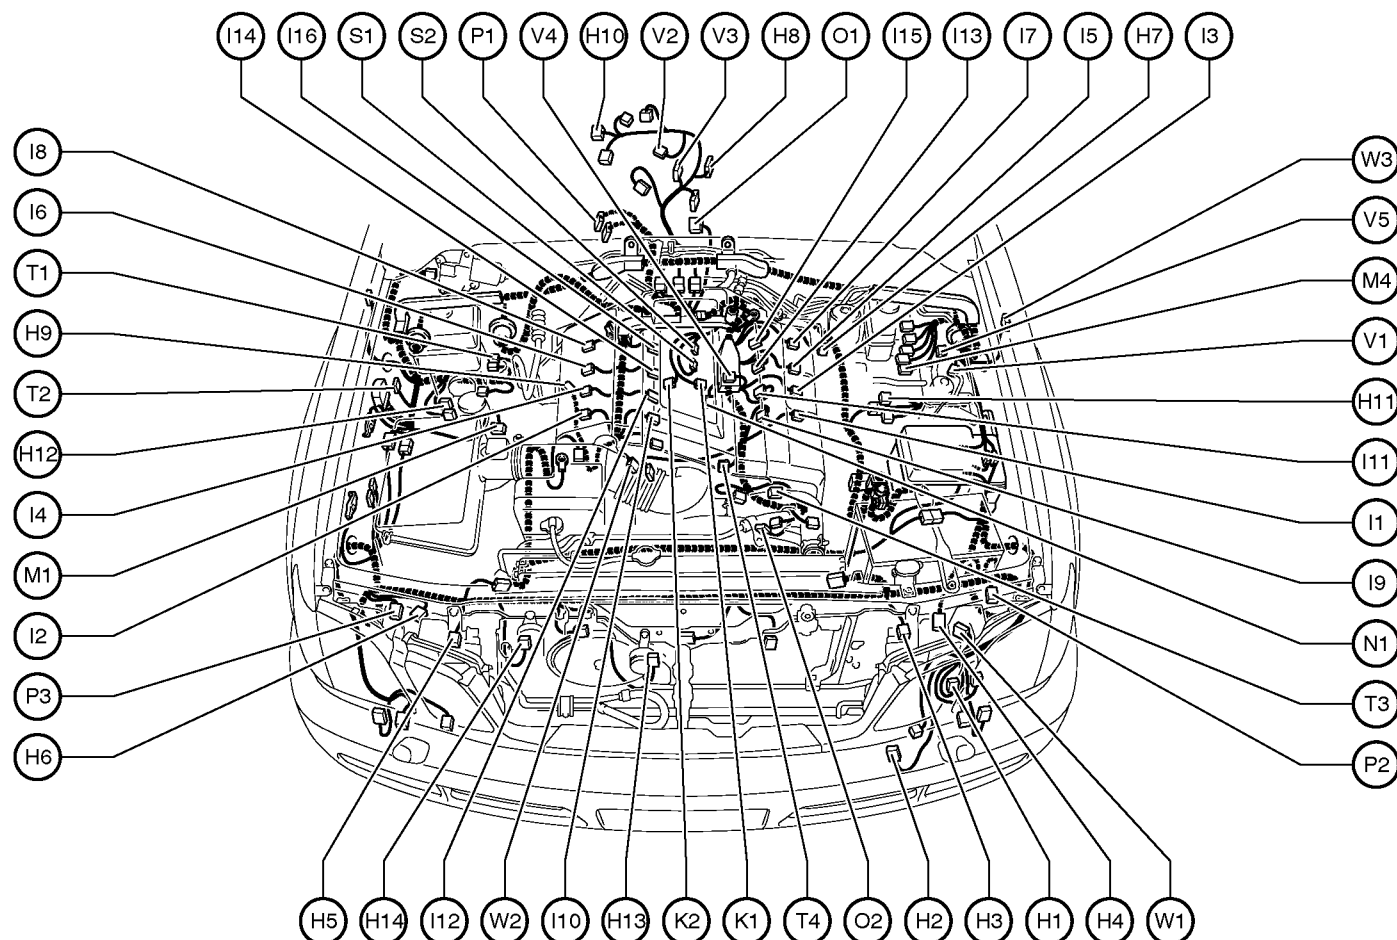

H 1 Headlight Cleaner Control Relay
 H 2 Headlight Cleaner Motor
 H 3 Headlight LH (High)
 H 4 Headlight LH (Low)
 H 5 Headlight RH (High)
 H 6 Headlight RH (Low)
 H 7 Heated Oxygen Sensor (Bank 1 Sensor 1)
 H 8 Heated Oxygen Sensor (Bank 1 Sensor 2)
 H 9 Heated Oxygen Sensor (Bank 2 Sensor 1)
 H10 Heated Oxygen Sensor (Bank 2 Sensor 2)
 H11 Height Control Sensor Front LH
 H12 Height Control Sensor Front RH
 H13 Horn LH
 H14 Horn RH

I 1 Ignition Coil and Igniter No.1
 I 2 Ignition Coil and Igniter No.2
 I 3 Ignition Coil and Igniter No.3
 I 4 Ignition Coil and Igniter No.4
 I 5 Ignition Coil and Igniter No.5
 I 6 Ignition Coil and Igniter No.6
 I 7 Ignition Coil and Igniter No.7
 I 8 Ignition Coil and Igniter No.8
 I 9 Injector No.1
 I10 Injector No.2
 I11 Injector No.3
 I12 Injector No.4
 I13 Injector No.5
 I14 Injector No.6
 I15 Injector No.7
 I16 Injector No.8

K 1 Knock Sensor 1
 K 2 Knock Sensor 2

M 1 Mass Air Flow Meter
 M 4 Master Cylinder Pressure Sensor

N 1 Noise Filter (Ignition)

O 1 O/D Direct Clutch Speed Sensor
 O 2 Oil Pressure Sender

P 1 Park/Neutral Position SW, A/T Indicator Light SW and Back-Up Light SW

P 2 Parking Light and Side Marker Light LH
 P 3 Parking Light and Side Marker Light RH

S 1 Starter
 S 2 Starter


T 1 Temp. Sensor (AHC)
 T 2 Theft Deterrent Horn
 T 3 Throttle Control Motor
 T 4 Throttle Position Sensor

V 1 Vapor Pressure Sensor
 V 2 Vehicle Speed Sensor (Combination Meter)
 V 3 Vehicle Speed Sensor (Electronically Controlled Transmission)
 V 4 VSV (EVAP)
 V 5 VSV (Vapor Pressure Sensor)

W 1 Washer Motor
 W 2 Water Temp. Sender
 W 3 Wireless Door Lock Buzzer

G ELECTRICAL WIRING ROUTING

Position of Parts in Instrument Panel

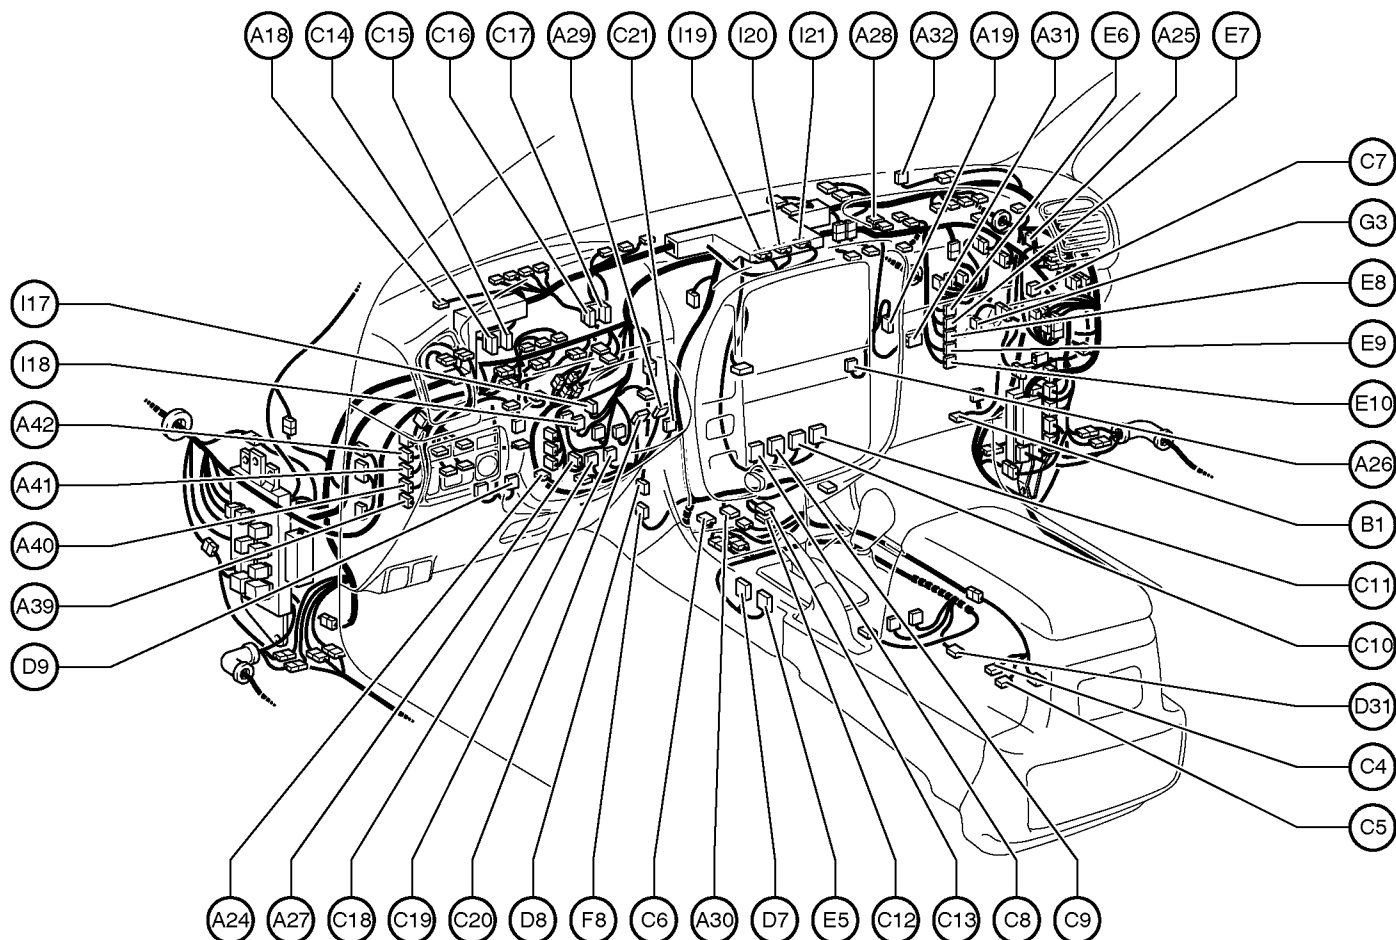

A 18 A/C Solar Sensor
 A 19 A/C Thermistor
 A 24 AHC Main Relay
 A 25 Air Inlet Control Servo Motor
 A 26 Air Mix Control Servo Motor
 A 27 Air Vent Mode Control Servo Motor
 A 28 Airbag Squib (Front Passenger Airbag Assembly)
 A 29 Airbag Squib (Steering Wheel Pad)
 A 30 Ashtray Illumination
 A 31 Auto Antenna Control Relay
 A 32 Automatic Light Control Sensor
 A 39 ABS & BA & TRAC & VSC ECU
 A 40 ABS & BA & TRAC & VSC ECU
 A 41 ABS & BA & TRAC & VSC ECU
 A 42 ABS & BA & TRAC & VSC ECU

B 1 Blower Motor Controller

C 4 Cellular Phone (Hand Set)
 C 5 Cellular Phone (Hand Set)
 C 6 Center Airbag Sensor Assembly
 C 7 Center Diff. Lock Control Relay
 C 8 Center ECU
 C 9 Center ECU
 C 10 Center ECU
 C 11 Center ECU
 C 12 Cigarette Lighter
 C 13 Cigarette Lighter Illumination
 C 14 Combination Meter
 C 15 Combination Meter

C 16 Combination Meter
 C 17 Combination Meter
 C 18 Combination SW
 C 19 Combination SW
 C 20 Combination SW
 C 21 Combination SW

D 7 Damping Mode Select SW and Height Control SW
 D 8 Data Link Connector 3
 D 9 Daytime Running Light Relay (Main)
 D 31 Deceleration Sensor


E 5 Electronically Controlled Transmission Pattern Select SW
 E 6 Engine Control Module
 E 7 Engine Control Module
 E 8 Engine Control Module
 E 9 Engine Control Module
 E 10 Engine Control Module

F 8 Fuel Control SW

G 3 Glove Box Light

I 17 Ignition Key Cylinder Light
 I 18 Ignition SW
 I 19 Instrument ECU
 I 20 Instrument ECU
 I 21 Instrument ECU

Position of Parts in Instrument Panel

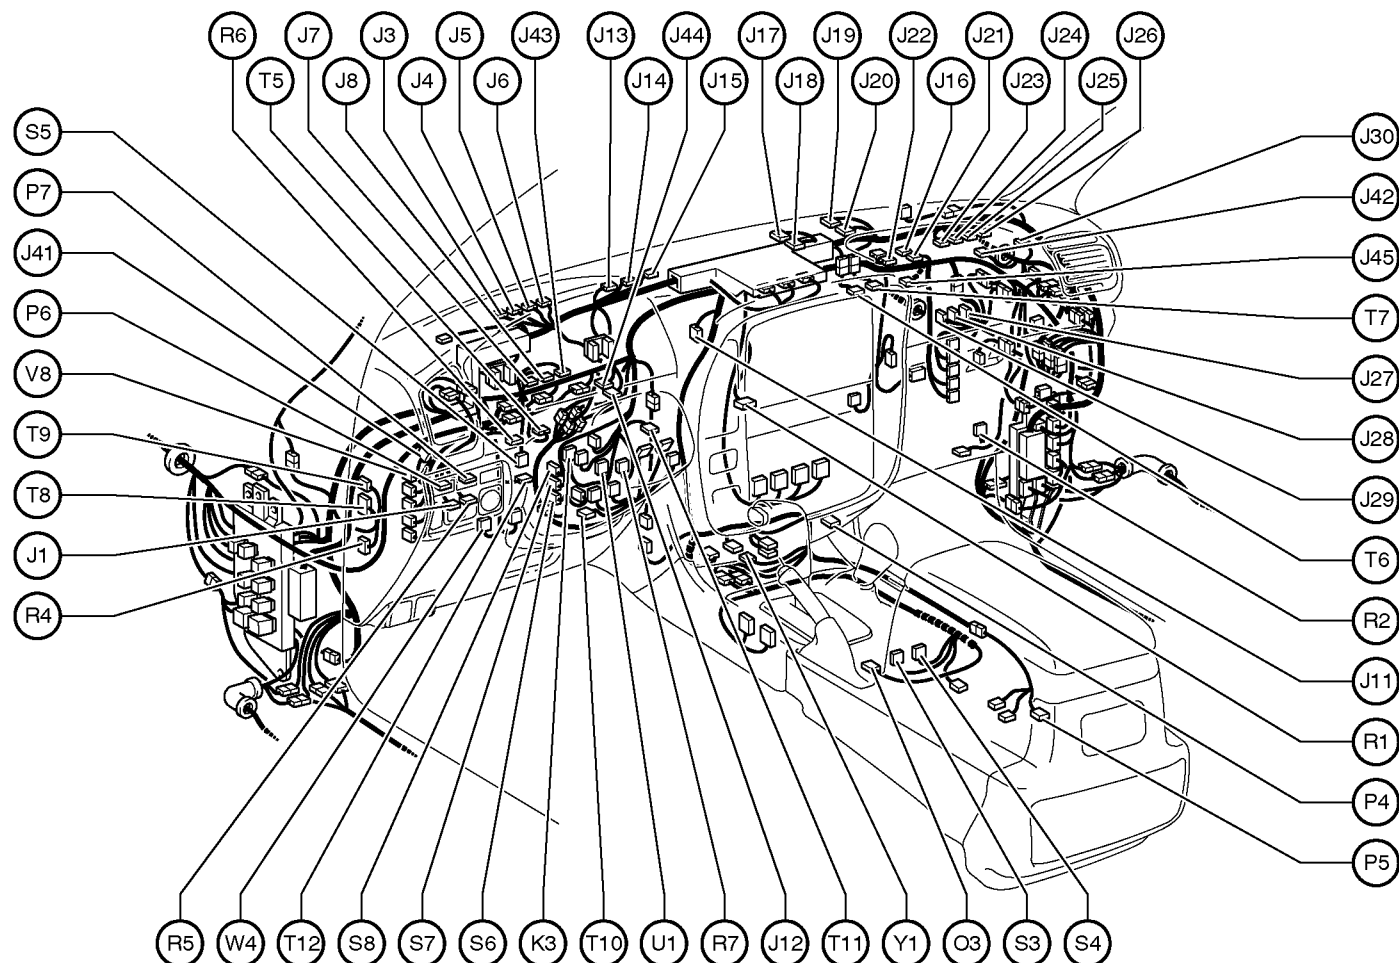


- J 1 Junction Connector
- J 3 Junction Connector
- J 4 Junction Connector
- J 5 Junction Connector
- J 6 Junction Connector
- J 7 Junction Connector
- J 8 Junction Connector
- J 11 Junction Connector
- J 12 Junction Connector
- J 13 Junction Connector
- J 14 Junction Connector
- J 15 Junction Connector
- J 16 Junction Connector
- J 17 Junction Connector
- J 18 Junction Connector
- J 19 Junction Connector
- J 20 Junction Connector
- J 21 Junction Connector
- J 22 Junction Connector
- J 23 Junction Connector
- J 24 Junction Connector
- J 25 Junction Connector
- J 26 Junction Connector
- J 27 Junction Connector
- J 28 Junction Connector
- J 29 Junction Connector
- J 30 Junction Connector
- J 41 Junction Connector
- J 42 Junction Connector
- J 43 Junction Connector
- J 44 Junction Connector
- J 45 Junction Connector
- K 3 Key Interlock Solenoid
- O 3 O/D Main SW and Shift Lock Control ECU

- P 4 Power Outlet (Front)
- P 5 Power Outlet (Rear Console Box)
- P 6 Power Quarter Window SW LH
- P 7 Power Quarter Window SW RH
- R 1 Radio and Player
- R 4 Remote Control Mirror SW
- R 5 Remote Control Mirror SW
- R 6 Rheostat
- R 7 Room Temp. Sensor (Front)
- S 3 Seat Heater SW (Driver's Seat)
- S 4 Seat Heater SW (Front Passenger's Seat)
- S 5 Stop Light SW
- S 6 Suspension Control ECU
- S 7 Suspension Control ECU
- S 8 Suspension Control ECU
- T 5 Telescopic Motor
- T 6 Theft Deterrent ECU
- T 7 Theft Deterrent ECU
- T 8 Tilt and Telescopic ECU
- T 9 Tilt and Telescopic ECU
- T 10 Tilt Motor
- T 11 Transponder Key Amplifier
- T 12 Turn Signal Flasher
- U 1 Unlock Warning SW
- V 8 VSC Warning Buzzer
- W 4 Wireless Door Lock ECU
- Y 1 Yaw Rate Sensor

G ELECTRICAL WIRING ROUTING

Position of Parts in Body

*1 : w/ Moon Roof
*2 : w/o Moon Roof

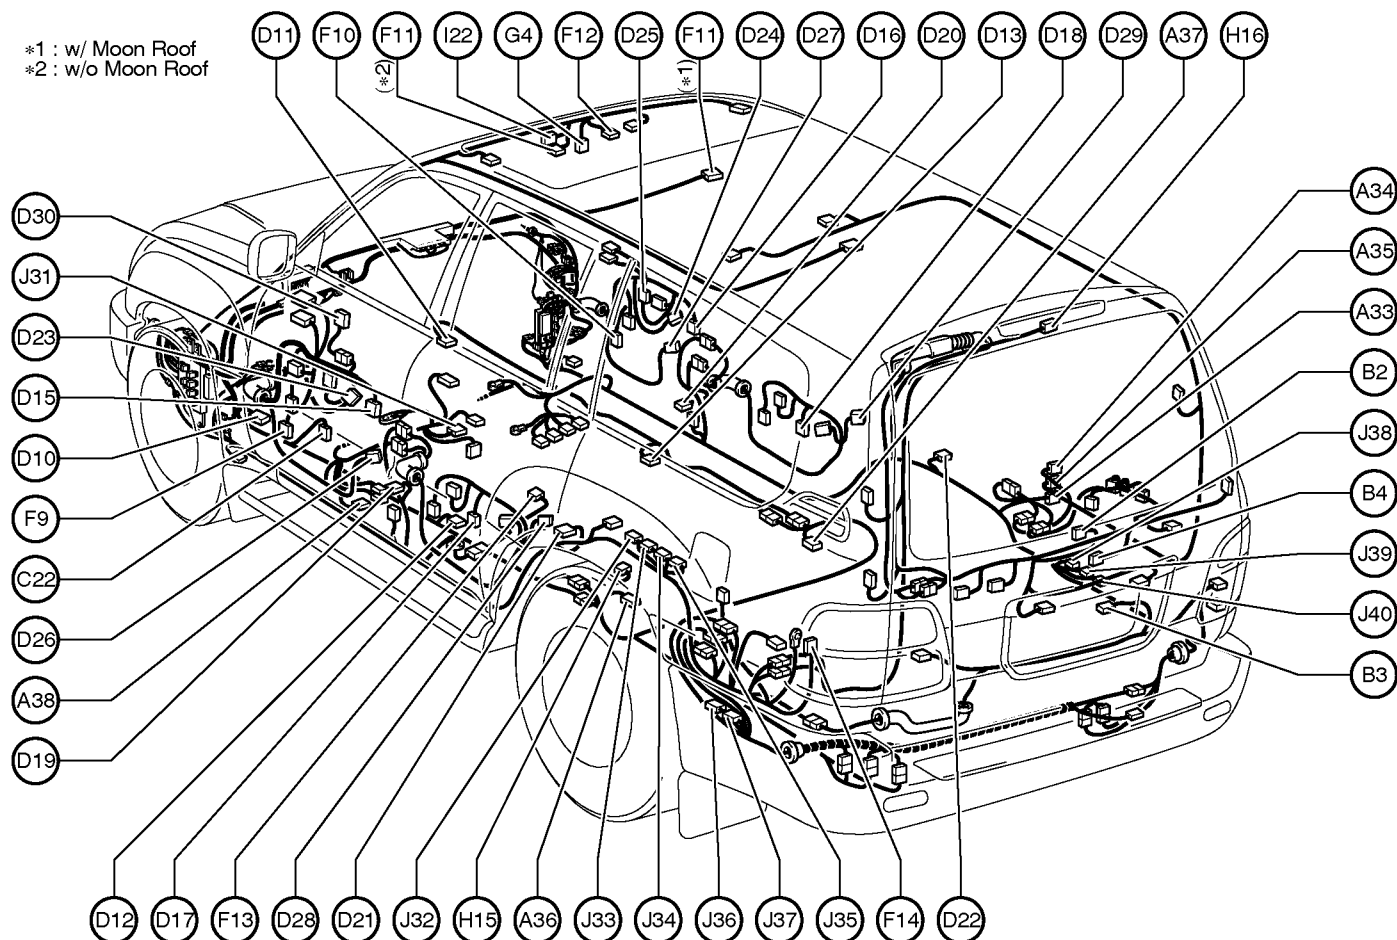

A33 A/C Amplifier
A34 A/C Amplifier
A35 A/C Amplifier
A36 ABS Speed Sensor Rear LH
A37 ABS Speed Sensor Rear RH
A38 Accumulator Solenoid

B 2 Back Door Courtesy SW
B 3 Back Door Key Lock and Unlock SW
B 4 Back Door Lock Motor and Back Door Unlock Detection SW

C22 Control Valve Assembly

D10 Damping Force Control Actuator Front LH
D11 Damping Force Control Actuator Front RH
D12 Damping Force Control Actuator Rear LH
D13 Damping Force Control Actuator Rear RH
D15 Door Courtesy Light Front LH
D16 Door Courtesy Light Front RH
D17 Door Courtesy Light Rear LH
D18 Door Courtesy Light Rear RH
D19 Door Courtesy SW Front LH
D20 Door Courtesy SW Front RH
D21 Door Courtesy SW Rear LH
D22 Door Courtesy SW Rear RH
D23 Door Key Lock and Unlock SW LH
D24 Door Key Lock and Unlock SW RH
D25 Door Lock Control SW RH
D26 Door Lock Motor and Door Unlock Detection SW Front LH
D27 Door Lock Motor and Door Unlock Detection SW Front RH

D28 Door Lock Motor and Door Unlock Detection SW Rear LH
D29 Door Lock Motor and Door Unlock Detection SW Rear RH
D30 Driving Position Memory SW

F 9 Front Door Speaker LH
F10 Front Door Speaker RH
F11 Front Interior light and Rear Personal Light
F12 Front Personal Light
F13 Fuel Pump and Sender
F14 Fuel Pump Control ECU


G 4 Garage Door Opener

H15 Height Control Sensor Rear
H16 High Mounted Stop Light

I 22 Inner Mirror

J 31 Junction Connector
J 32 Junction Connector
J 33 Junction Connector
J 34 Junction Connector
J 35 Junction Connector
J 36 Junction Connector
J 37 Junction Connector
J 38 Junction Connector
J 39 Junction Connector
J 40 Junction Connector

Position of Parts in Body

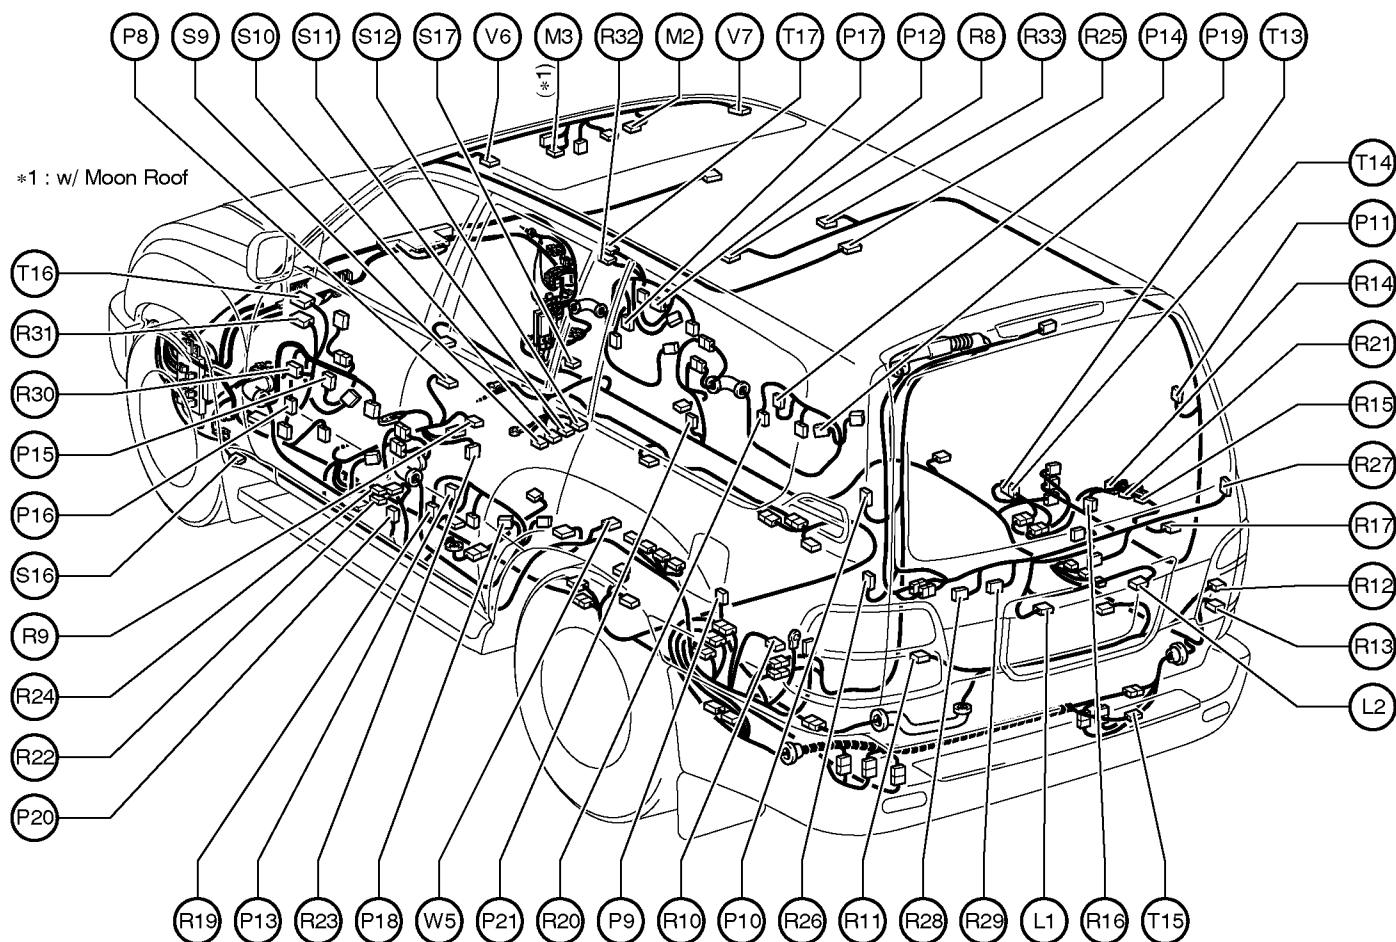

L 1 License Plate Light LH
L 2 License Plate Light RH

M 2 Moon Roof Control ECU
M 3 Moon Roof Control SW

P 8 Parking Brake SW
P 9 Power Outlet (Luggage Compartment)
P10 Power Vent Window Motor LH
P11 Power Vent Window Motor RH
P12 Power Window Control SW Front RH
P13 Power Window Control SW Rear LH
P14 Power Window Control SW Rear RH
P15 Power Window Master SW
P16 Power Window Motor Front LH
P17 Power Window Motor Front RH
P18 Power Window Motor Rear LH
P19 Power Window Motor Rear RH
P20 Pretensioner LH
P21 Pretensioner RH

R 8 Rear A/C Control SW
R 9 Rear Air Mix Control Servo Motor
R10 Rear Combination Light LH
R11 Rear Combination Light LH
R12 Rear Combination Light RH
R13 Rear Combination Light RH
R14 Rear Cooler Blower Motor
R15 Rear Cooler Magnetic Valve
R16 Rear Cooler Power Transistor
R17 Rear Cooler Relay
R19 Rear Door Speaker LH
R20 Rear Door Speaker RH

R21 Rear Evaporator Temp. Sensor
R22 Rear Heater Blower Motor
R23 Rear Heater Power Transistor
R24 Rear Inlet Air Temp. Sensor
R25 Rear Interior Light
R26 Rear Window Defogger
R27 Rear Window Defogger
R28 Rear Wiper Motor
R29 Rear Wiper Relay
R30 Remote Control Mirror ECU
R31 Remote Control Mirror LH
R32 Remote Control Mirror RH
R33 Room Temp. Sensor (Rear)

S 9 Stereo Component Amplifier
S10 Stereo Component Amplifier
S11 Stereo Component Amplifier
S12 Stereo Component Amplifier
S16 Side Step Light LH
S17 Side Step Light RH

T13 Telephone Transceiver and Speaker Relay
T14 Telephone Transceiver and Speaker Relay
T15 Trailer Socket
T16 Tweeter LH
T17 Tweeter RH

V 6 Vanity Light LH
V 7 Vanity Light RH

W 5 Woofer (Speaker)

G ELECTRICAL WIRING ROUTING

Position of Parts in Seat

