





I GROUND POINT

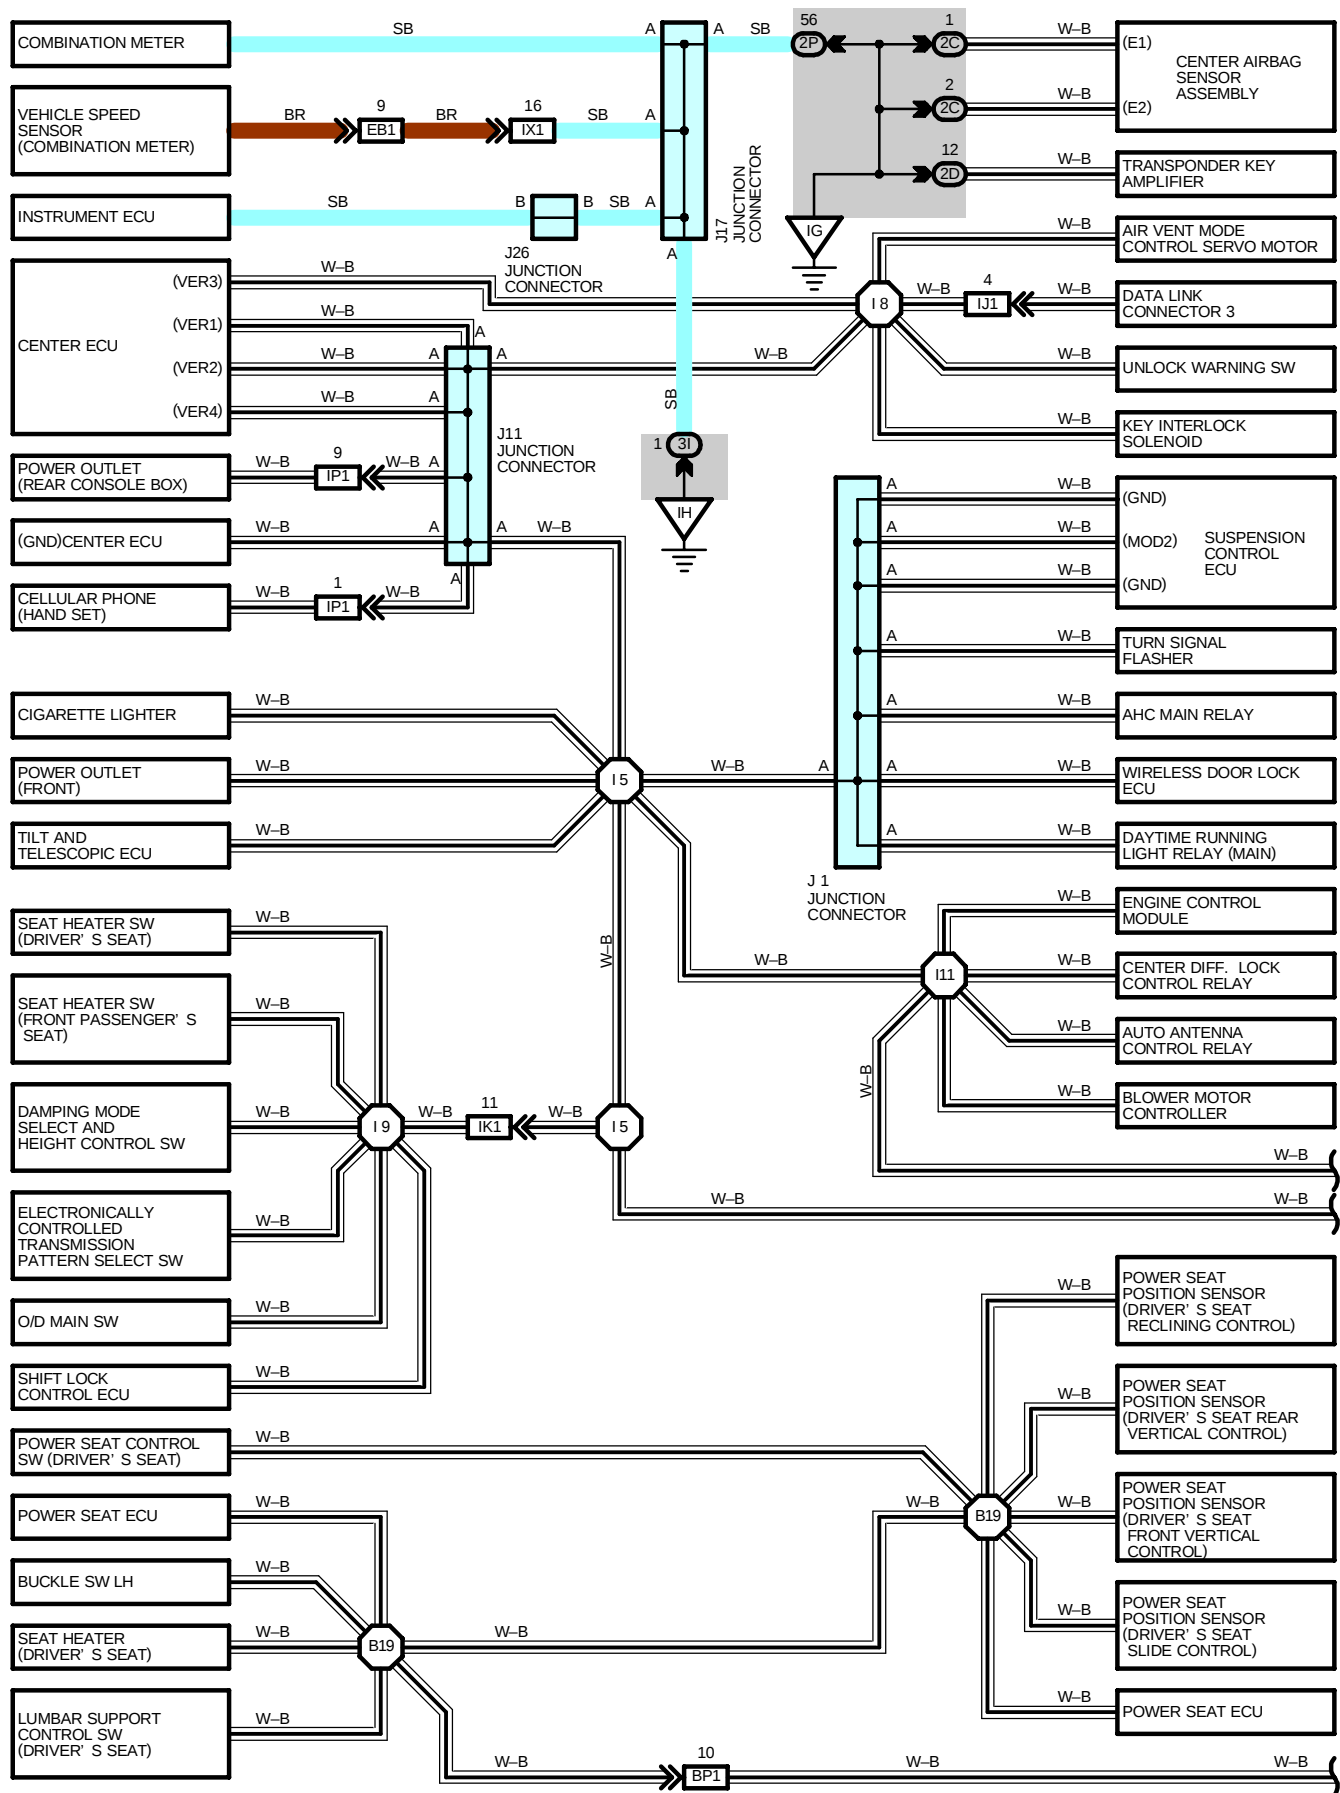


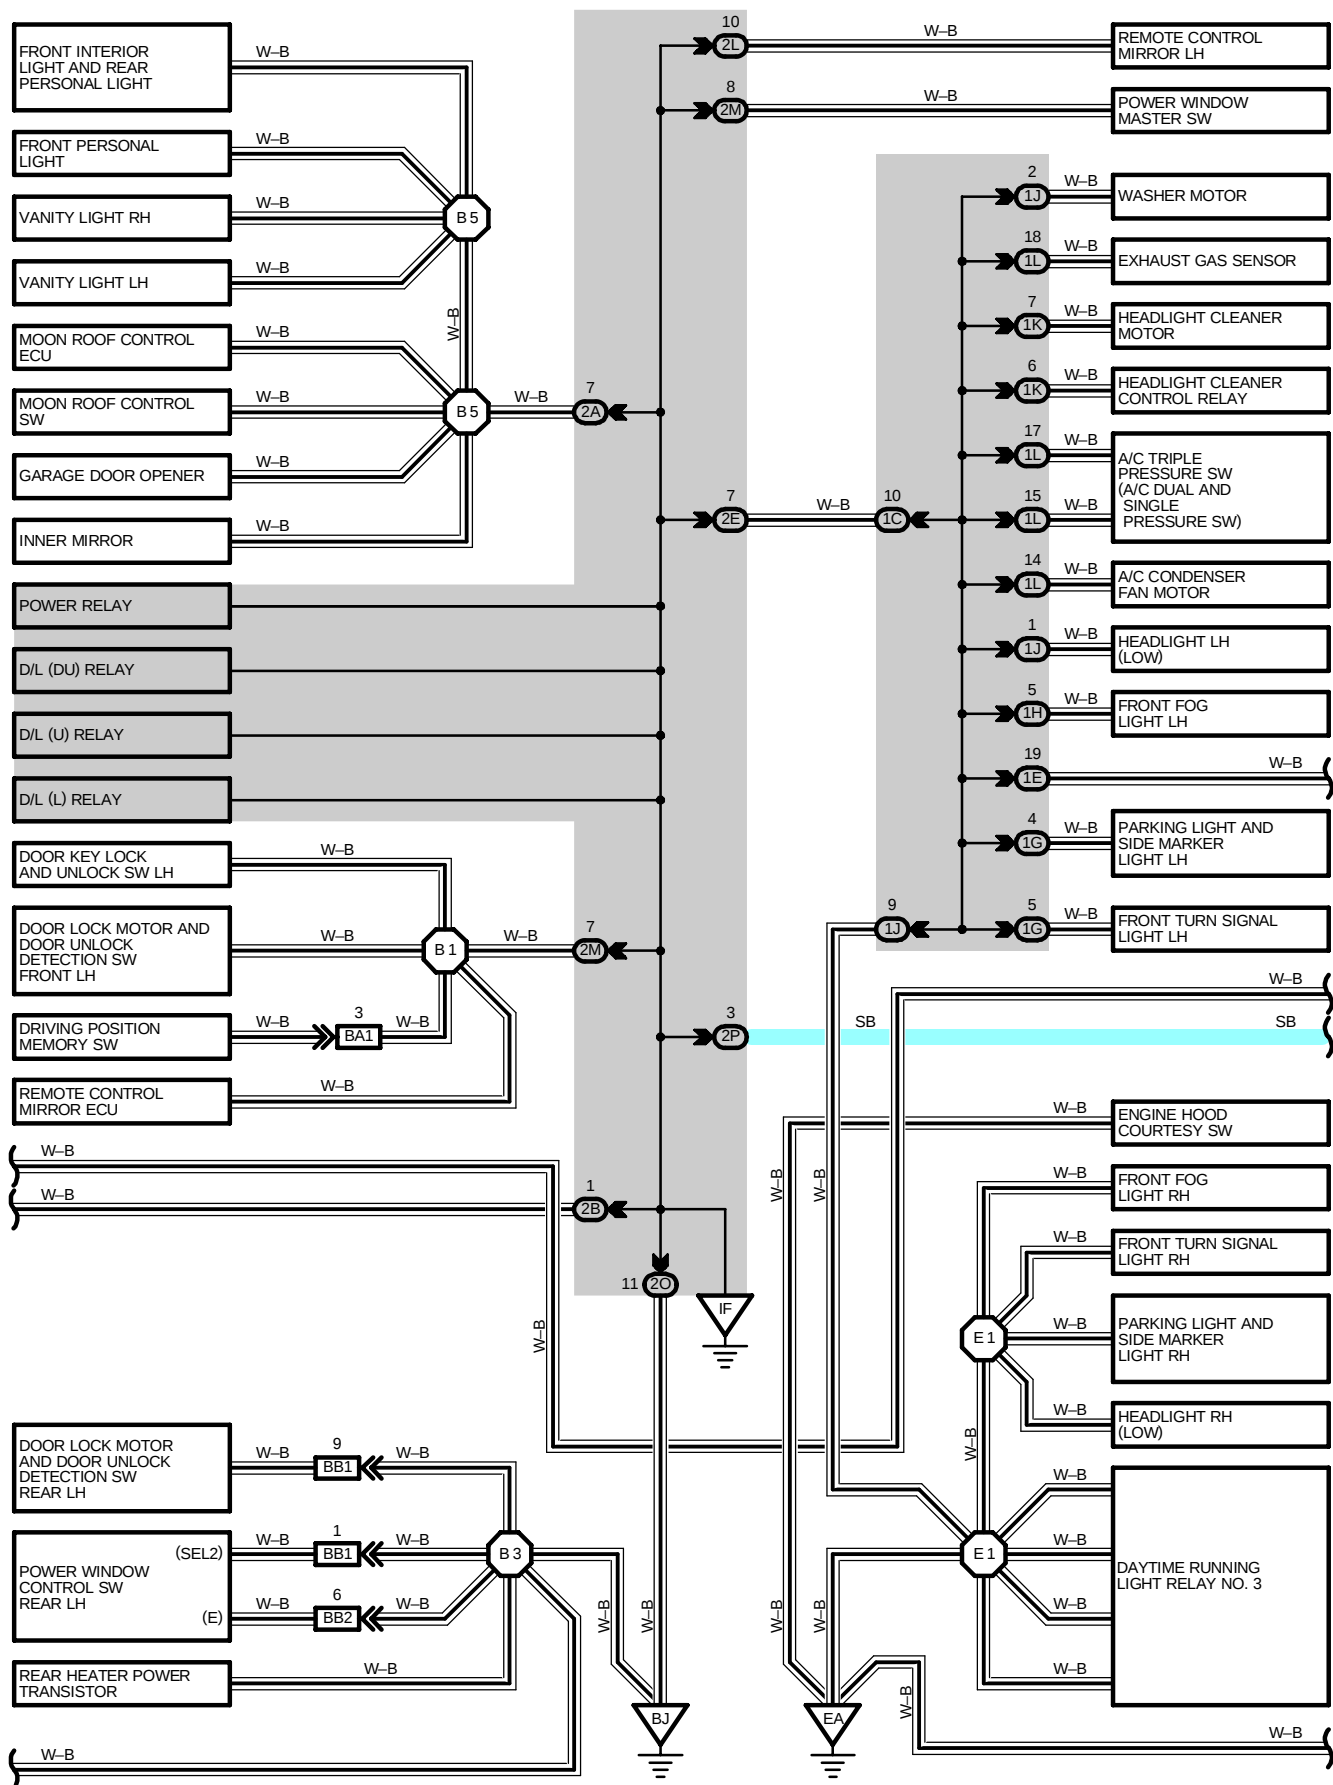


I GROUND POINT

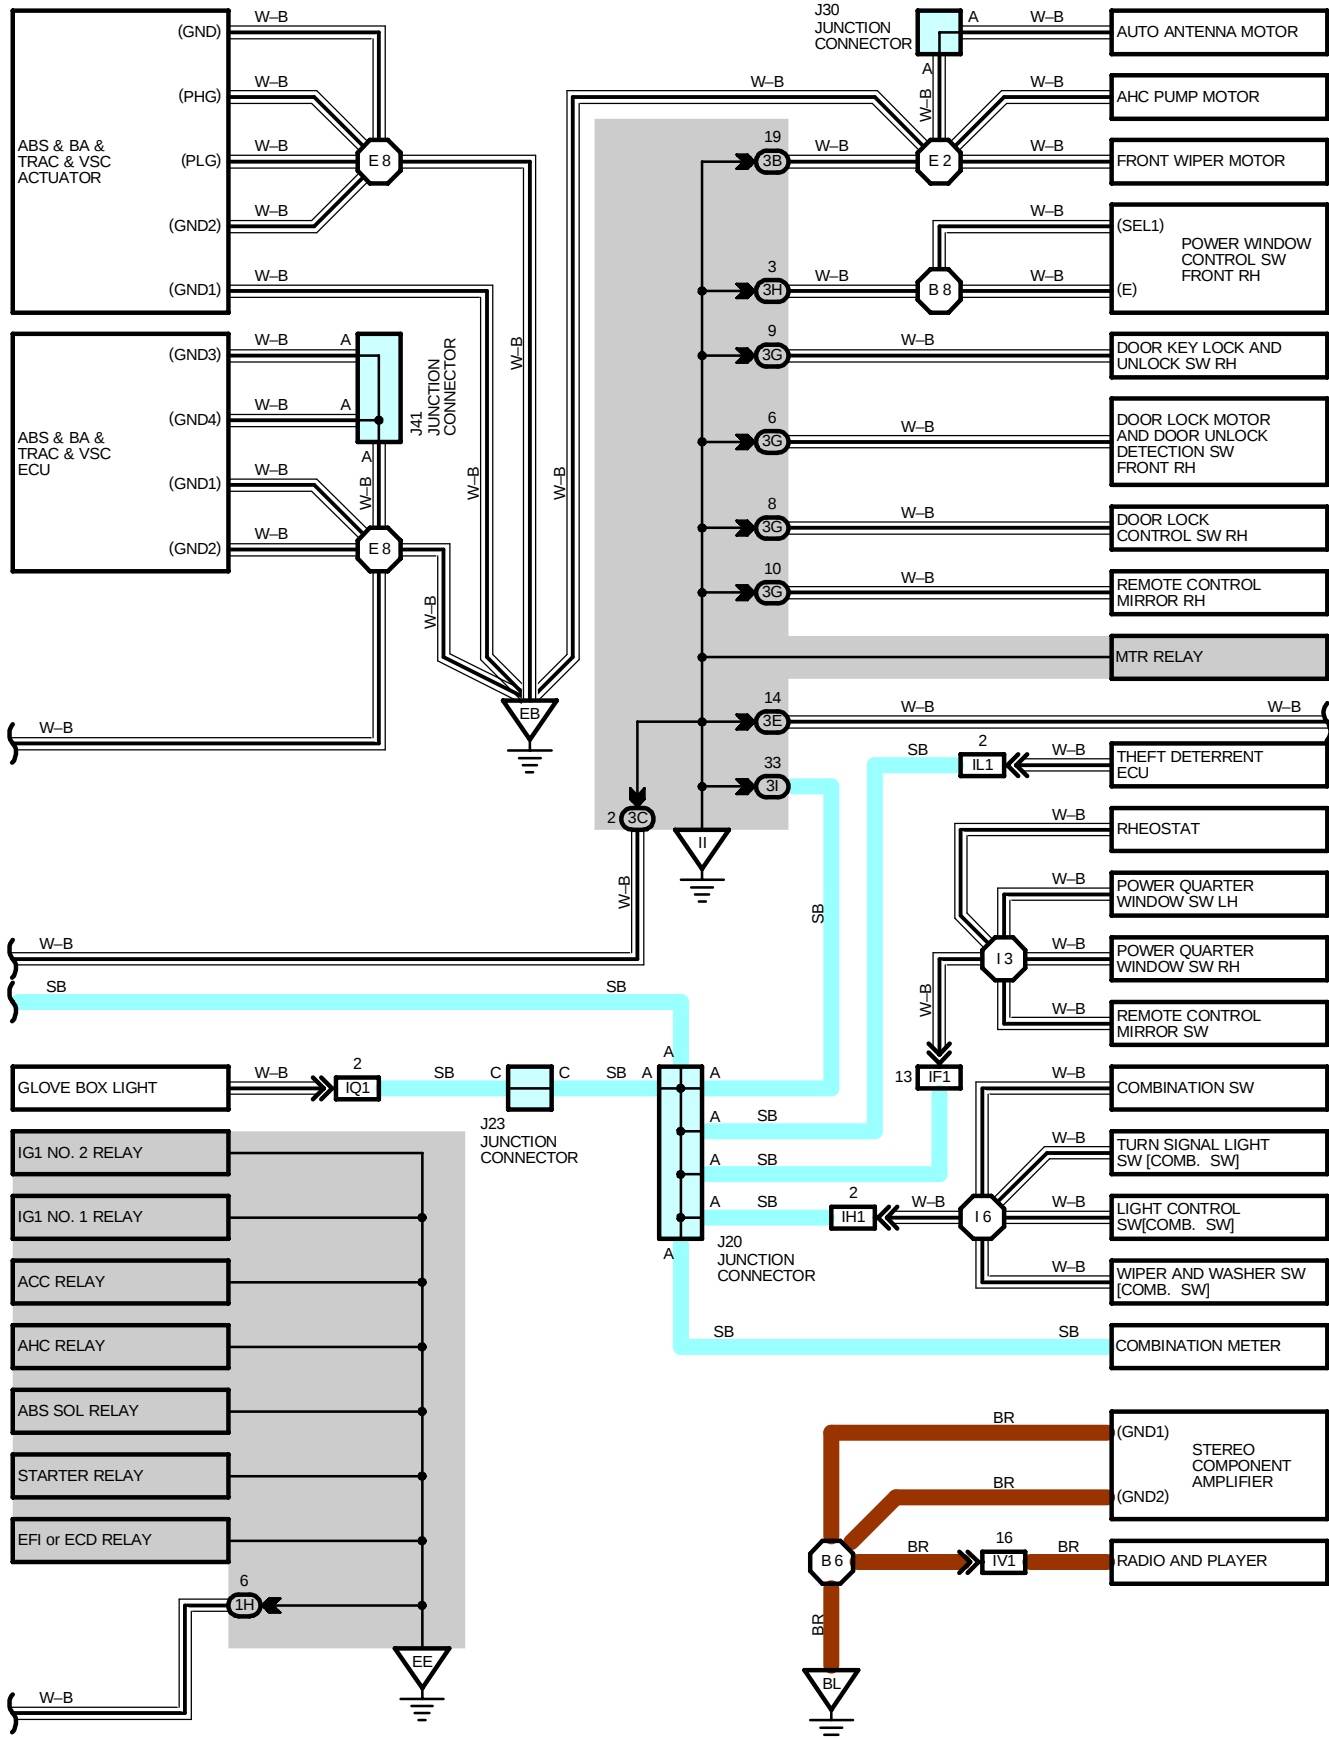

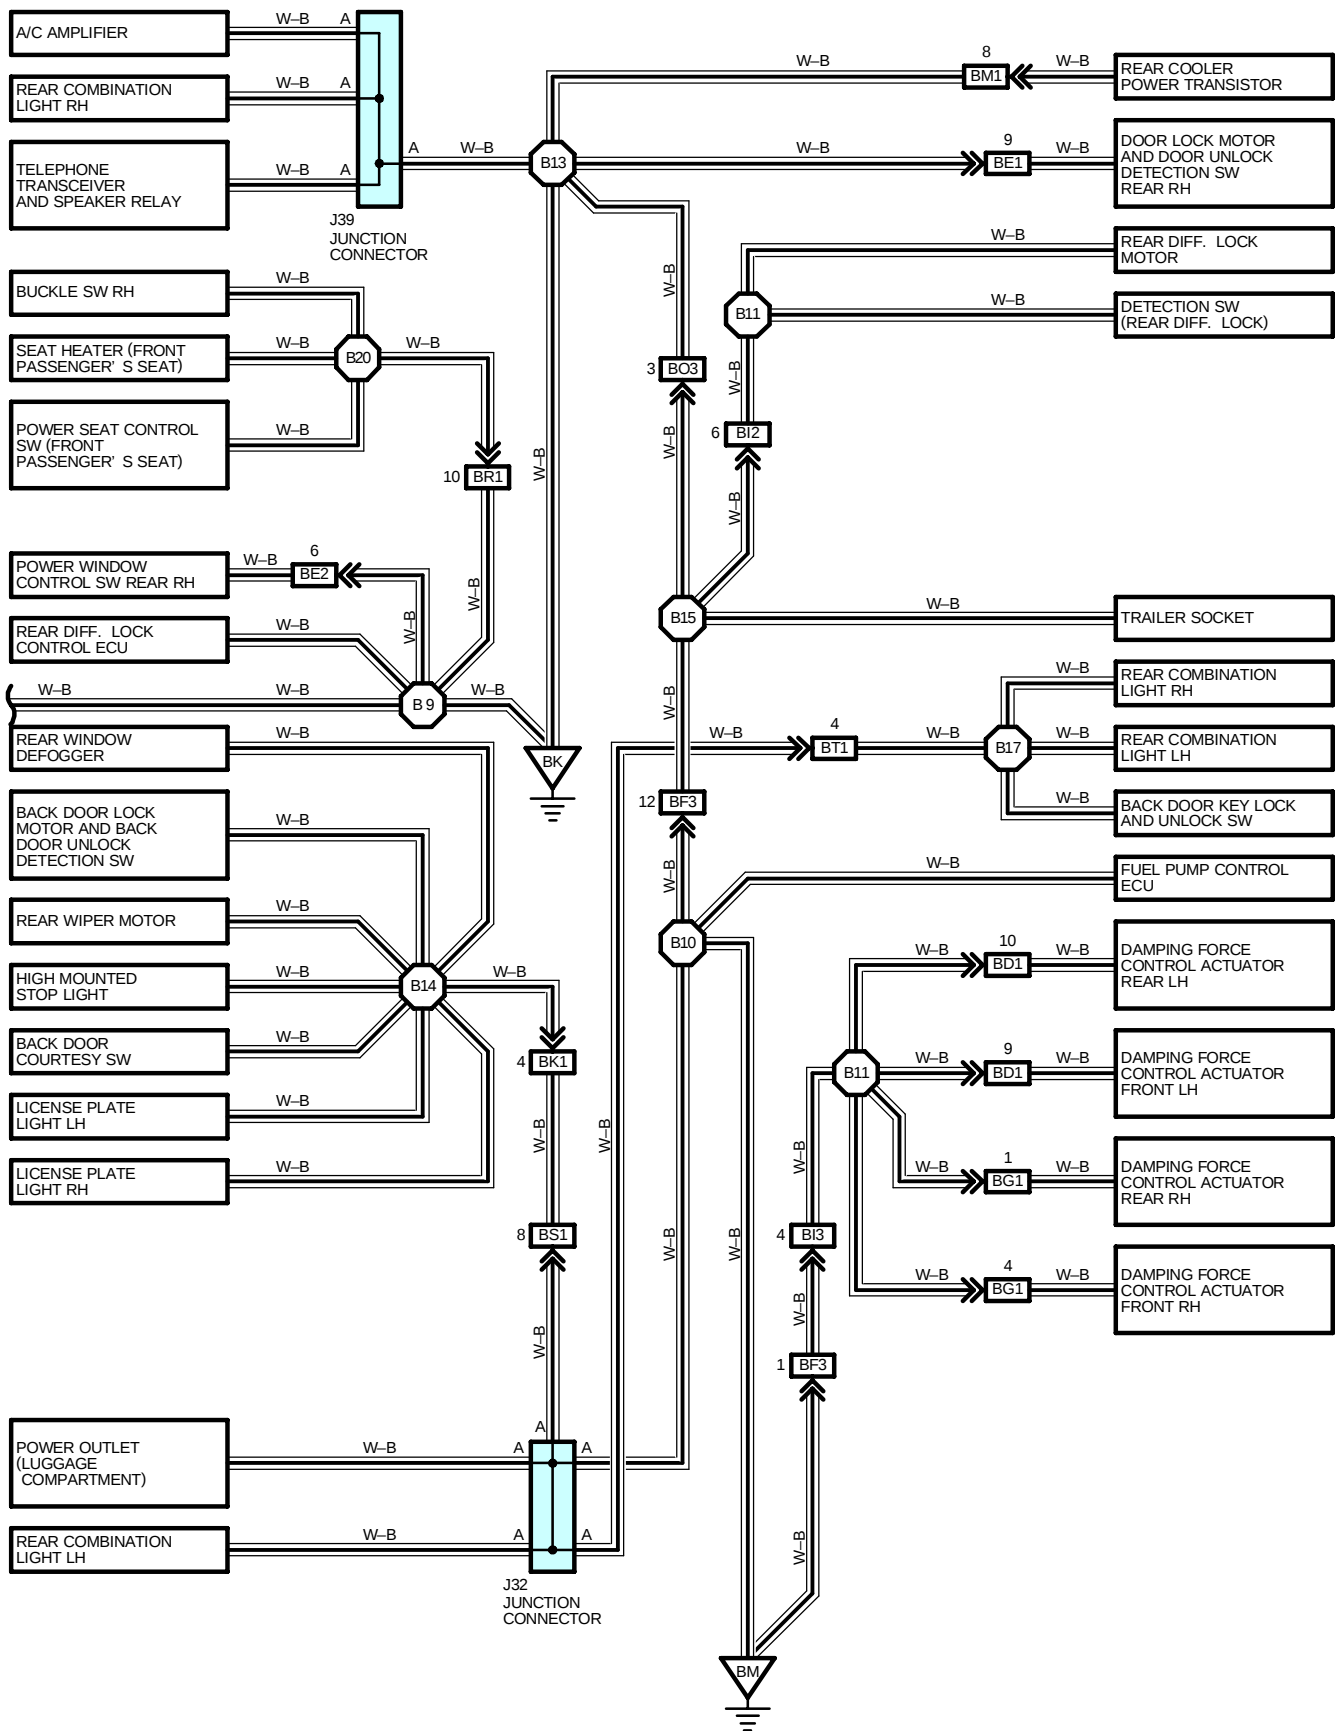

I GROUND POINT

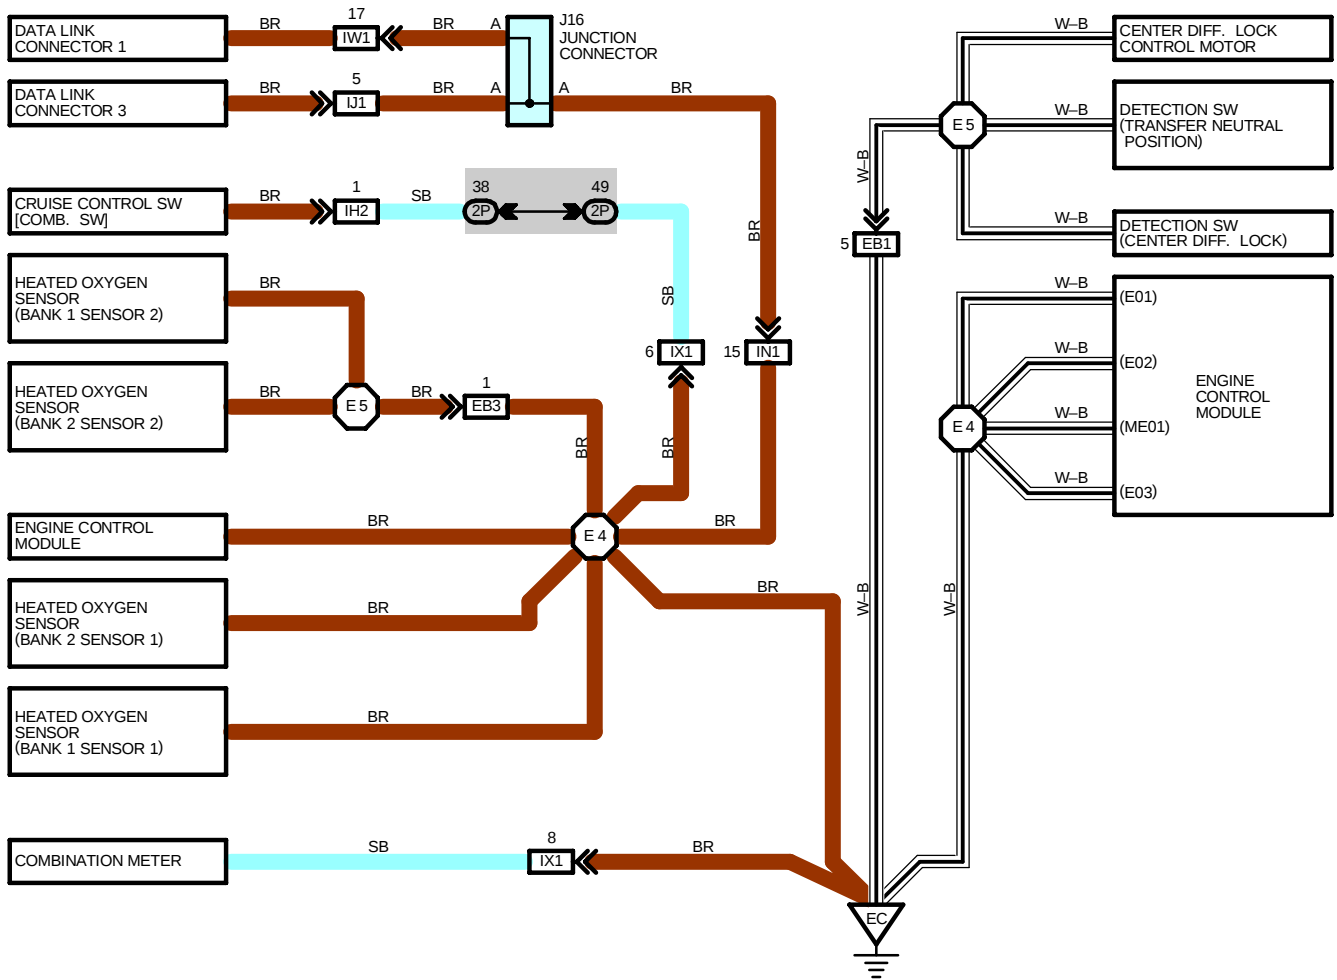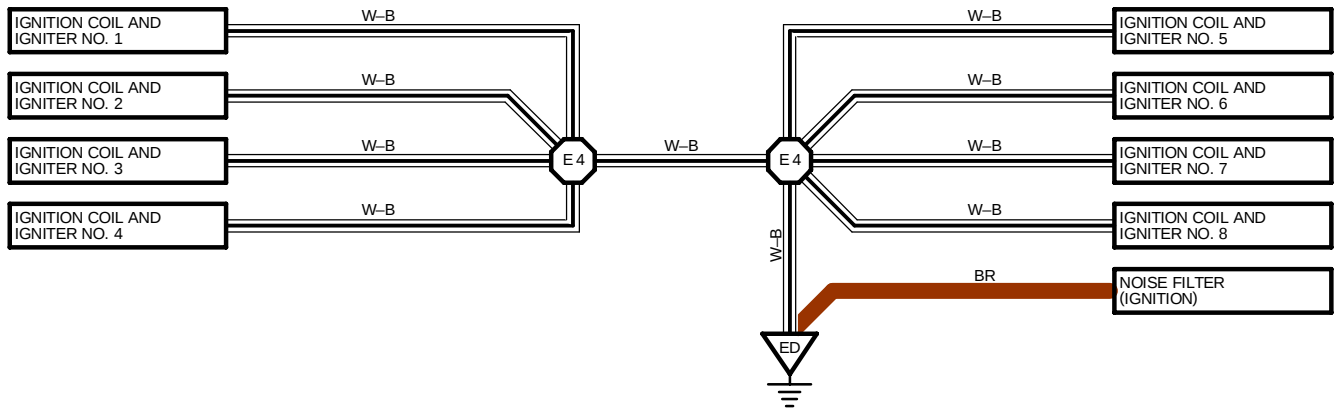

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
J1	41	J20	41	J32	42
J11	41	J23	41	J39	42
J16	41	J26	41	J41	41
J17	41	J30	41		

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1E		
1G	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1H		
1J		
1K		
1L		
2A	26	Roof Wire and Cowl Side J/B LH (Left Kick Panel)
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2C		
2D		
2E	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2L	26	Front Door LH Wire and Cowl Side J/B LH (Left Kick Panel)
2M		
2O	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3B	32	Engine Room No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3C	32	Dash Wire and Cowl Side J/B RH (Right Kick Panel)
3E	32	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3G	32	Front Door RH Wire and Cowl Side J/B RH (Right Kick Panel)
3H		
3I	32	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

I GROUND POINT

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EB1	46	Engine Wire and Transmission Wire (On the Transmission)
EB3		
IF1	48	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IH1	50	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IH2		
IJ1	50	Dash Wire and Detector Wire (Instrument Panel Center)
IK1	50	Console Box Wire and Dash Wire (Left Side of Front Console)
IL1	50	Instrument Panel Integration Wire and Computer Wire (Instrument Panel Center)
IN1	52	Engine Wire and Dash Wire (Behind the Glove Box)
IP1	52	Rear Console Box Wire and Dash Wire (Right Side of Rear Console)
IQ1	52	Instrument Panel Integration Wire and Lamp Wire (Behind the Glove Box)
IV1	54	Dash Wire and Floor No.2 Wire (Behind the Glove Box)
IW1	54	Engine Room No.2 Wire and Dash Wire (Behind the Glove Box)
IX1	54	Instrument Panel Integration Wire and Engine Wire (Behind the Glove Box)
BA1	56	Front Door LH Wire and Front Door LH Sub Wire (Front Door LH)
BB1	56	Rear Door LH Wire and Floor Wire (Left Side of Center Pillar)
BB2		
BD1	56	Frame No.2 Wire and Frame Wire (Near the Left Rear Suspension Support)
BE1	56	Rear Door RH Wire and Floor No.2 Wire (Right Side of Center Pillar)
BE2		
BF3	56	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BG1	56	Frame No.3 Wire and Frame Wire (Near the Right Rear Suspension Support)
BI2	58	Frame Wire and Floor No.3 Wire (Left Side of Rear Floor Crossmember)
BI3		
BK1	58	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BM1	58	Floor No.2 Wire and A/C Sub Wire (Right Side Rear Quarter Panel)
BO3	58	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BP1	60	Floor Wire and Front Seat LH Wire (Front Side Under the Driver's Seat)
BR1	60	Floor No.2 Wire and Front Seat RH Wire (Front Side Under the Front Passenger's Seat)
BS1	58	Luggage Room Wire and Floor Wire (Left Rear Side Quarter Panel)
BT1		

: GROUND POINTS

Code	See Page	Ground Points Location
EA	46	Front Right Side of Fender Apron
EB		
EC	46	Rear Bank of Right Cylinder Head
ED	46	Rear Bank of Left Cylinder Head
EE	46	Front Left Side of Fender Apron

**: GROUND POINTS**

Code	See Page	Ground Points Location
IF	48	Set Bolt of Cowl Side J/B LH
IG		
IH	48	Set Bolt of Cowl Side J/B RH
II		
BJ	56	Under the Driver's Seat
BK	56	Front Side Under the Front Passenger's Seat
BL	56	Rear Side Under the Front Passenger's Seat
BM	56	Left Rear Side Quarter Panel

**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	46	Engine Room Main Wire	B5	58	Roof Wire
E2	46	Engine Room No.2 Wire	B6	58	Floor No.2 Wire
E4	46	Engine Wire	B8	58	Front Door RH Wire
E5	46	Transmission Wire	B9	58	Floor No.2 Wire
E8	46	Engine Room No.2 Wire	B10	58	Floor Wire
I3	50	Instrument Panel Wire	B11	58	Frame Wire
I5	50	Dash Wire	B13	58	Floor No.2 Wire
I6	50	Column Wire	B14	58	Back Door Upper Wire
I8	50	Dash Wire	B15	58	Floor No.3 Wire
I9	50	Console Box Wire	B17	58	Back Door Lower Wire
I11	50	Dash Wire	B19	60	Front Seat LH Wire
B1	58	Front Door LH Wire	B20	60	Front Seat RH Wire
B3	58	Floor Wire			