

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	C 1	Camshaft Position Sensor	90980-10947
A 2	A/C Condenser Fan Motor	90980-11237	C 2	Center Diff. Lock Control Motor	90980-11024
A 3	A/C Condenser Fan Relay	90980-10940	C 3	Crankshaft Position Sensor	90980-11162
A 4	A/C Magnetic Clutch and Lock Sensor	90980-11016	C 4	Cellular Phone (Hand Set)	90980-10907
A 5	A/C Triple Pressure SW (A/C Dual and Single Pressure SW)	90980-10943	C 5	Cellular Phone (Hand Set)	90908-10798
A 6	A/T Oil Temp. Sensor	90980-11025	C 6	Center Airbag Sensor Assembly	90980-11872
A11	ABS Speed Sensor Front LH	90980-10941	C 7	Center Diff. Lock Control Relay	90980-10801
A12	ABS Speed Sensor Front RH	90980-11002	C 8	Center ECU	90980-11390
A13	Accel Position Sensor	90980-11150	C 9	Center ECU	90980-11391
A14	AHC Pump Motor	90980-10928	C10	Center ECU	90980-11408
A15	Airbag Sensor Front LH	90980-11856	C11	Center ECU	90980-11392
A16	Airbag Sensor Front RH		C12	Cigarette Lighter	90980-10760
A17	Auto Antenna Motor	90980-11194	C13	Cigarette Lighter Illumination	90980-11148
A18	A/C Solar Sensor	90980-11919	C14	Combination Meter	82824-60060
A19	A/C Thermistor	90980-11918	C15	Combination Meter	82824-60050
A24	AHC Main Relay	90980-10171	C16	Combination Meter	82824-60060
A25	Air Inlet Control Servo Motor	90980-11165	C17	Combination Meter	82824-60050
A26	Air Mix Control Servo Motor	90980-10797	C18	Combination SW	90980-11672
A27	Air Vent Mode Control Servo Motor	90980-11165	C19	Combination SW	90980-11581
A28	Airbag Squib (Front Passenger Airbag Assembly)	90980-11884	C20	Combination SW	90980-11616
A29	Airbag Squib (Steering Wheel Pad)	90980-10850	C21	Combination SW	90980-11594
A30	Ashtray Illumination	90980-10825	C22	Control Valve Assembly	90980-11599
A31	Auto Antenna Control Relay	90980-10819	D 1	Data Link Connector 1	90980-11195
A32	Automatic Light Control Sensor	90980-11633	D 2	Daytime Running Light Relay No.3	90980-10939
A33	A/C Amplifier	90980-11502	D 3	Daytime Running Light Relay No.3	90980-10940
A34	A/C Amplifier	90980-11497	D 4	Detection SW (Center Diff. Lock)	90980-11250
A35	A/C Amplifier	90980-11475	D 5	Detection SW (Transfer L Position)	
A36	ABS Speed Sensor Rear LH	90980-11073	D 6	Detection SW (Transfer Neutral Position)	90980-11025
A37	ABS Speed Sensor Rear RH		D 7	Damping Mode Select SW and Height Control SW	90980-11533
A38	Accumulator Solenoid	90980-11019	D 8	Data Link Connector 3	90080-98012
A39	ABS & BA & TRAC & VSC ECU	90980-11935	D 9	Daytime Running Light Relay (Main)	90980-10819
A40	ABS & BA & TRAC & VSC ECU	90980-11476	D10	Damping Force Control Actuator Front LH	90980-11960
A41	ABS & BA & TRAC & VSC ECU	90980-11637	D11	Damping Force Control Actuator Front RH	
A42	ABS & BA & TRAC & VSC ECU	90980-11638	D12	Damping Force Control Actuator Rear LH	
A43	ABS & BA & TRAC & VSC Actuator	90980-11413	D13	Damping Force Control Actuator Rear RH	
A44	ABS & BA & TRAC & VSC Actuator	90980-10895	D15	Door Courtesy Light Front LH	90980-11148
A45	ABS & BA & TRAC & VSC Actuator	90980-11151	D16	Door Courtesy Light Front RH	
A46	ABS & BA & TRAC & VSC Actuator	90980-11009	D17	Door Courtesy Light Rear LH	
B 1	Blower Motor Controller	90980-10910	D18	Door Courtesy Light Rear RH	
B 2	Back Door Courtesy SW	90980-10039	D19	Door Courtesy SW Front LH	90980-10871
B 3	Back Door Key Lock and Unlock SW	90980-11490	D20	Door Courtesy SW Front RH	
B 4	Back Door Lock Motor and Back Door Unlock Detection SW	90980-11150	D21	Door Courtesy SW Rear LH	
B 5	Buckle SW LH	90980-11211	D22	Door Courtesy SW Rear RH	
B 6	Buckle SW RH		D23	Door Key Lock and Unlock SW LH	90980-11170
			D24	Door Key Lock and Unlock SW RH	

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
D25	Door Lock Control SW RH	90980-10601	H 8	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028
D26	Door Lock Motor and Door Unlock Detection SW Front LH	90980-11150	H 9	Heated Oxygen Sensor (Bank 2 Sensor 1)	90980-10869
D27	Door Lock Motor and Door Unlock Detection SW Front RH		H10	Heated Oxygen Sensor (Bank 2 Sensor 2)	90980-11028
D28	Door Lock Motor and Door Unlock Detection SW Rear LH		H11	Height Control Sensor Front LH	90980-11015
D29	Door Lock Motor and Door Unlock Detection SW Rear RH		H12	Height Control Sensor Front RH	
D30	Driving Position Memory SW	90980-10601	H13	Horn LH	90980-10619
D31	Deceleration Sensor	90980-11182	H14	Horn RH	
E 1	Electronically Controlled Transmission Solenoid	90980-10891	H15	Height Control Sensor Rear	90980-11143
E 2	Engine Coolant Temp. Sensor	90980-10737	H16	High Mounted Stop Light	90980-11211
E 3	Engine Hood Courtesy SW	90980-11003	I 1	Ignition Coil and Igniter No.1	90980-11885
E 4	Exhaust Gas Sensor	90980-11150	I 2	Ignition Coil and Igniter No.2	
E 5	Electronically Controlled Transmission Pattern Select SW	90980-10933	I 3	Ignition Coil and Igniter No.3	
E 6	Engine Control Module	90980-11421	I 4	Ignition Coil and Igniter No.4	
E 7	Engine Control Module	90980-11476	I 5	Ignition Coil and Igniter No.5	
E 8	Engine Control Module	90980-11586	I 6	Ignition Coil and Igniter No.6	
E 9	Engine Control Module	90980-11637	I 7	Ignition Coil and Igniter No.7	
E10	Engine Control Module	90980-11638	I 8	Ignition Coil and Igniter No.8	90980-11153
F 1	Fluid Pressure Sensor	90980-10845	I 9	Injector No.1	
F 2	Front Fog Light LH	90980-11156	I10	Injector No.2	
F 3	Front Fog Light RH		I11	Injector No.3	
F 4	Front Turn Signal Light LH	90980-11019	I12	Injector No.4	
F 5	Front Turn Signal Light RH		I13	Injector No.5	
F 6	Front Wiper Motor	90980-11599	I14	Injector No.6	
F 7	Fusible Link Block	82620-60010	I15	Injector No.7	
F 8	Fuel Control SW	90980-10860	I16	Injector No.8	90980-10906
F 9	Front Door Speaker LH	90980-10935	I17	Ignition Key Cylinder Light	
F10	Front Door Speaker RH		I18	Ignition SW	90980-11615
F11	Front Interior light and Rear Personal Light	90980-10365	I19	Instrument ECU	90980-11927
F12	Front Personal Light	90980-10935	I20	Instrument ECU	90980-11914
F13	Fuel Pump and Sender	90980-11077	I21	Instrument ECU	90980-11925
F14	Fuel Pump Control ECU	90980-10862	I22	Inner Mirror	90980-11186
G 1	Generator	90980-09212	J 1	Junction Connector	—
G 2	Generator	90980-11349	J 3	Junction Connector	90980-11927
G 3	Glove Box Light	90980-11098	J 4	Junction Connector	
G 4	Garage Door Opener	90980-11212	J 5	Junction Connector	
H 1	Headlight Cleaner Control Relay	90980-10939	J 6	Junction Connector	90980-11925
H 2	Headlight Cleaner Motor	90980-11410	J 7	Junction Connector	—
H 3	Headlight LH (High)	90980-11659	J 8	Junction Connector	
H 4	Headlight LH (Low)	90980-11294	J11	Junction Connector	
H 5	Headlight RH (High)	90980-11659	J12	Junction Connector	
H 6	Headlight RH (Low)	90980-11294	J13	Junction Connector	90980-11927
H 7	Heated Oxygen Sensor (Bank 1 Sensor 1)	90980-10869	J14	Junction Connector	
			J15	Junction Connector	—
			J16	Junction Connector	

Note: Not all of the above part numbers of the connector are established for the supply. In case of ordering a connector or terminal with wire, please confirm in advance if there is supply for it using “Parts Catalog News” (published by Parts Engineering Administration Dept.).

Code	Part Name	Part Number	Code	Part Name	Part Number
J17	Junction Connector	90980-11927	P 4	Power Outlet (Front)	90980-10760
J18	Junction Connector		P 5	Power Outlet (Rear Console Box)	90980-10860
J19	Junction Connector		P 6	Power Quarter Window SW LH	90980-10797
J20	Junction Connector		P 7	Power Quarter Window SW RH	90980-10996
J21	Junction Connector	—	P 8	Parking Brake SW	90980-10871
J22	Junction Connector		P 9	Power Outlet (Luggage Compartment)	90980-10860
J23	Junction Connector	90980-11925	P10	Power Vent Window Motor LH	
J24	Junction Connector		P11	Power Vent Window Motor RH	
J25	Junction Connector		P12	Power Window Control SW Front RH	90980-11947
J26	Junction Connector		P13	Power Window Control SW Rear LH	
J27	Junction Connector	—	P14	Power Window Control SW Rear RH	
J28	Junction Connector		P15	Power Window Master SW	90980-11469
J29	Junction Connector		P16	Power Window Motor Front LH	90980-11599
J30	Junction Connector		P17	Power Window Motor Front RH	
J31	Junction Connector		P18	Power Window Motor Rear LH	
J32	Junction Connector		P19	Power Window Motor Rear RH	
J33	Junction Connector		P20	Pretensioner LH	90980-11862
J34	Junction Connector		P21	Pretensioner RH	
J35	Junction Connector		P22	Power Seat Control SW (Driver's Seat)	90980-10803
J36	Junction Connector		P23	Power Seat Control SW (Front Passenger's Seat)	
J37	Junction Connector		P24	Power Seat ECU	90980-11502
J38	Junction Connector		P25	Power Seat ECU	90980-11527
J39	Junction Connector		P26	Power Seat Motor (Driver's Seat Front Vertical Control)	90980-10825
J40	Junction Connector		P27	Power Seat Motor (Driver's Seat Lumbar Support Control)	
J41	Junction Connector		P28	Power Seat Motor (Driver's Seat Rear Vertical Control)	
J42	Junction Connector		P29	Power Seat Motor (Driver's Seat Reclining Control)	
J43	Junction Connector	82824-10020	P30	Power Seat Motor (Driver's Seat Slide Control)	
J44	Junction Connector	82824-10010	P31	Power Seat Motor (Front Passenger's Seat Front Vertical Control)	
J45	Junction Connector		P32	Power Seat Motor (Front Passenger's Seat Rear Vertical Control)	
K 1	Knock Sensor 1	90980-11166	P33	Power Seat Motor (Front Passenger's Seat Reclining Control)	90980-10908
K 2	Knock Sensor 2		P34	Power Seat Motor (Front Passenger's Seat Slide Control)	
K 3	Key Interlock Solenoid	90980-10825	P35	Power Seat Position Sensor (Driver's Seat Front Vertical Control)	
L 1	License Plate Light LH	90980-11148	P36	Power Seat Position Sensor (Driver's Seat Rear Vertical Control)	
L 2	License Plate Light RH		P37	Power Seat Position Sensor (Driver's Seat Reclining Control)	
L 3	Lumbar Support Control SW (Driver's Seat)	90980-10601	P38	Power Seat Position Sensor (Driver's Seat Slide Control)	
M 1	Mass Air Flow Meter	90980-11317	R 1	Radio and Player	90980-11502
M 2	Moon Roof Control ECU	90980-10997	R 4	Remote Control Mirror SW	90980-11657
M 3	Moon Roof Control SW	90980-10789			
M4	Master Cylinder Pressure Sensor	90980-10845			
N 1	Noise Filter (Ignition)	90980-10843			
O 1	O/D Direct Clutch Speed Sensor	90980-11156			
O 2	Oil Pressure Sender	90980-11363			
O 3	O/D Main SW and Shift Lock Control ECU	90980-11614			
P 1	Park/Neutral Position SW,A/T Indicator Light SW and Back-Up Light SW	90980-11784			
P 2	Parking Light and Side Marker Light LH	90980-11156			
P 3	Parking Light and Side Marker Light RH				

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
R 5	Remote Control Mirror SW	90980-11319	S12	Stereo Component Amplifier	90980-11556
R 6	Rheostat	90980-10799	S13	Seat Belt Warning Occupant Detection Sensor	90980-10860
R 7	Room Temp. Sensor (Front)	90980-11918	S14	Seat Heater (Driver's Seat)	90980-10907
R 8	Rear A/C Control SW	90980-11503	S15	Seat Heater (Front Passenger's Seat)	
R 9	Rear Air Mix Control Servo Motor	90980-11319	S16	Side Step Light LH	90980-11051
R10	Rear Combination Light LH	90980-11587	S17	Side Step Light RH	
R11	Rear Combination Light LH	90980-10795	T 1	Temp. Sensor (AHC)	90980-10737
R12	Rear Combination Light RH		T 2	Theft Deterrent Horn	90980-10619
R13	Rear Combination Light RH	90908-11587	T 3	Throttle Control Motor	90980-10942
R14	Rear Cooler Blower Motor	90980-10214	T 4	Throttle Position Sensor	90980-11037
R15	Rear Cooler Magnetic Valve	90980-10860	T 5	Telescopic Motor	90980-10799
R16	Rear Cooler Power Transistor	90980-10171	T 6	Theft Deterrent ECU	90980-10765
R17	Rear Cooler Relay		T 7	Theft Deterrent ECU	90980-10973
R19	Rear Door Speaker LH	90980-10935	T 8	Tilt and Telescopic ECU	90980-10848
R20	Rear Door Speaker RH		T 9	Tilt and Telescopic ECU	90980-10799
R21	Rear Evaporator Temp. Sensor	90980-11918	T10	Tilt Motor	
R22	Rear Heater Blower Motor	90980-10860	T11	Transponder Key Amplifier	90980-10933
R23	Rear Heater Power Transistor	90980-10171	T12	Turn Signal Flasher	90980-10799
R24	Rear Inlet Air Temp. Sensor	90980-11369	T13	Telephone Transceiver and Speaker Relay	90980-10803
R25	Rear Interior Light	90980-10935	T14	Telephone Transceiver and Speaker Relay	90980-10802
R26	Rear Window Defogger	90980-11097	T15	Trailer Socket	90980-10988
R27	Rear Window Defogger		T16	Tweeter LH	90980-11300
R28	Rear Wiper Motor	90980-10795	T17	Tweeter RH	
R29	Rear Wiper Relay	90980-10797	U 1	Unlock Warning SW	90980-10860
R30	Remote Control Mirror ECU	90980-11877	V 1	Vapor Pressure Sensor	90980-11143
R31	Remote Control Mirror LH	90980-11573	V 2	Vehicle Speed Sensor (Combination Meter)	
R32	Remote Control Mirror RH		V 3	Vehicle Speed Sensor (Electronically Controlled Transmission)	90980-11156
R33	Room Temp. Sensor (Rear)	90980-11918	V 4	VSV (EVAP)	
S 1	Starter	90980-11400	V 5	VSV (Vapor Pressure Sensor)	
S 2	Starter	90980-09585	V 6	Vanity Light LH	90980-11369
S 3	Seat Heater SW (Driver's Seat)	90980-10797	V 7	Vanity Light RH	
S 4	Seat Heater SW (Front Passenger's Seat)	90980-10996	V 8	VSC Warning Buzzer	90980-10906
S 5	Stop Light SW	90980-11118	W 1	Washer Motor	90980-11290
S 6	Suspension Control ECU	90980-11390	W 2	Water Temp. Sender	90980-11428
S 7	Suspension Control ECU	90980-11391	W 3	Wireless Door Lock Buzzer	90980-11156
S 8	Suspension Control ECU	90980-11424	W 4	Wireless Door Lock ECU	90980-11264
S 9	Stereo Component Amplifier	90980-11535	W 5	Woofer (Speaker)	90980-10795
S10	Stereo Component Amplifier	90980-11542	Y 1	Yaw Rate Sensor	90980-11904
S11	Stereo Component Amplifier	90980-11591			

Note: Not all of the above part numbers of the connector are established for the supply. In case of ordering a connector or terminal with wire, please confirm in advance if there is supply for it using "Parts Catalog News" (published by Parts Engineering Administration Dept.).