





F RELAY LOCATIONS

[Engine Compartment]

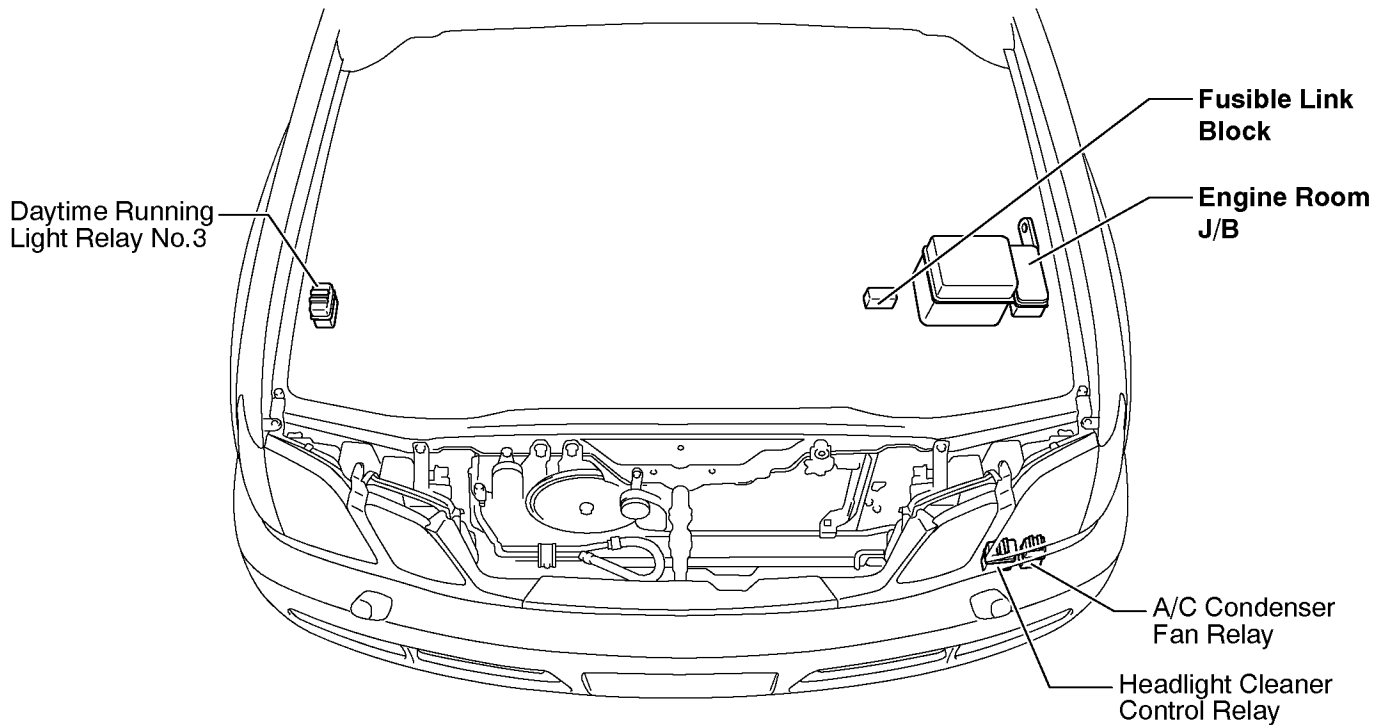

[Instrument Panel]

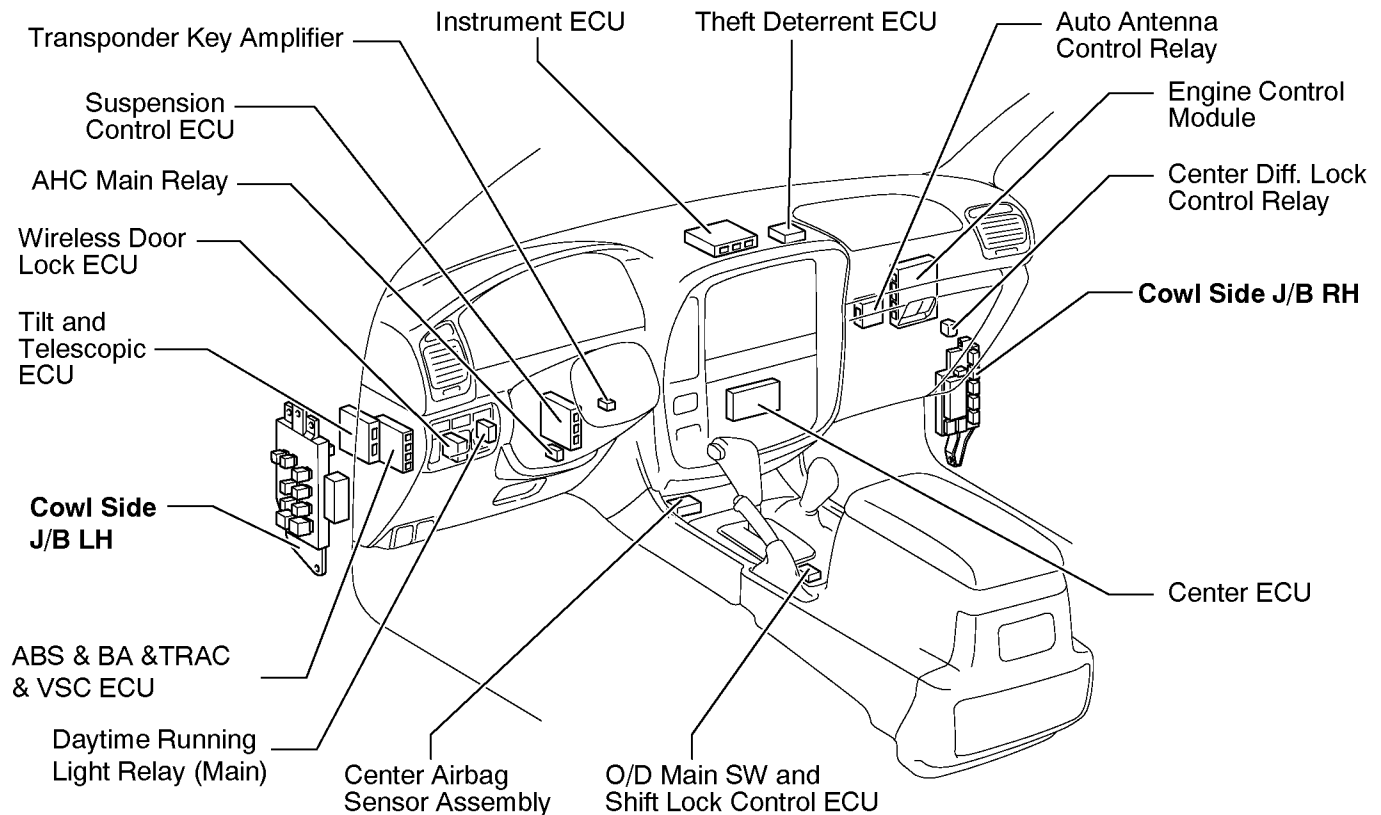


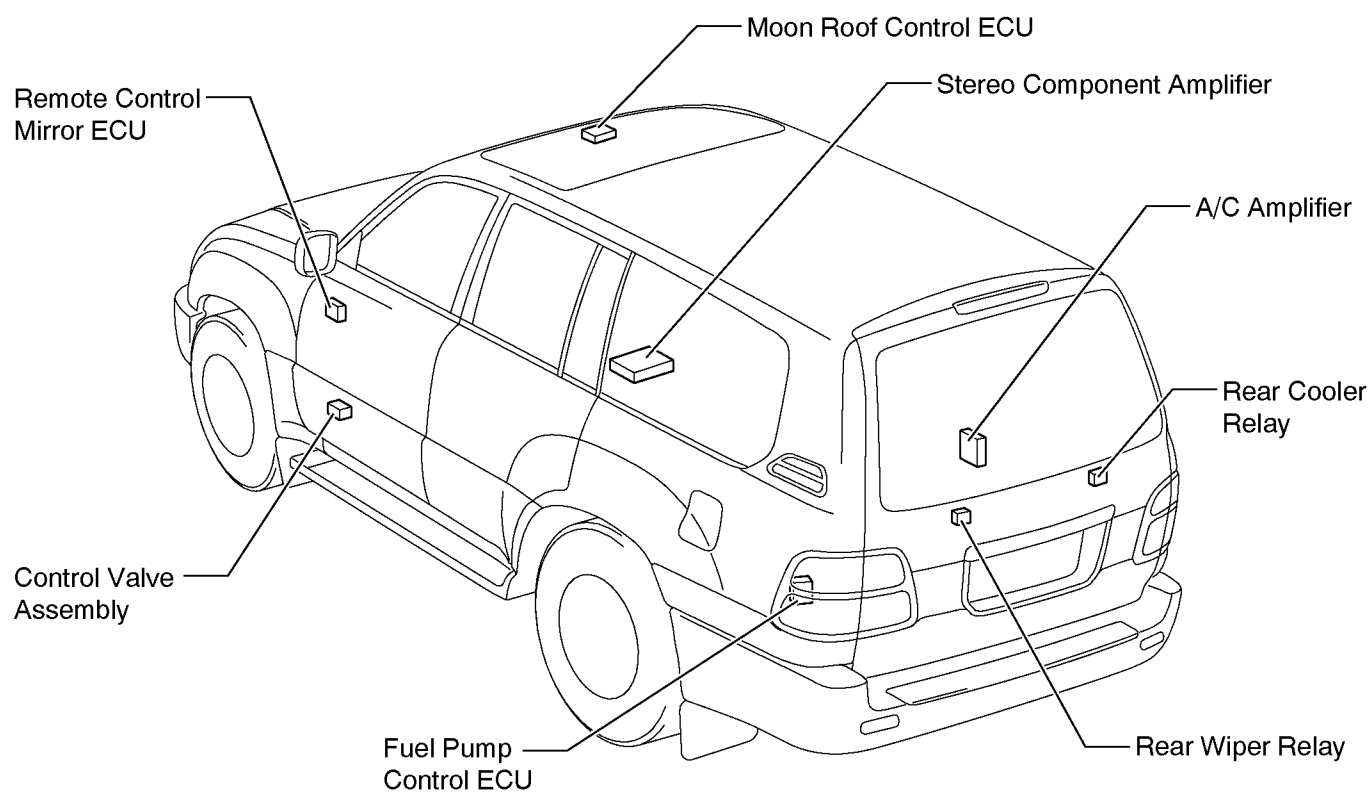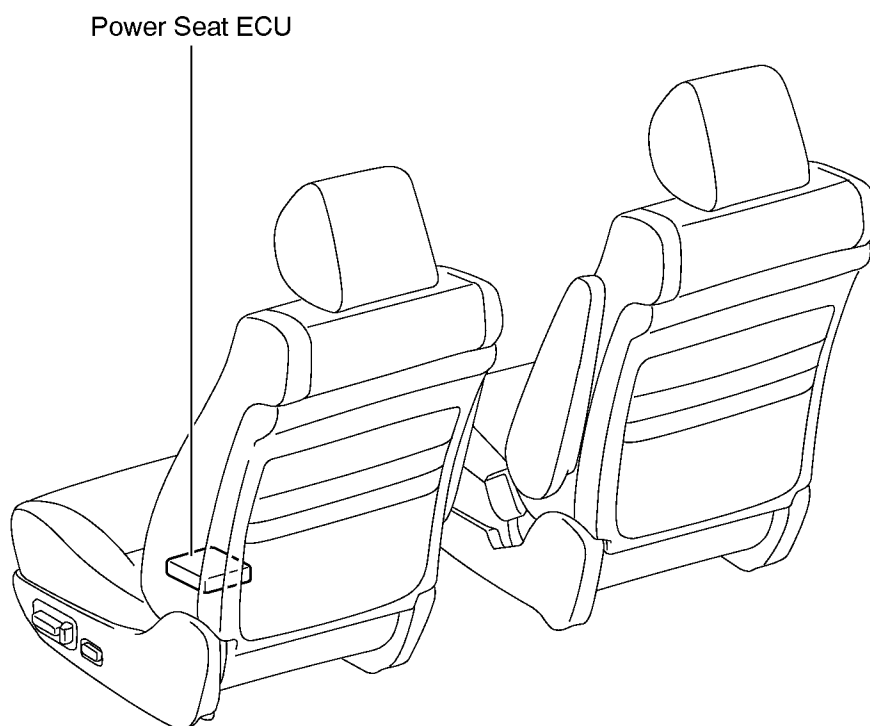
[Body]**[Seat]**

F RELAY LOCATIONS

○ : Engine Room J/B


Engine Compartment Left (See Page 20)

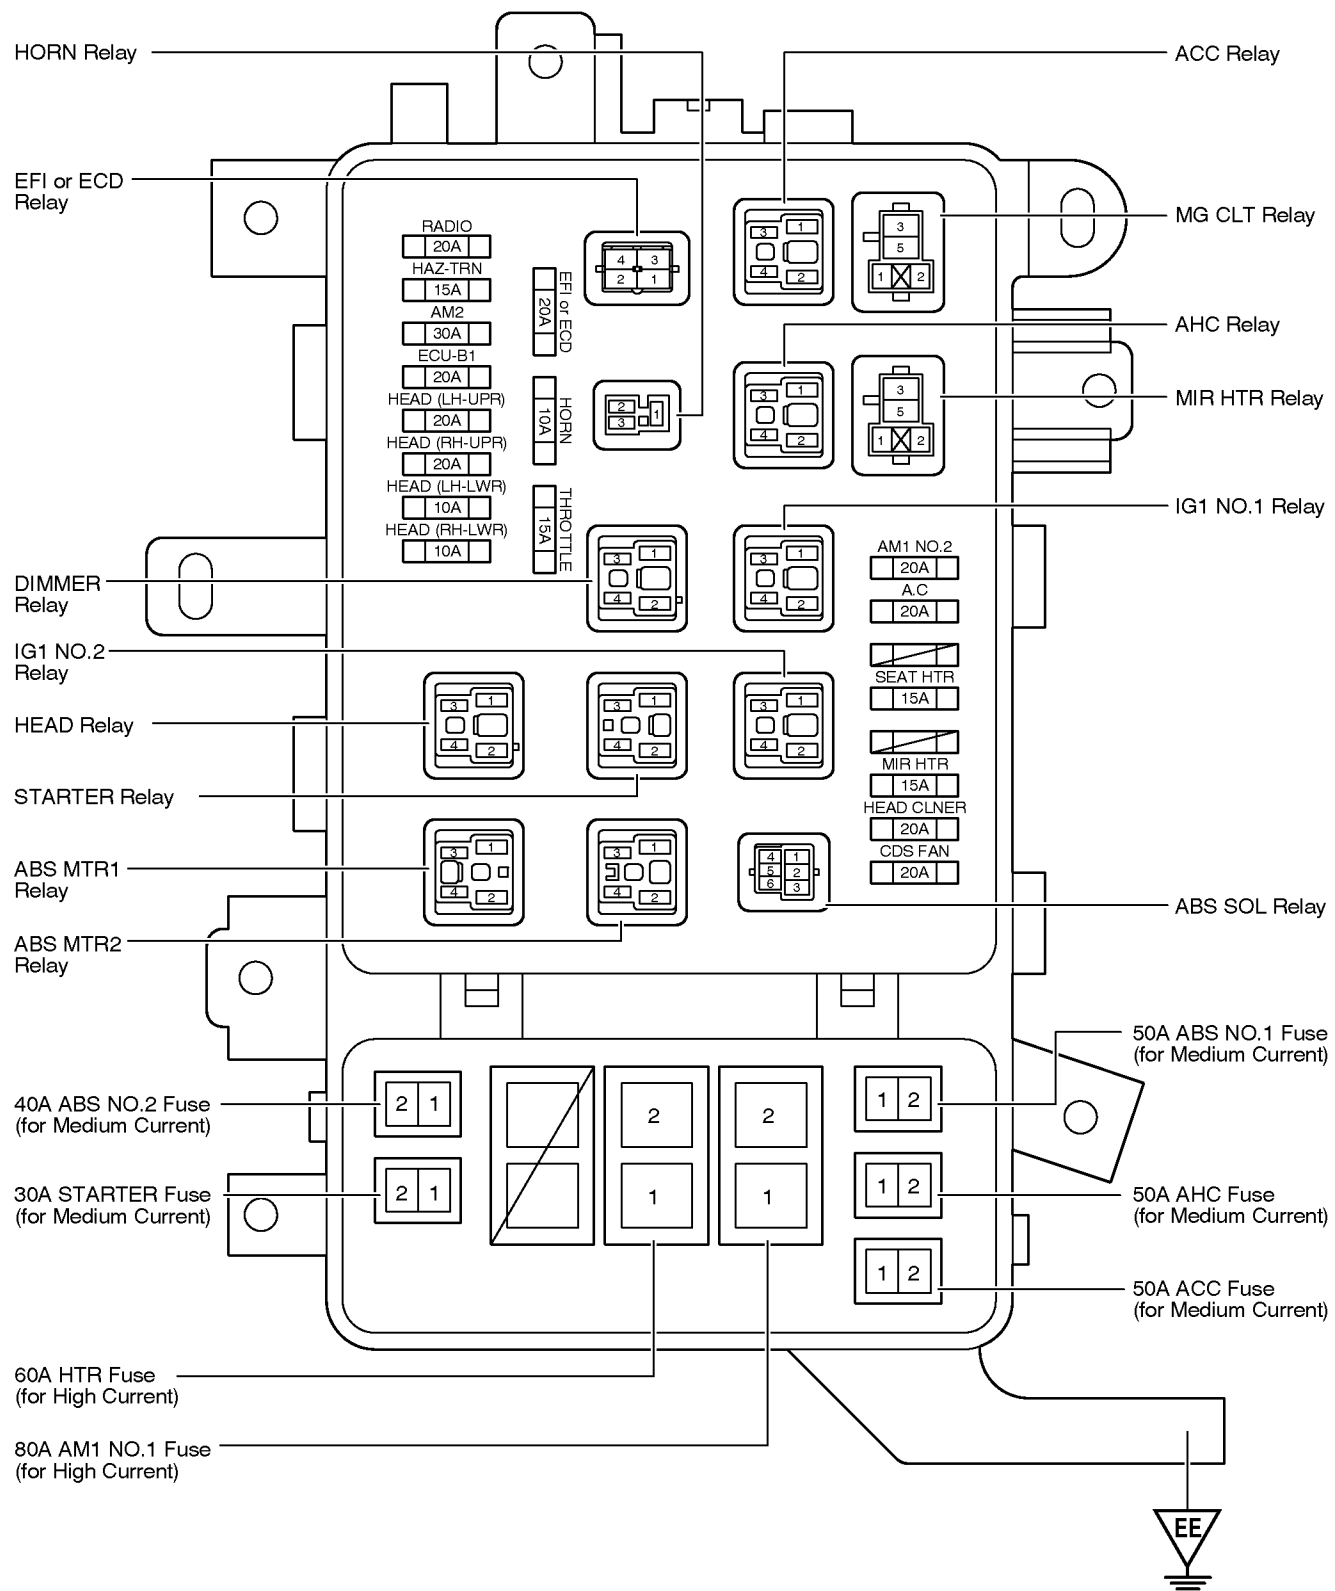

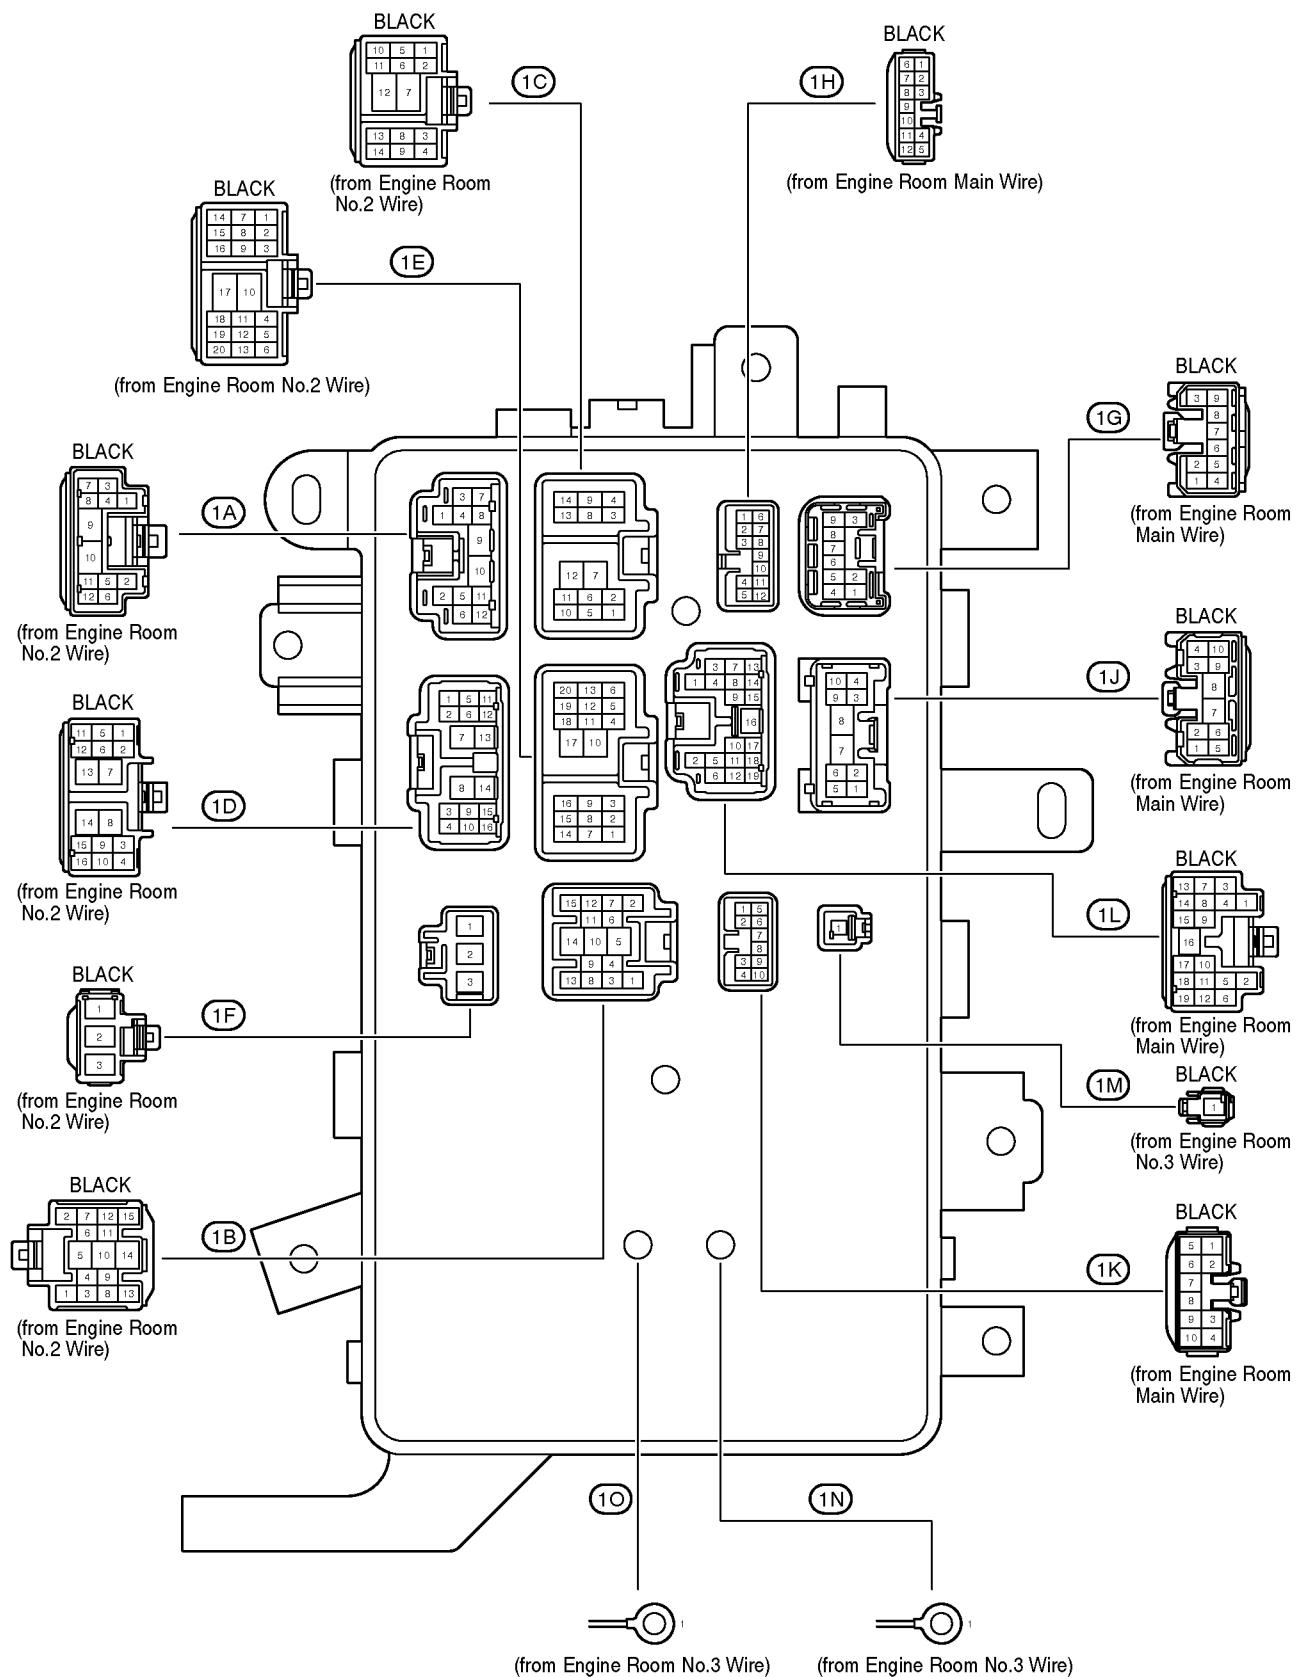


F RELAY LOCATIONS

[Engine Room J/B Inner Circuit]

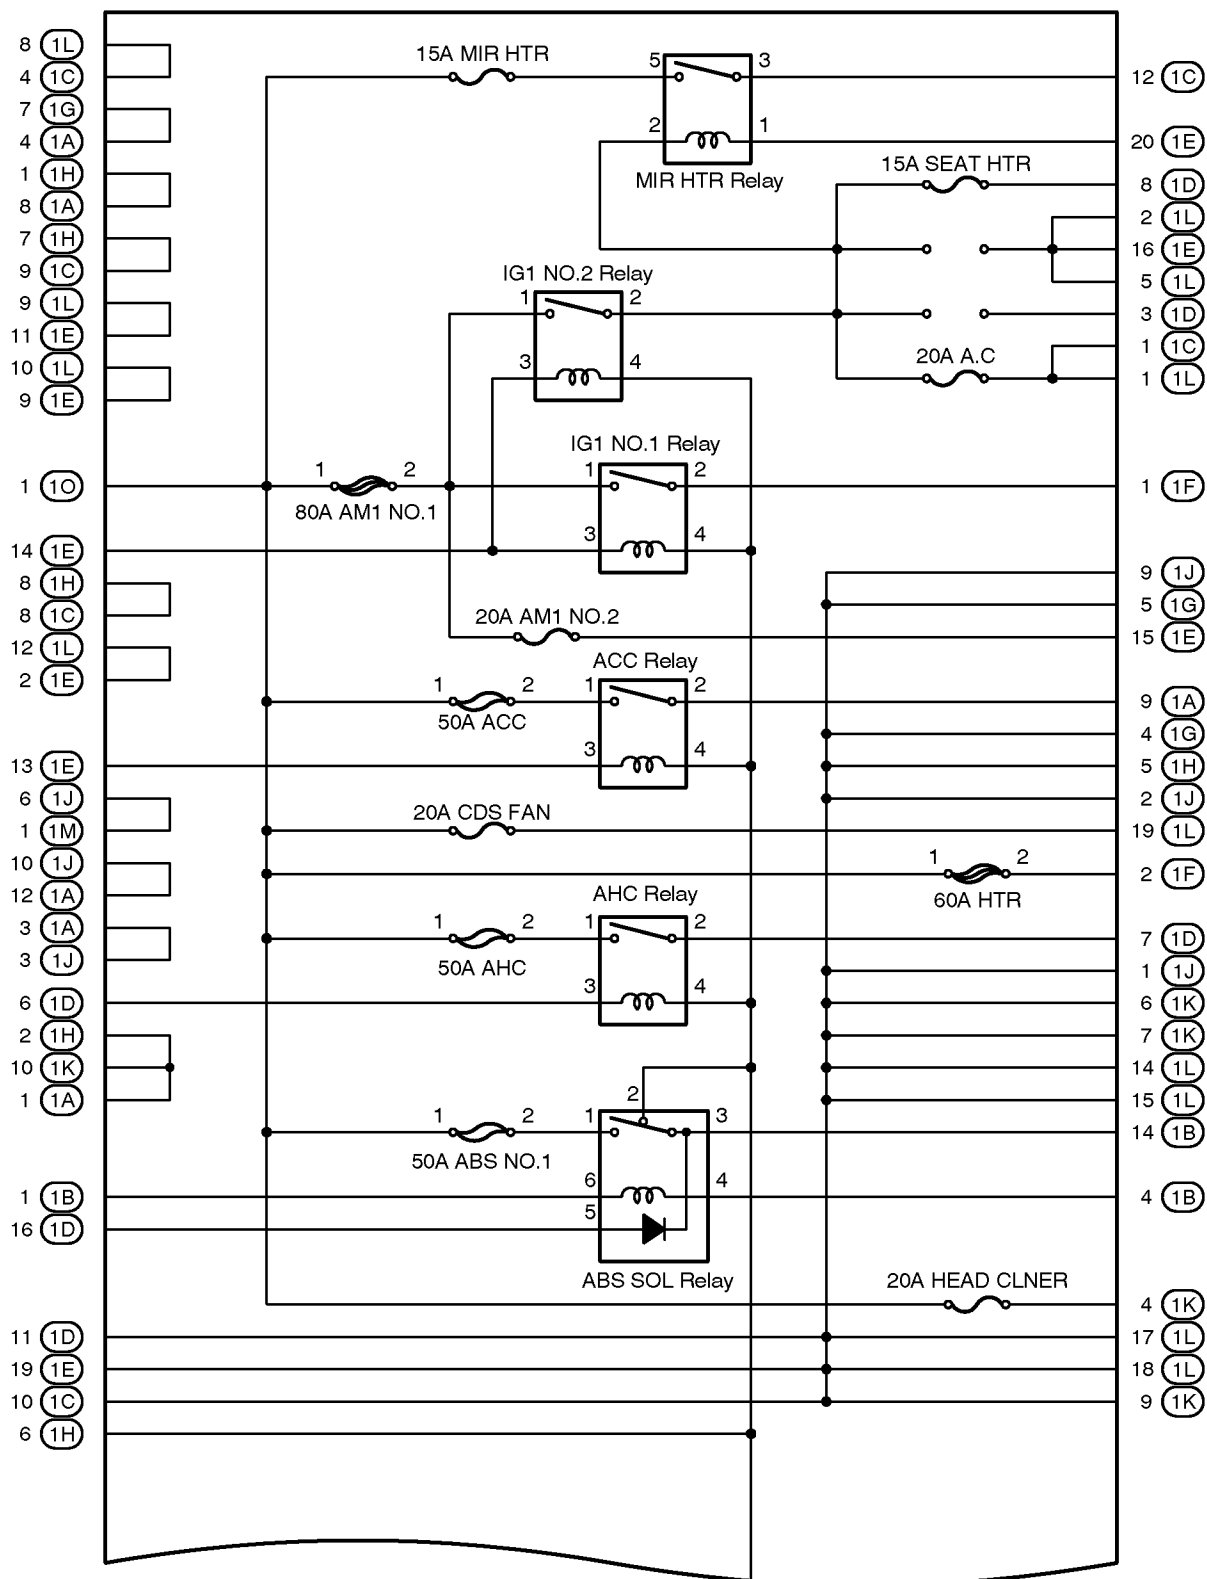

Cont. Next Page


Cont'd

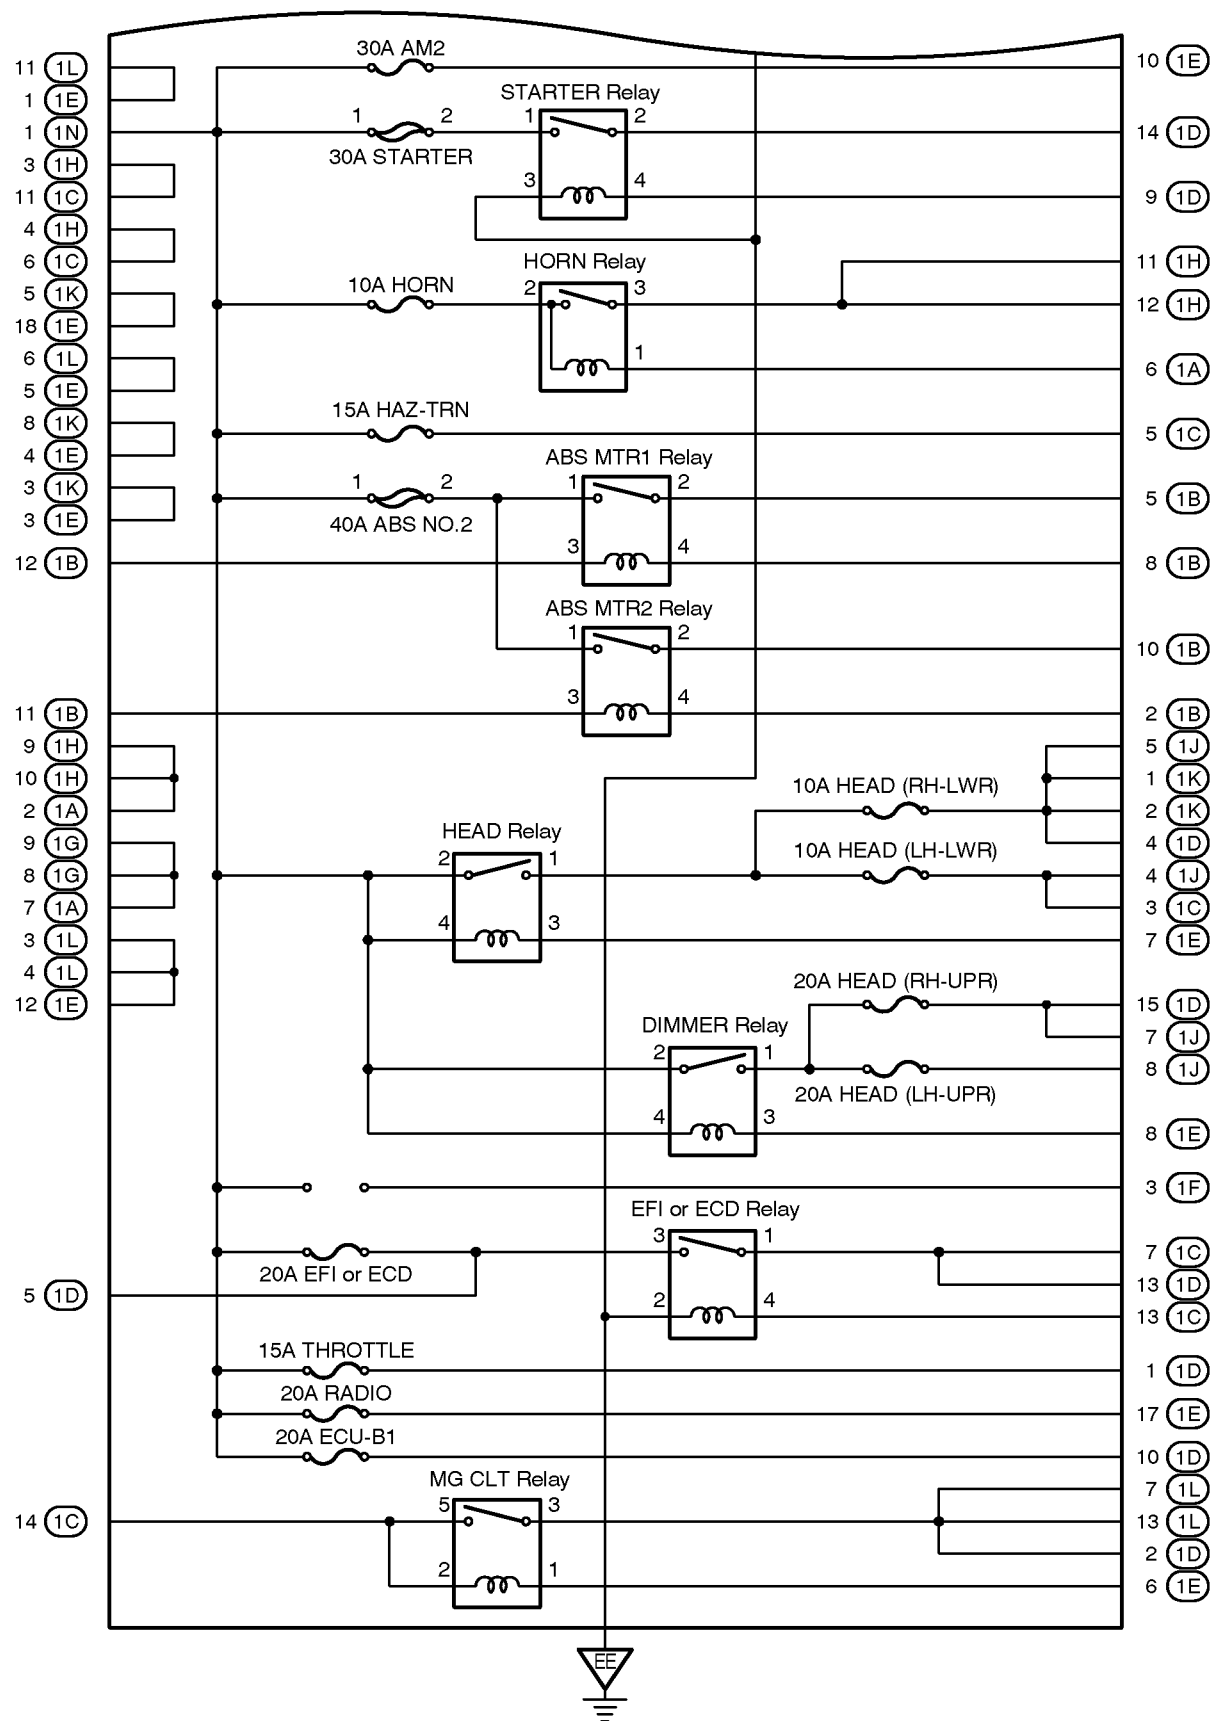


F RELAY LOCATIONS

 : Cowl Side J/B LH

Left Kick Panel (See Page 20)

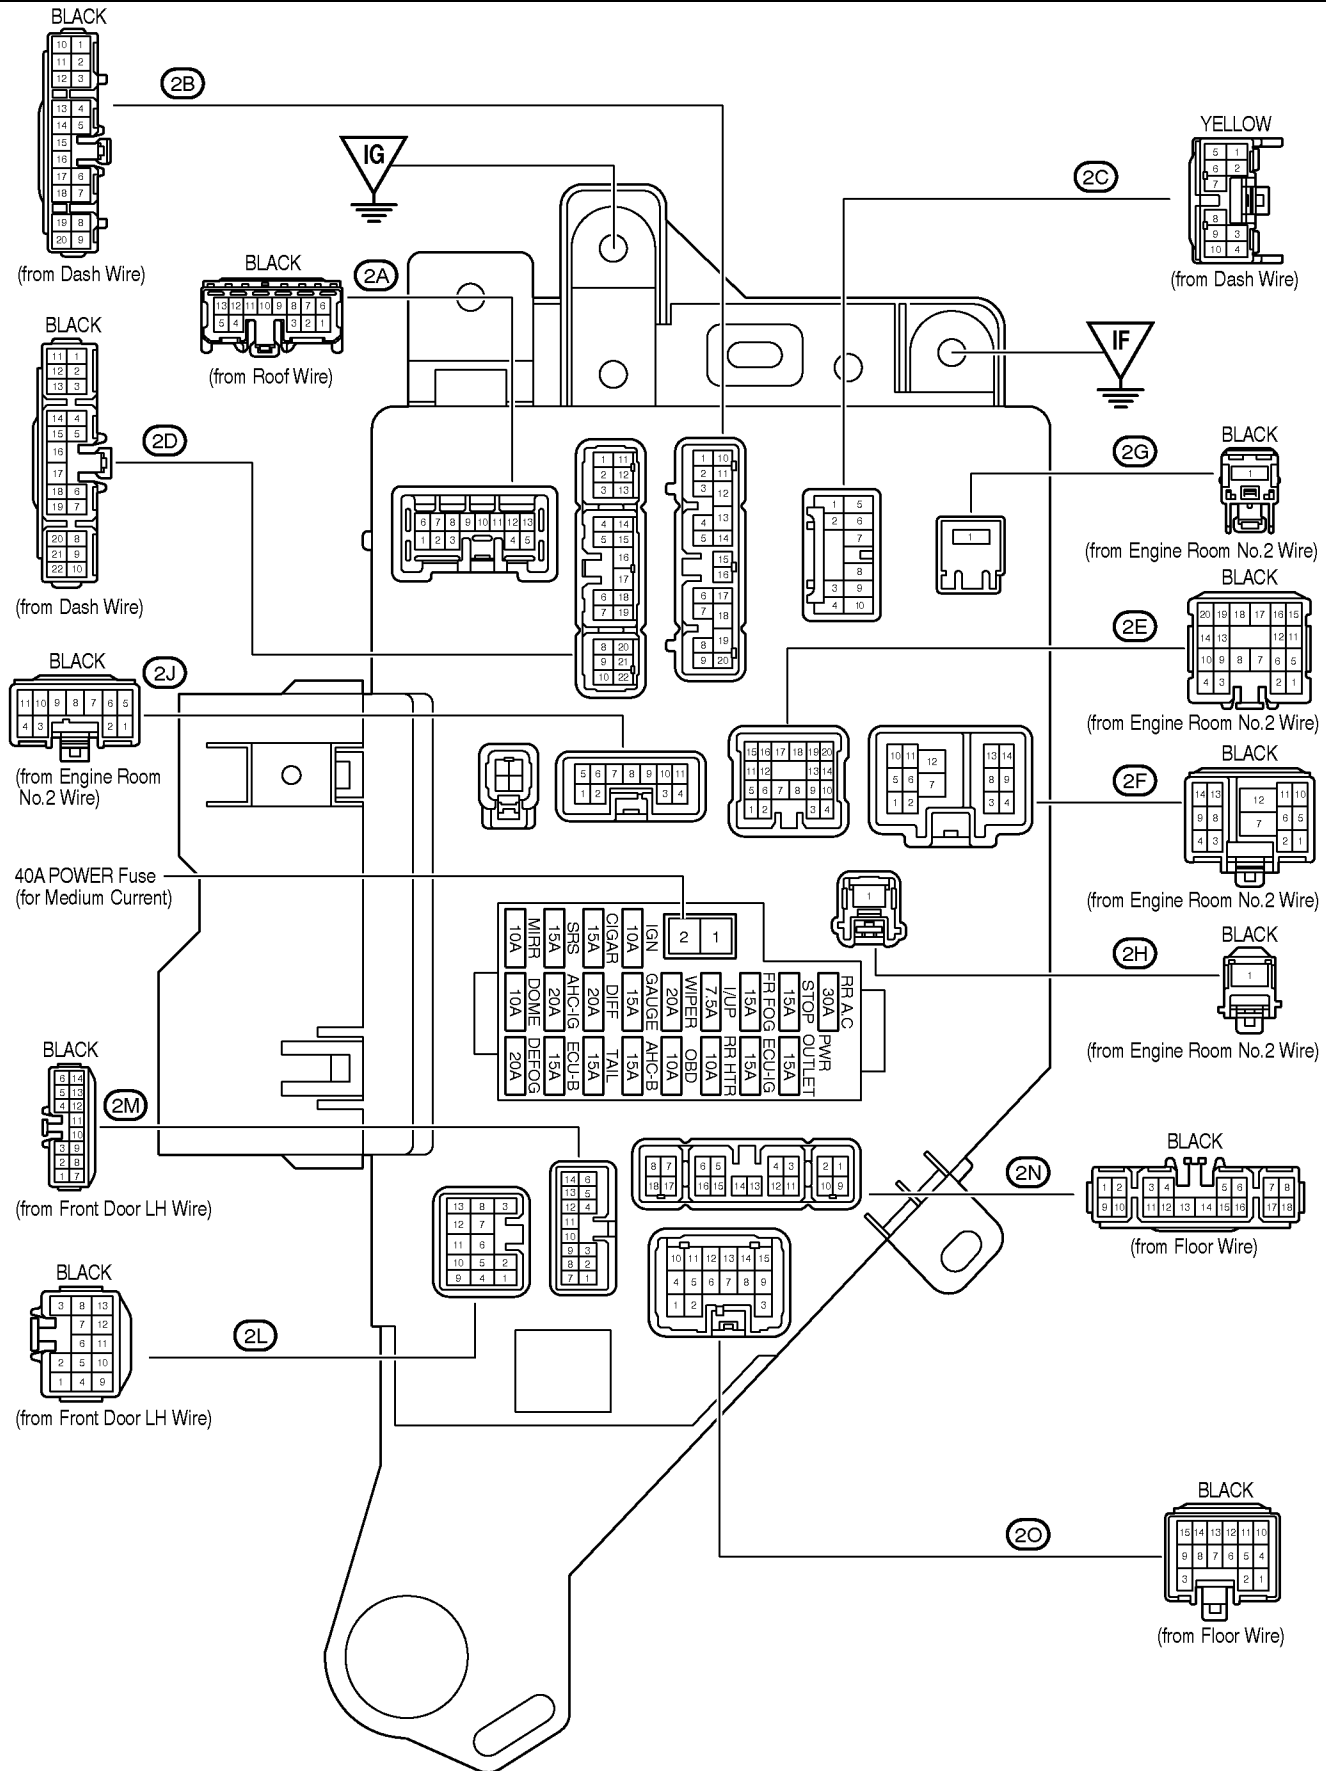


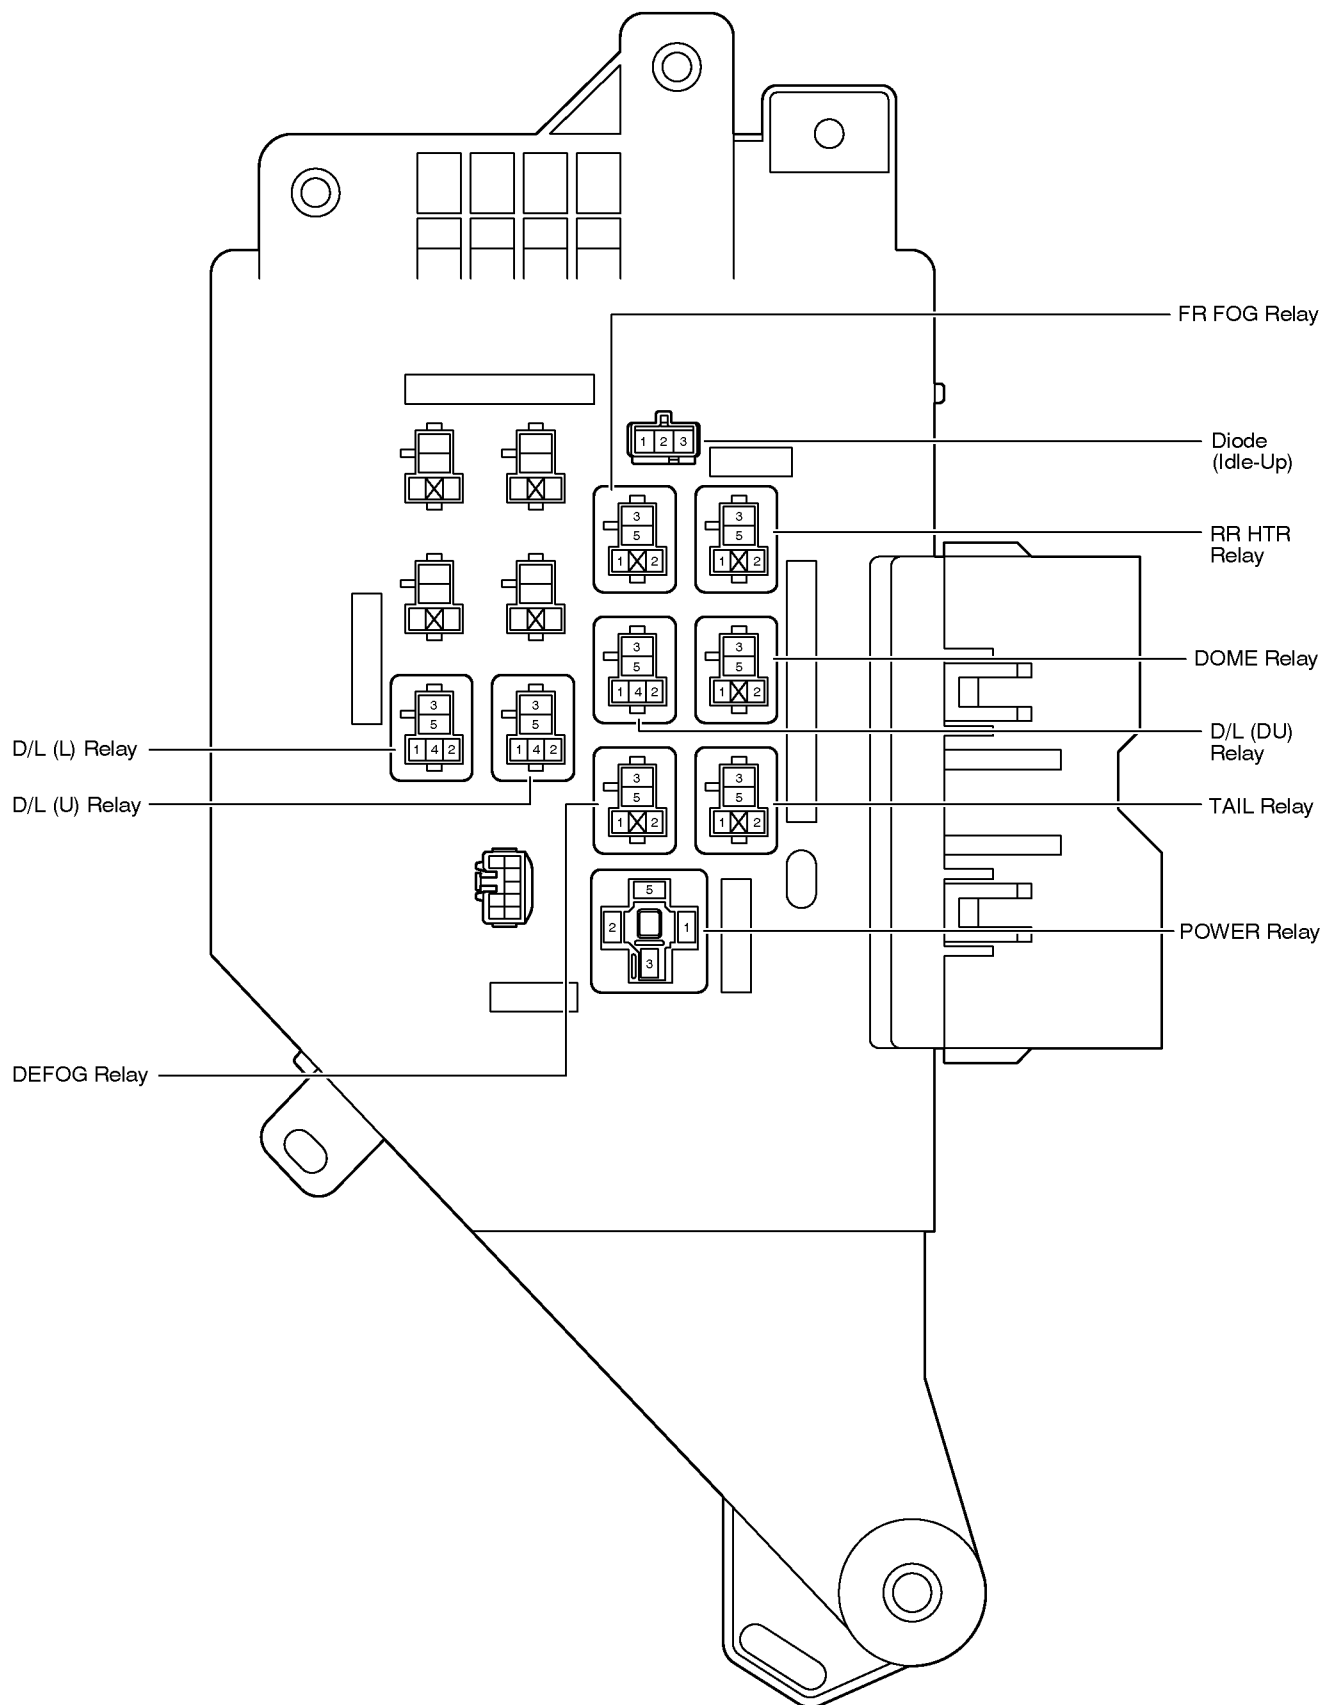

F RELAY LOCATIONS

 : Cowl Side J/B LH

Left Kick Panel (See Page 20)

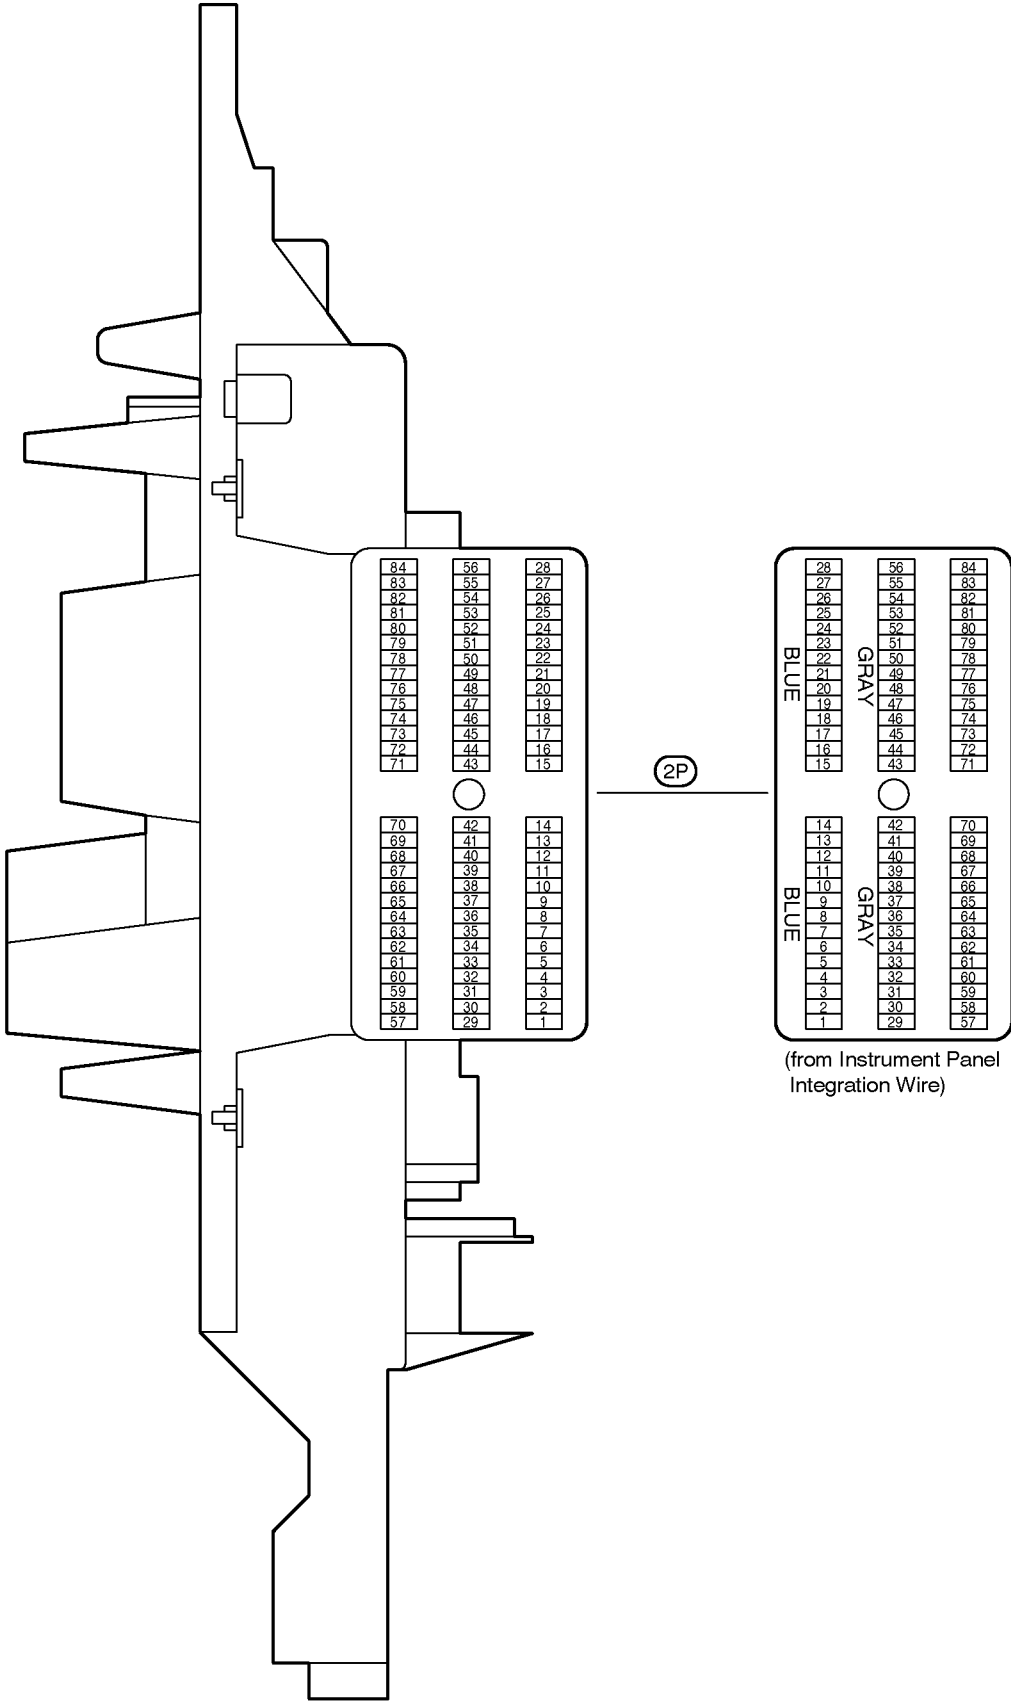

[Cowl Side J/B LH Inner Circuit]

10 (2E)
20 (2D)
11 (2M)
14 (2M)
35 (2P)
3 (2M)
10 (2A)
7 (2D)
10 (2M)
11 (2A)
8 (2D)
4 (2M)
13 (2N)
11 (2D)
13 (2M)
34 (2P)
4 (2J)
5 (2E)
6 (2E)
10 (2P)
7 (2L)
3 (2A)
4 (2A)
60 (2P)
10 (2J)
12 (2O)
21 (2P)
9 (2M)
3 (2N)
4 (2D)
10 (2N)
13 (2A)
27 (2P)
6 (2L)
6 (2O)
59 (2P)
12 (2M)
33 (2P)
9 (2L)
4 (2O)
74 (2P)
10 (2C)
15 (2D)
50 (2P)
2 (2M)
32 (2P)
1 (2M)
31 (2P)
1 (2J)
12 (2P)


10 (2F)
19 (2D)
51 (2P)
4 (2C)
16 (2B)
3 (2C)
13 (2B)
2 (2J)
11 (2P)
5 (2J)
54 (2P)
17 (2N)
78 (2P)
15 (2N)
6 (2P)
11 (2N)
76 (2P)
6 (2N)
77 (2P)
7 (2N)
62 (2P)
16 (2N)
36 (2P)
8 (2N)
61 (2P)
5 (2O)
20 (2P)
1 (2O)
19 (2P)
15 (2O)
28 (2P)
2 (2O)
58 (2P)
3 (2O)
65 (2P)
8 (2O)
64 (2P)
8 (2L)
75 (2P)
13 (2L)
18 (2P)
12 (2L)
2 (2P)
11 (2L)
1 (2P)
4 (2F)
29 (2P)
3 (2E)
7 (2P)

Cont. Next Page

F RELAY LOCATIONS


[Cowl Side J/B LH Inner Circuit]

Cont'd

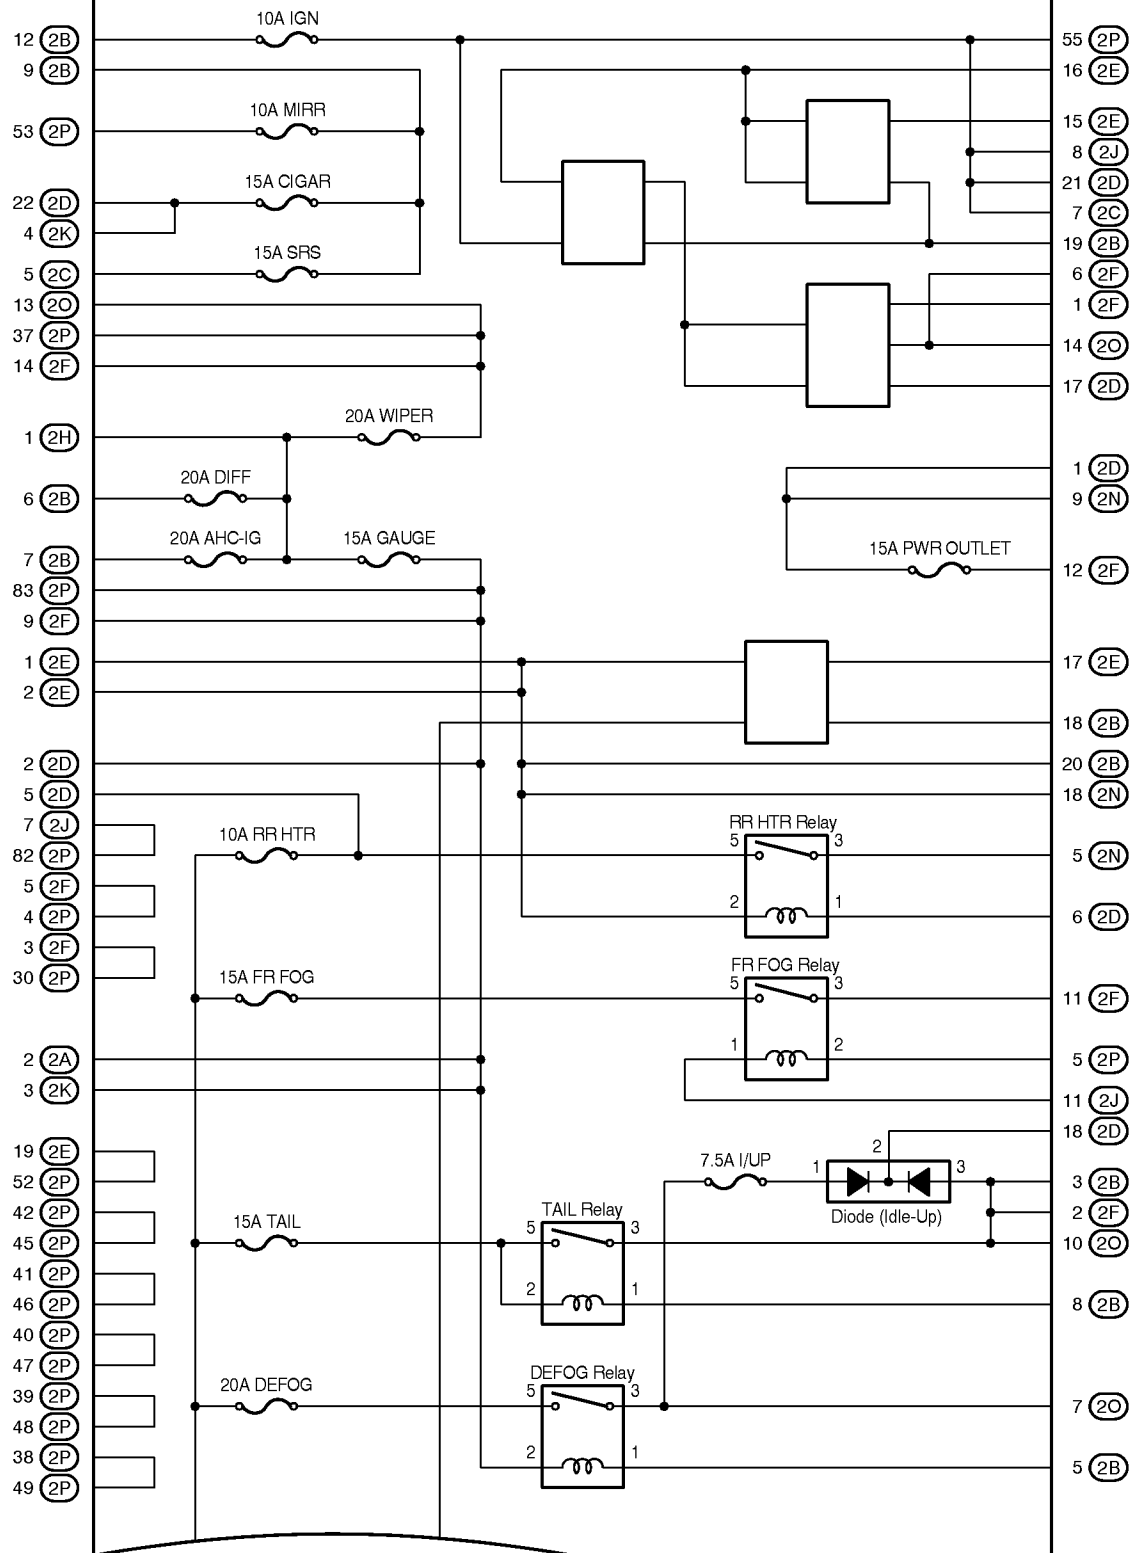

Cont. Next Page


Cont'd

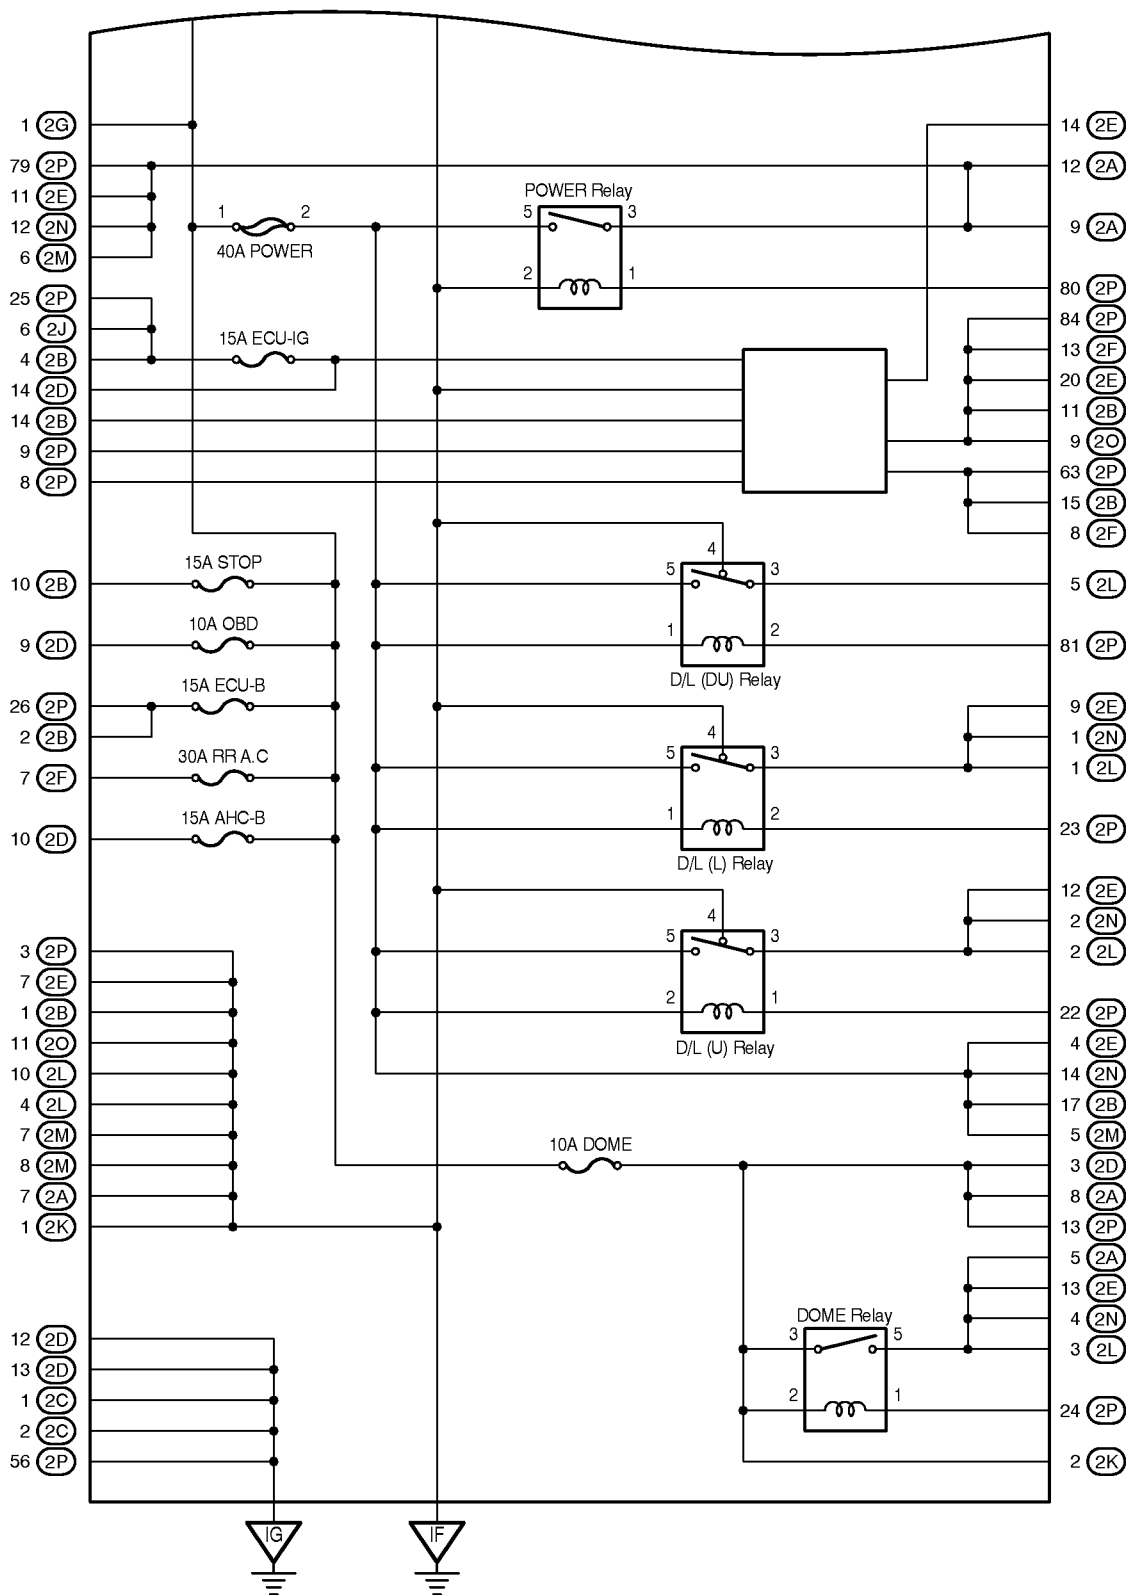


F RELAY LOCATIONS

○ : Cowl Side J/B RH


Right Kick Panel (See Page 20)

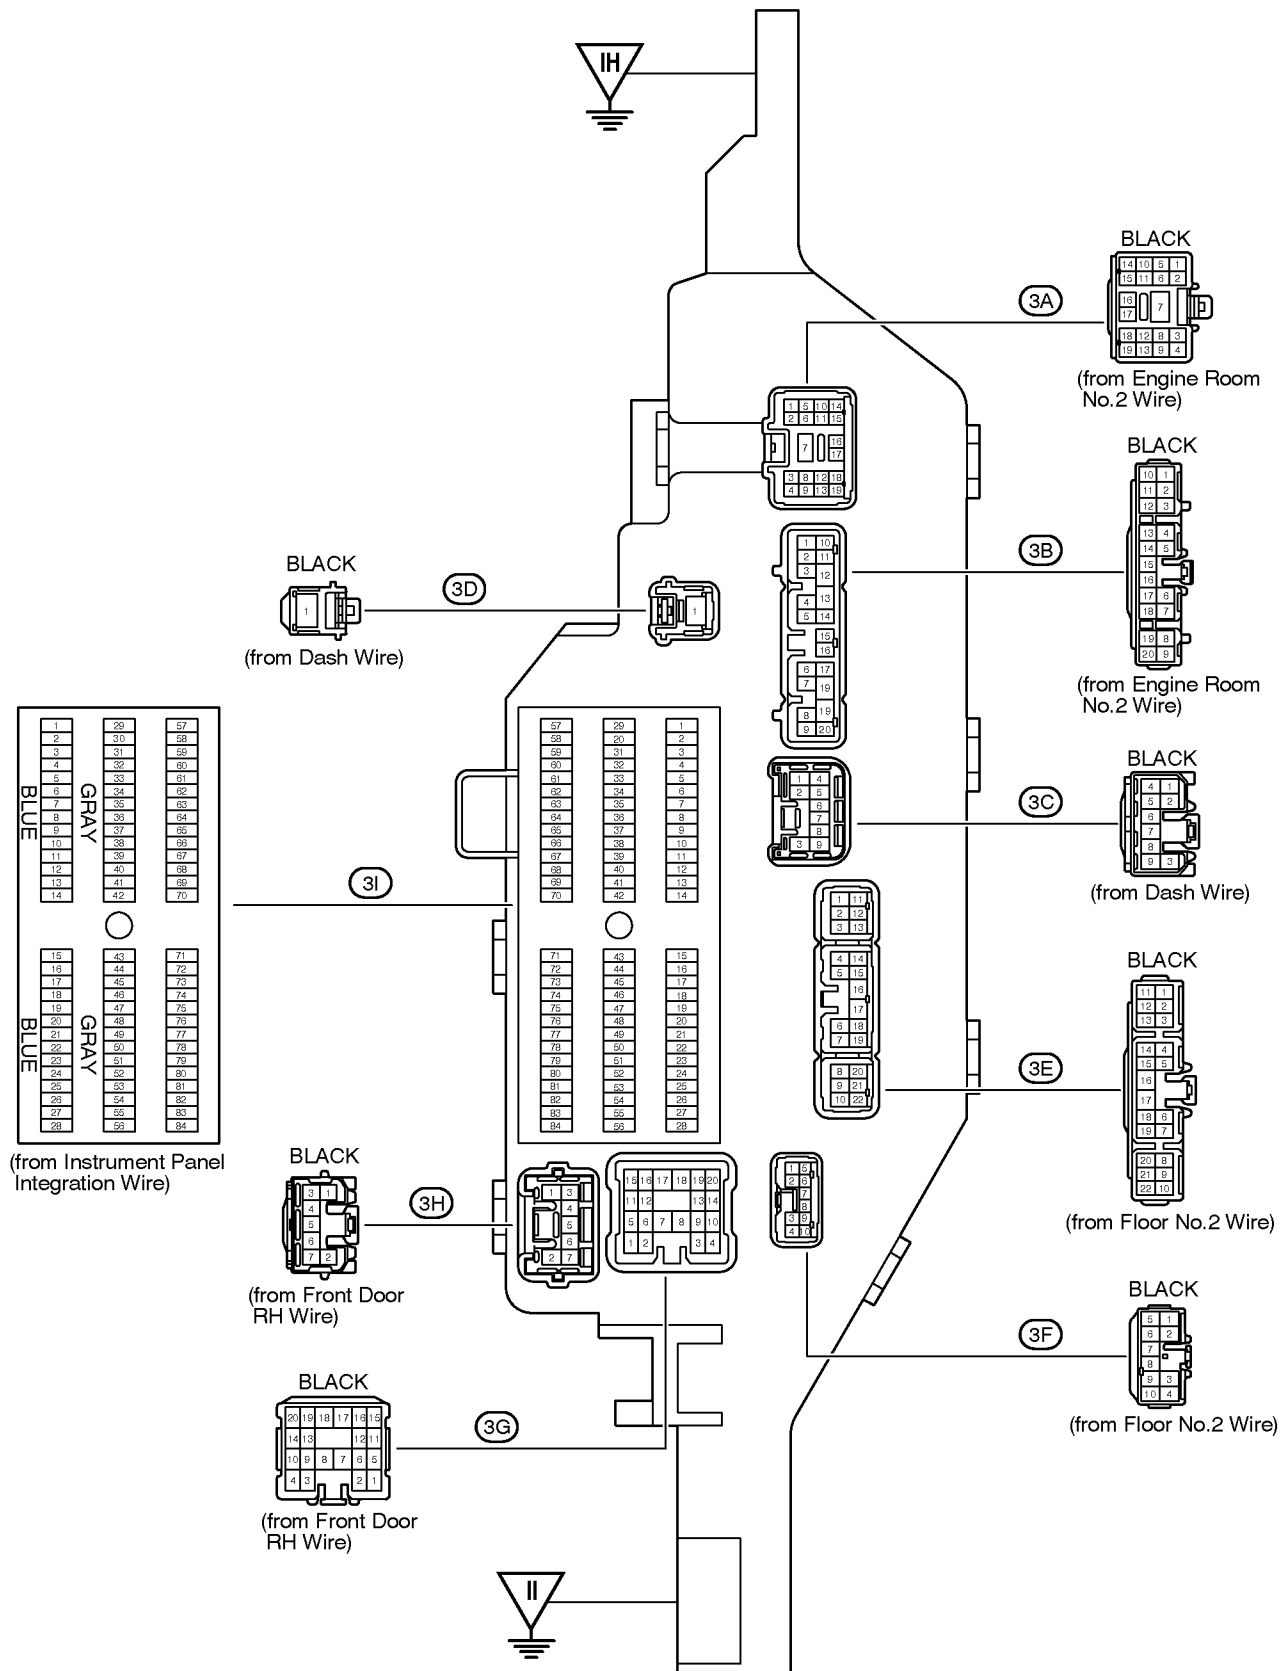

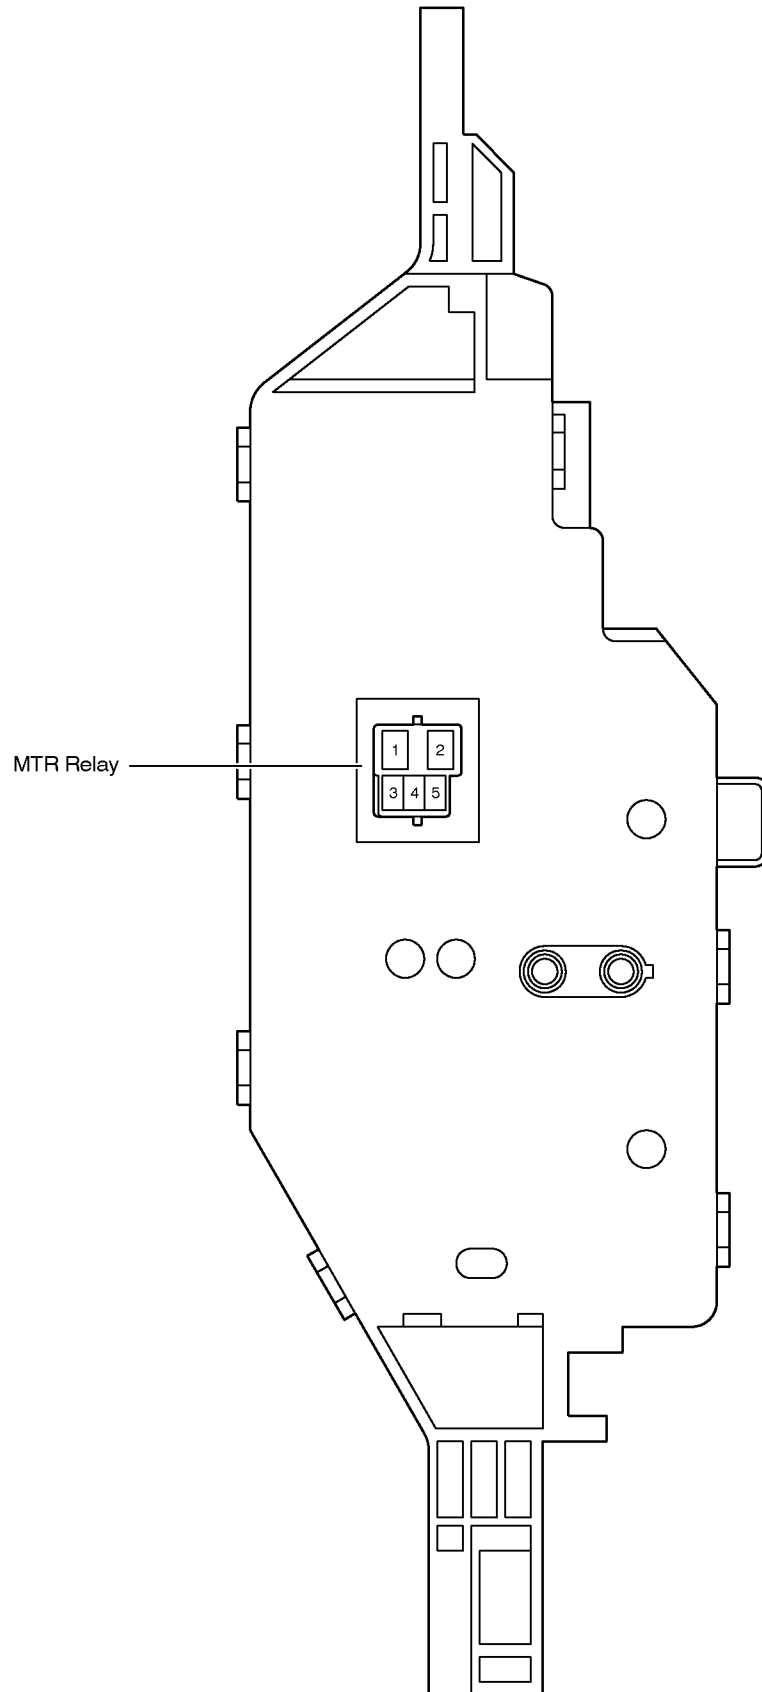


F RELAY LOCATIONS

[Cowl Side J/B RH Inner Circuit]

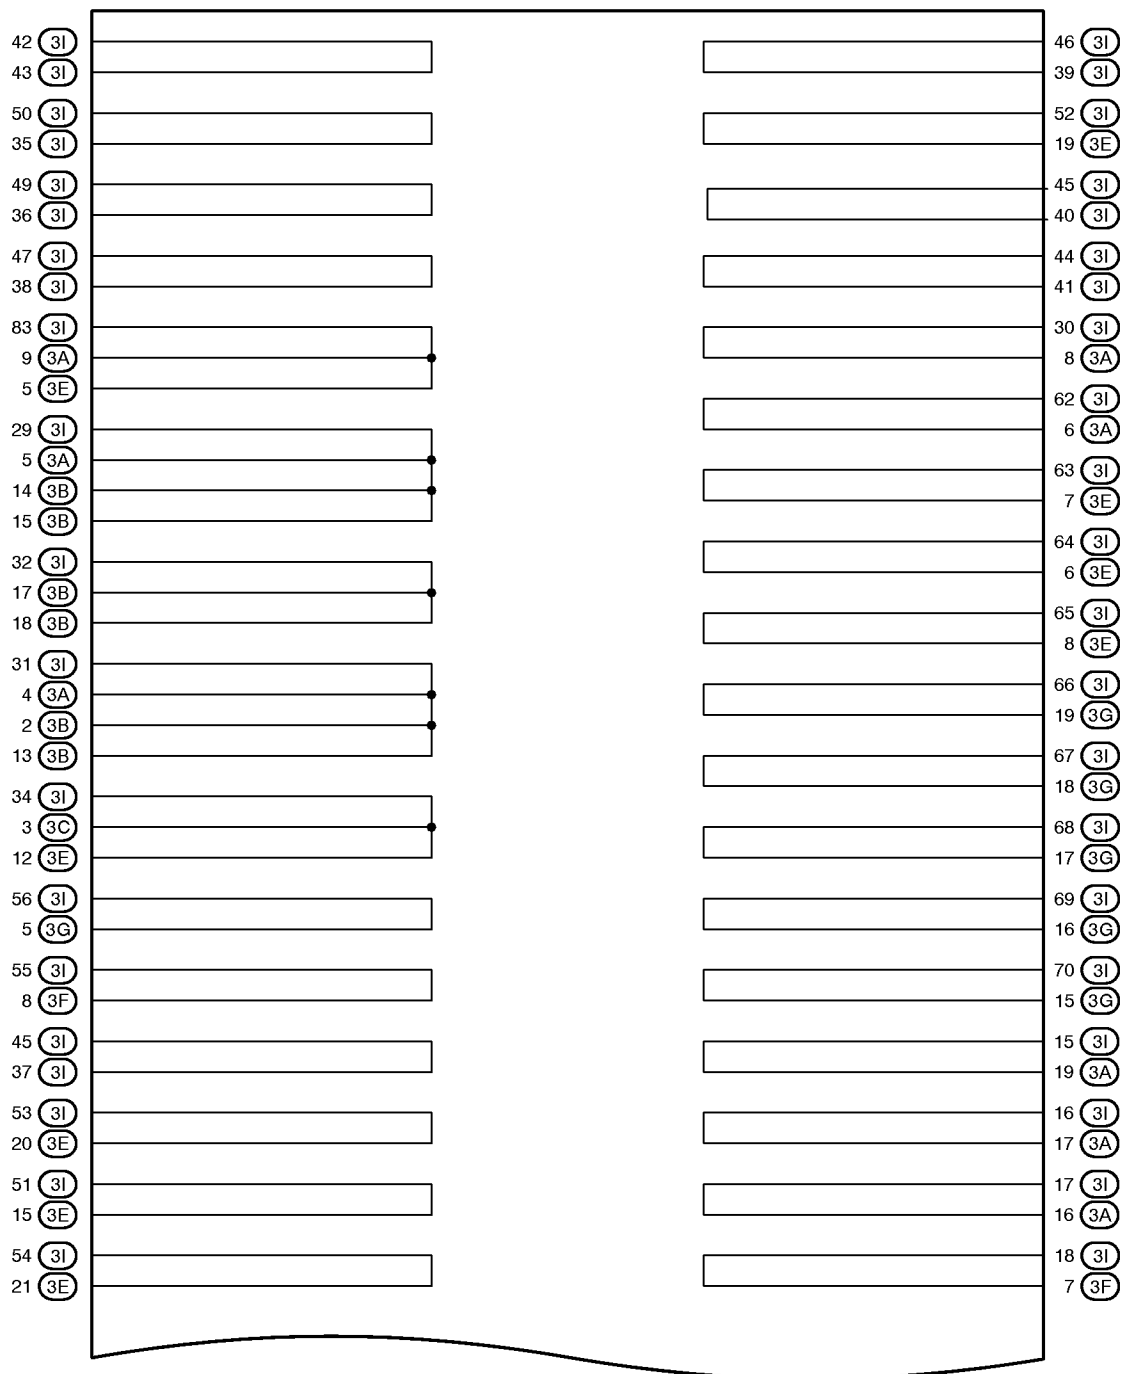

Cont. Next Page

Cont'd

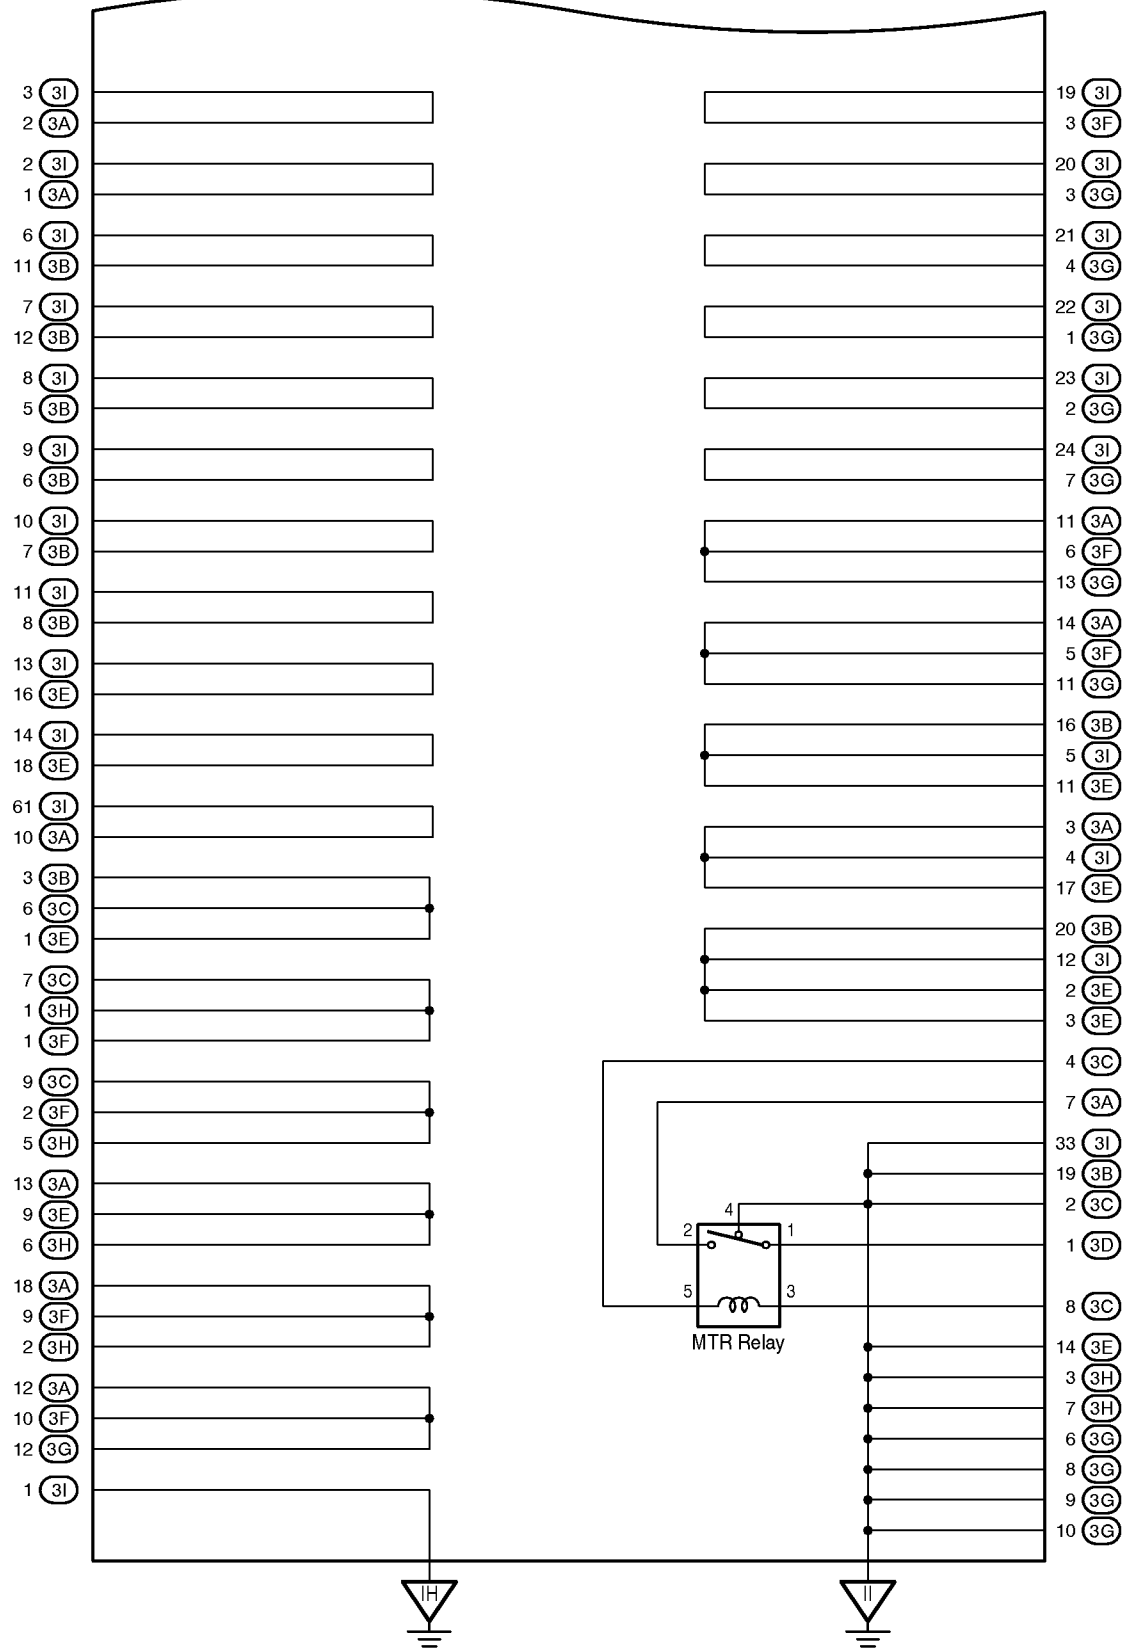

F RELAY LOCATIONS

Fusible Link Block

Near the Battery (See Page 20)

