



TAILLIGHT

FROM POWER SOURCE SYSTEM (SEE PAGE 64)

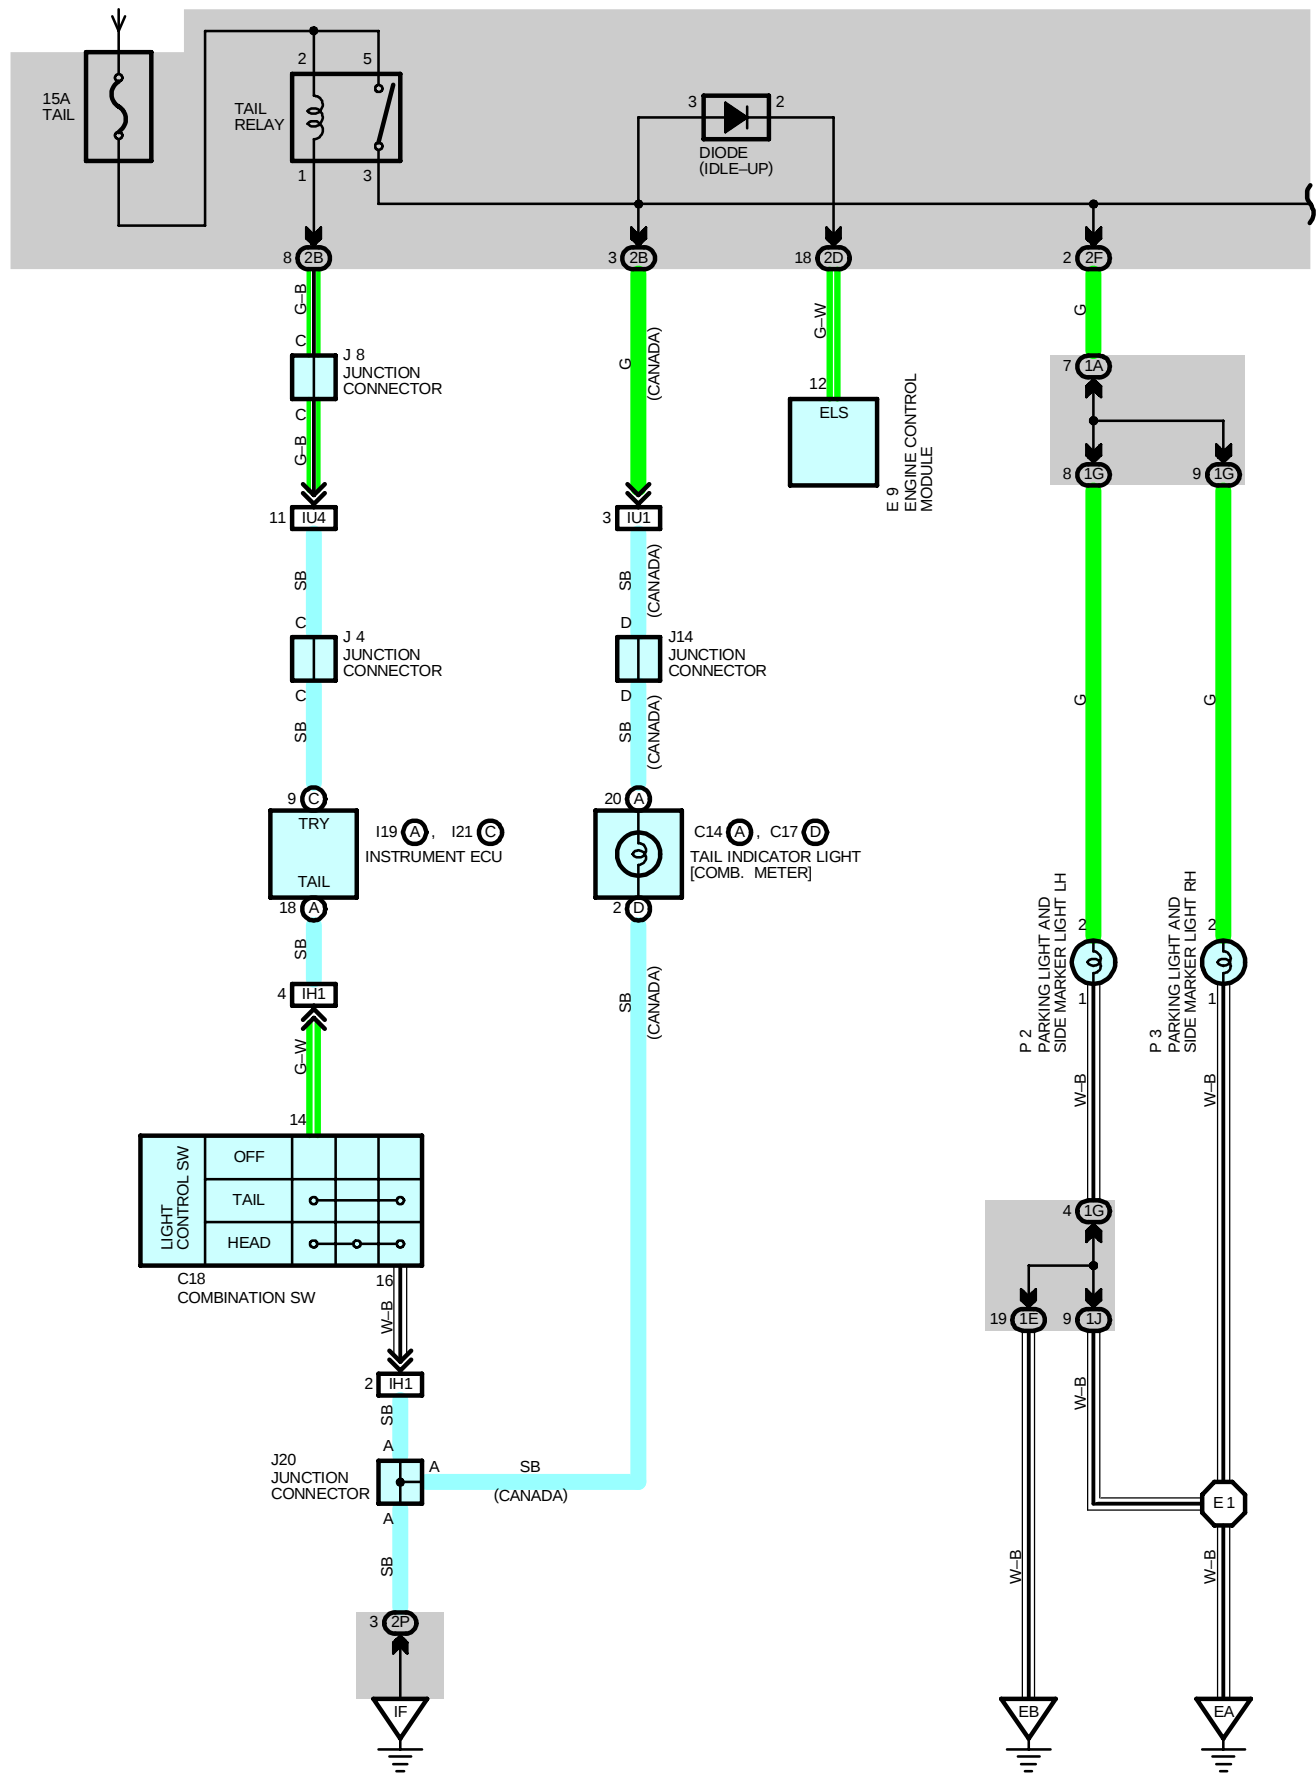

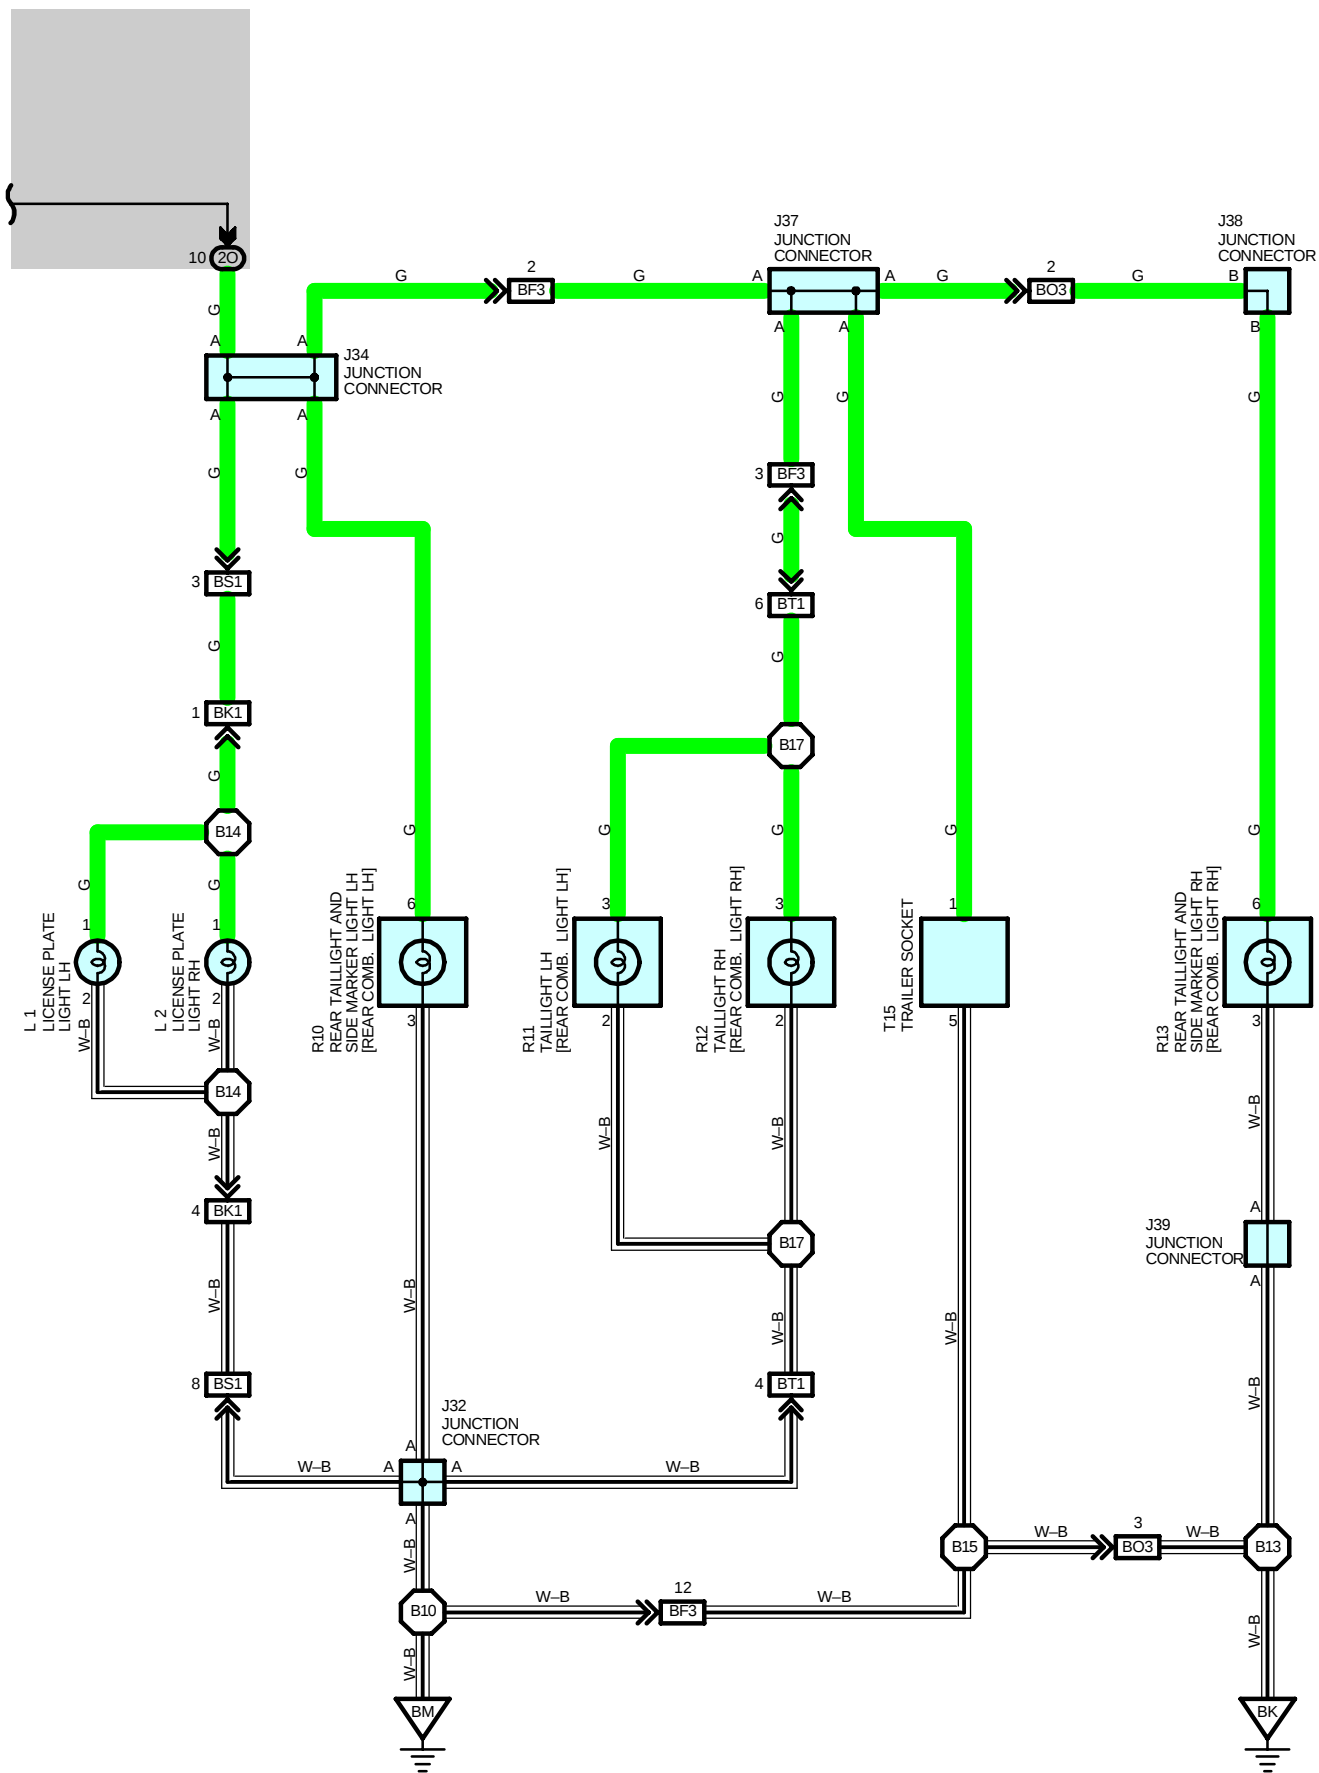

TAILLIGHT

SERVICE HINTS

TAIL RELAY

5-3 : Closed with light control SW at **TAIL** or **HEAD** position

C18 COMBINATION SW

14-16 : Closed with light control SW at **TAIL** or **HEAD** position

: PARTS LOCATION

Code		See Page	Code	See Page	Code	See Page
C14	A	40	J14	41	L2	43
C17	D	40	J20	41	P2	39
C18		40	J32	42	P3	39
E9		40	J34	42	R10	43
I19	A	40	J37	42	R11	43
I21	C	40	J38	42	R12	43
J4		41	J39	42	R13	43
J8		41	L1	43	T15	43

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	23	Engine Room No.2 Wire and Engine Room J/B (Engine Compartment Left)
1E		
1G	23	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1J		
2B	26	Dash Wire and Cowl Side J/B LH (Left Kick Panel)
2D		
2F	26	Engine Room No.2 Wire and Cowl Side J/B LH (Left Kick Panel)
2O	26	Floor Wire and Cowl Side J/B LH (Left Kick Panel)
2P	28	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	50	Instrument Panel Integration Wire and Column Wire (Near the Ignition SW)
IU1	52	Instrument Panel Integration Wire and Dash Wire (Behind the Glove Box)
IU4		
BF3	56	Floor No.3 Wire and Floor Wire (Left Rear Side Quarter Panel)
BK1	58	Pillar No.1 Wire and Back Door Upper Wire (Left Side of Back Door)
BO3	58	Floor No.2 Wire and Floor No.3 Wire (Right Side of Rear Floor Crossmember)
BS1	58	Luggage Room Wire and Floor Wire (Left Rear Side Quarter Panel)
BT1		

: GROUND POINTS

Code	See Page	Ground Points Location
EA	46	Front Right Side of Fender Apron
EB		

**: GROUND POINTS**

Code	See Page	Ground Points Location
IF	48	Set Bolt of Cowl Side J/B LH
BK	56	Front Side Under the Front Passenger's Seat
BM	56	Left Rear Side Quarter Panel

**: SPLICE POINTS**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	46	Engine Room Main Wire	B14	58	Back Door Upper Wire
B10	58	Floor Wire	B15	58	Floor No.3 Wire
B13	58	Floor No.2 Wire	B17	58	Back Door Lower Wire

